

TOTO L250C

TOTO L250C Wall-Mounted Washbasin (Medium Size) - White Instruction Manual

1. INTRODUCTION

This manual provides instructions for the TOTO L250C wall-mounted washbasin. Please read this manual thoroughly before installation and use to ensure proper function and longevity of the product. This washbasin is designed for wall-mounting and is a medium-sized unit, available in #NW1 White.

TOTO



壁掛洗面器L250C#NW1

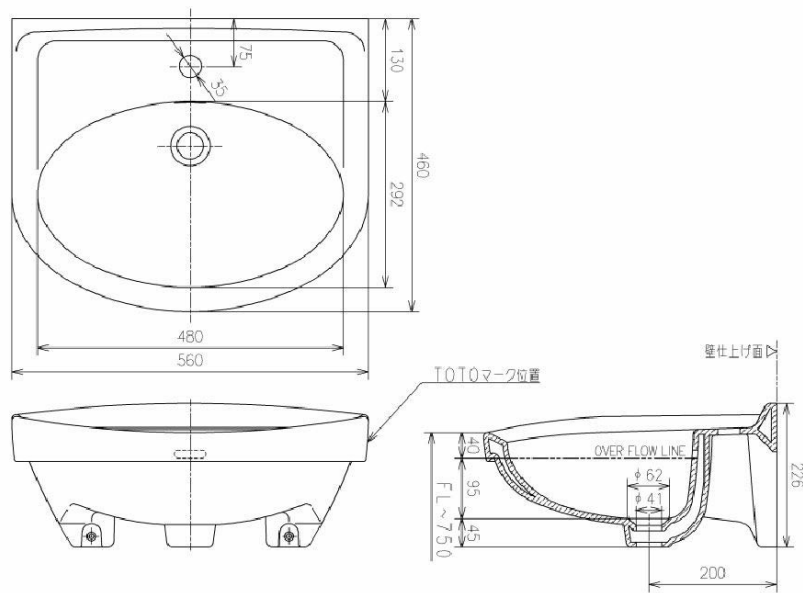


Image 1.1: Front view of the TOTO L250C Wall-Mounted Washbasin in White.

2. PRODUCT FEATURES

- Product Weight: 13.5 kg
- Package Weight: 14.5 kg
- Actual Capacity: 6.5 liters
- Wall-mounted design for space efficiency.
- Medium size for versatile application.

- Available in #NW1 White finish.

Note: #SR2 Pastel Pink and #NG2 White Gray are made-to-order products, with delivery taking approximately 2 weeks.

3. SETUP AND INSTALLATION

The TOTO L250C is a wall-mounted washbasin. Proper installation is crucial for safety and functionality. It is highly recommended that installation be performed by a qualified professional.

3.1 Pre-Installation Checks

- Verify that all components are present and undamaged.
- Ensure the wall structure is adequate to support the weight of the washbasin when filled with water.
- Confirm the model number, color, dimensions, and product specifications on the official TOTO manufacturer's website before proceeding with installation.

3.2 Installation Steps (General Guidelines)

1. Mark the desired mounting height and positions for the wall brackets or bolts.
2. Drill pilot holes and secure the mounting hardware to the wall according to the manufacturer's detailed instructions.
3. Carefully lift and attach the washbasin to the secured mounting hardware.
4. Connect the water supply lines and drain assembly. Ensure all connections are watertight.
5. Test for leaks and proper drainage.

For detailed, model-specific installation instructions, diagrams, and required tools, please refer to the official TOTO manufacturer's website or the installation guide provided with the product packaging.

4. OPERATING INSTRUCTIONS

The TOTO L250C washbasin is designed for standard personal hygiene use. Ensure the faucet (not included with the washbasin unit) is properly installed and connected to a water supply.

4.1 Basic Usage

- Turn on the faucet to dispense water for washing hands, face, or other personal hygiene needs.
- Adjust water temperature and flow as desired using the faucet controls.
- After use, turn off the faucet completely to prevent water waste and leaks.

4.2 Water Flow Considerations

If a faucet is included or purchased separately, please note that due to manufacturer's water flow testing, residual water may occasionally be present inside the faucet or washbasin upon delivery. This is a normal part of the quality assurance process and does not indicate a product defect or quality issue.

5. MAINTENANCE

Regular cleaning and proper maintenance will help preserve the appearance and functionality of your TOTO L250C washbasin.

5.1 Cleaning the Washbasin

- Use a soft cloth or sponge with mild, non-abrasive cleaning agents.
- Avoid using harsh chemicals, abrasive cleaners, scouring pads, or steel wool, as these can damage the surface finish.
- Rinse the washbasin thoroughly with clean water after cleaning to remove any cleaning agent residue.
- Wipe dry with a soft cloth to prevent water spots and maintain shine.

5.2 Drain Maintenance

- Periodically remove and clean the drain stopper to clear any accumulated hair or debris.
- If slow drainage occurs, use a plumbing-safe drain cleaner or consult a plumber.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your washbasin.

6.1 Water Leaks

- **Issue:** Water leaking from faucet connections.
Solution: Ensure all faucet connections are tightened properly. Check for worn washers or O-rings and replace if necessary.
- **Issue:** Water leaking from drain assembly.
Solution: Verify that the drain assembly is correctly installed and sealed. Check for cracks in the drain pipes or loose connections.

6.2 Slow Drainage

- **Issue:** Water drains slowly from the basin.
Solution: Remove the drain stopper and clear any hair or debris. If the problem persists, a clog may be further down the drainpipe, requiring a plumbing snake or professional assistance.

6.3 Residual Water in Faucet/Basin

- **Issue:** Small amounts of water are present in the faucet or basin upon initial unpacking.
Solution: This is normal. Faucets undergo water flow testing by the manufacturer, and residual water may remain. This does not affect product quality.

7. SPECIFICATIONS

Specification	Detail
Brand	TOTO
Model Number	L250C
Product Weight	14.5 kg
Color	#NW1 White
Mounting Type	Wall-Mount
Batteries Included	No
ASIN	B07B8D172W
First Available Date on Amazon.co.jp	March 5, 2018
Finish Type	Matte

8. WARRANTY AND SUPPORT

For specific warranty information, terms, and conditions related to the TOTO L250C washbasin, please refer to the official TOTO manufacturer's website or the warranty documentation included with your product.

Important Notice: Returns or exchanges are generally not accepted after product shipment. Please review the seller's return and exchange policy before placing your order.

If you require technical support or have questions not covered in this manual, please contact TOTO customer service or your authorized dealer.