

[Manuals.plus](#) /

› [Remax](#) /

› Remax RB-M22 Wired and Wireless Bluetooth Speaker User Manual

Remax RB-M22

Remax RB-M22 Wired and Wireless Bluetooth Speaker User Manual

Model: RB-M22

INTRODUCTION

Thank you for choosing the Remax RB-M22 Wired and Wireless Bluetooth Speaker. This portable speaker system offers versatile audio connectivity through both Bluetooth and a 3.5mm audio cable. Its unique magnetic design allows the two speaker units to be used together as a single unit or separated for a stereo experience. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new speaker.

PACKAGE CONTENTS

- Remax RB-M22 Bluetooth Speaker (2 magnetic units)
- USB Charging Cable
- 3.5mm Audio Cable
- User Manual



Image: The Remax RB-M22 speaker packaging, showing the product inside its retail box.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the charging port on each speaker unit and plug the other end into a USB power adapter (not included) or a computer's USB port. The charging indicator light will show charging status and turn off when fully charged. Each speaker unit has a 1000 mAh battery capacity.

2. Powering On/Off

To power on each speaker unit, press and hold the power button () located on the side of the unit until you hear an audible prompt or see the indicator light illuminate. To power off, press and hold the power button again until the speaker turns off.

3. Bluetooth Pairing

1. Ensure both speaker units are powered on and separated. They should automatically attempt to pair with each other for stereo mode.
2. On your audio device (smartphone, tablet, computer), enable Bluetooth.
3. Search for new Bluetooth devices. You should see "RB-M22" in the list of available devices.
4. Select "RB-M22" to connect. Once connected, you will hear a confirmation sound.
5. The speaker has a Bluetooth version 4.2 and a transmission distance of up to 10 meters.

4. Wired Connection (AUX Mode)

For devices without Bluetooth, or if you prefer a wired connection, use the supplied 3.5mm audio cable. Insert one end into the AUX port on either speaker unit and the other end into the headphone jack of your audio device. The speaker will automatically switch to AUX mode.



Image: The two Remax RB-M22 speaker units standing upright, showcasing their ability to separate for stereo sound.

OPERATING INSTRUCTIONS

1. Volume Control

Adjust the volume directly from your connected audio device. The speaker does not have independent volume controls.

2. Playback Control

Control music playback (play, pause, skip tracks) directly from your connected Bluetooth device or the audio source in AUX mode.

3. Magnetic Separation and Reconnection

The two speaker units are held together by magnets. Gently pull them apart to separate them for a wider stereo soundstage. To reconnect, simply bring the magnetic sides together until they snap into place. The speaker can be used as a single unit or as two separate units.



Image: A collage demonstrating various ways the Remax RB-M22 speaker can be used, including being held, used while relaxing, and placed on a flat surface.

MAINTENANCE

1. Cleaning

Wipe the speaker's exterior with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid getting moisture into any openings.

2. Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to about 50% every few months to maintain battery health.

3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use. Do not expose the speaker to temperatures above 60°C (140°F) as this can damage the battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.
No sound from speaker.	Volume is too low; Incorrect input mode; Device not connected.	Increase volume on your device; Ensure correct mode (Bluetooth/AUX); Reconnect device.
Cannot pair via Bluetooth.	Speaker not in pairing mode; Device Bluetooth off; Interference.	Ensure speaker is powered on and ready to pair; Turn Bluetooth on your device; Move closer to speaker; Forget previous pairings on your device and try again.

Problem	Possible Cause	Solution
Sound is distorted or intermittent.	Device too far from speaker; Low battery; Interference.	Move device closer to speaker (within 10m); Charge the speaker; Avoid obstacles between speaker and device.

SPECIFICATIONS

Feature	Detail
Model	RB-M22
Connectivity	Bluetooth 4.2, 3.5mm Audio Cable
Transmission Distance	Up to 10 meters
Speaker Impedance	4 ohm
Frequency Response	20-20000 Hz
Battery Capacity	1000 mAh (per unit)
Speaker Maximum Output Power	5 Watts
Audio Output Mode	Stereo
Product Dimensions	30 x 12 x 10 cm
Item Weight	1007 Grams (1.01 kg)
Material	Mixed Materials
Color	Black/Silver

WARRANTY AND SUPPORT

Remax products are manufactured to high quality standards. For any issues or support inquiries regarding your Remax RB-M22 speaker, please contact the retailer where you purchased the product or visit the official Remax website for customer service information. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question