#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- > DOMO /
- > DOMO DO705BL Soup Maker Instruction Manual

#### **DOMO DO705BL**

# DOMO DO705BL Soup Maker Instruction Manual

## 1. Introduction

Thank you for choosing the DOMO DO705BL Soup Maker. This appliance is designed to simplify your cooking process, allowing you to prepare a variety of soups, smoothies, and jams with ease. To ensure safe and efficient operation, please read this instruction manual thoroughly before first use and retain it for future reference.

The DOMO DO705BL features a 2-liter capacity and 6 pre-programmed functions, making it a versatile addition to any kitchen. Its powerful motor and specialized blade system can create both smooth and chunky textures.

# 2. SAFETY INSTRUCTIONS

Please observe the following safety precautions to prevent injury or damage to the appliance:

- Always ensure the appliance is unplugged from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the main unit (containing electrical components) in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils out of the jug during operation to prevent injury and damage to the blades.
- Exercise caution when handling the sharp blades. Always remove the blade assembly carefully.
- Ensure the lid is securely locked in place before starting any program. The appliance will not operate if the lid is not correctly positioned.
- Do not overfill the jug beyond the maximum fill line (2 liters) to prevent boiling over.
- This appliance operates at 240V. Ensure your power supply matches this requirement.
- Allow hot contents to cool before opening the lid or pouring. Steam can cause burns.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped. Contact authorized service personnel for repair.

## 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your DOMO DO705BL Soup Maker:

- Main Unit/Jug: Stainless steel body with a 2-liter capacity.
- Lid: Features the control panel and motor housing.
- Control Panel: LED display with 'SELECT' and 'START/STOP' buttons, and program indicator lights.
- Blade Assembly: Removable XL knife for blending and chopping.
- Handle: Ergonomically designed for safe pouring.
- Power Cord: For connecting to an electrical outlet.



Front view of the DOMO DO705BL Soup Maker, showcasing its stainless steel body and green and white top.



A close-up of the control panel featuring 'SELECT' and 'START/STOP' buttons, an LED display, and indicator lights for 'CHUNKY', 'SMOOTH', 'EXTRA SMOOTH', 'JUICE', 'JAM', and 'BLEND/CLEAN' programs.



A detailed view of the removable stainless steel blade assembly, showing its design for efficient blending.

# 4. SETUP

- 1. Unpacking: Carefully remove all packaging materials and ensure all components are present.
- 2. **Initial Cleaning:** Before first use, clean the jug interior, lid, and blade assembly according to the 'Cleaning and Maintenance' section.

- 3. **Placement:** Place the soup maker on a stable, flat, heat-resistant surface, away from the edge of the countertop.
- 4. Power Connection: Plug the power cord into a grounded electrical outlet (240V). The LED display will illuminate.

# 5. OPERATING INSTRUCTIONS

## **General Operation:**

- 1. **Add Ingredients:** Place your desired ingredients into the stainless steel jug. Ensure the total volume does not exceed the 2-liter maximum fill line. For best results, chop solid ingredients into small, uniform pieces.
- 2. **Secure Lid:** Place the lid onto the jug and twist it clockwise until it locks securely into position. The appliance will not start if the lid is not properly secured.
- 3. **Select Program:** Press the 'SELECT' button repeatedly to cycle through the available programs. The corresponding indicator light will illuminate on the control panel.
- 4. **Start Program:** Once your desired program is selected, press the 'START/STOP' button to begin. The LED display will show the remaining time for cooking programs.
- 5. **Completion:** The appliance will beep when the program is complete. Carefully unplug the unit and remove the lid.
- 6. Pouring: Use the handle to carefully pour the contents into serving bowls. Be aware of hot steam and liquid.

## **Available Programs:**

- **Chunky:** For soups with larger pieces of vegetables or other ingredients. The appliance will heat and blend intermittently to maintain texture.
- Smooth: For creamy, pureed soups. The appliance will heat and blend thoroughly until smooth.
- Extra Smooth: Provides an even finer, silkier texture for soups, blending for a longer duration.
- Juice: For preparing fresh juices or cold smoothies. This program primarily blends without heating.
- Jam: Specifically designed for cooking and blending fruits to make homemade jams.
- Blend/Clean: A versatile program for quick blending tasks or for assisting in the cleaning process.

Most soup programs have an approximate autonomy of 20 minutes. The included recipe book provides guidance on ingredient quantities and program selection for various dishes.



A hand placing chopped vegetables, including pumpkin, carrots, and zucchini, into the stainless steel jug of the DOMO DO705BL Soup Maker.



A hand pouring smooth, orange soup from the DOMO DO705BL Soup Maker's jug into a white bowl, with bread and carrots in the background.



The DOMO DO705BL Soup Maker positioned on a kitchen counter, surrounded by bowls of soup, jam, and a smoothie, demonstrating its versatility.

# 6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your soup maker.

- 1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool down completely before cleaning.
- 2. **Empty Jug:** Empty any remaining contents from the jug.
- 3. **Blade Cleaning:** Carefully remove the blade assembly. Wash the blade under running water using a brush to remove food residue. Exercise extreme caution due to sharp edges.
- 4. **Jug Interior**: Add a small amount of water and a drop of dish soap to the jug. You can use the 'Blend/Clean' program for a short cycle to help dislodge food. Then, scrub the interior with a non-abrasive sponge. Rinse thoroughly.
- 5. **Jug Exterior:** Wipe the exterior of the stainless steel jug with a damp cloth. Do not immerse the jug's base in water.
- 6. Lid Cleaning: Wipe the lid, including the control panel, with a damp cloth. Do not immerse the lid in water.
- 7. **Drying:** Ensure all parts are thoroughly dry before reassembling or storing the appliance.
- 8. Storage: Store the soup maker in a clean, dry place.

# 7. TROUBLESHOOTING

If you encounter issues with your DOMO DO705BL Soup Maker, refer to the following common problems and solutions:

### • Appliance does not start:

- Ensure the power cord is securely plugged into a working electrical outlet.
- Verify that the lid is correctly placed and locked onto the jug. The safety mechanism prevents operation if the lid is not secure.

#### · Contents are not blending properly:

- Ensure ingredients are chopped into appropriate sizes for the selected program.
- · Check that the liquid level is sufficient for blending.
- The blade assembly might be obstructed. Unplug, remove the lid, and carefully check for blockages.

#### · Soup boils over:

• Do not exceed the maximum fill line (2 liters) indicated on the jug.

## • Error message on LED display:

 Unplug the appliance, wait a few minutes, and then plug it back in. If the error persists, contact customer support.

For issues not covered here, please contact DOMO customer support.

# 8. SPECIFICATIONS

Feature	Specification
Brand	DOMO
Model Number	DO705BL
Capacity	2 Liters
Power	1000 Watts
Voltage	240.0 V
Material	Stainless Steel (Jug), Metal (Blade)
Color	Inox (Stainless Steel)
Dimensions (L x W x H)	23 x 23 x 37 cm
Item Weight	2.43 Kilograms
Number of Knives	2 (removable)
Power Cord Length	105 cm
Special Feature	Programmable
Autonomy (Soup Programs)	Approx. 20 minutes

# 9. WARRANTY AND SUPPORT

This DOMO DO705BL Soup Maker is covered by a manufacturer's warranty. Please refer to the warranty card

included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or any questions regarding the operation or maintenance of your appliance, please contact DOMO customer support. Keep your proof of purchase handy when contacting support.

#### Related Documents - DO705BL



#### DOMO DO716BL Soup Maker User Manual and Instructions

Comprehensive user manual for the DOMO DO716BL soup maker, providing detailed instructions, safety guidelines, program descriptions, and troubleshooting tips for optimal use.



#### DOMO DO716BL Soup Maker User Manual

Comprehensive user manual for the DOMO DO716BL soup maker, covering setup, operation, safety instructions, troubleshooting, and maintenance.



## DOMO DO705BL Soepmaker Handleiding en Gebruiksinstructies

Complete handleiding voor de DOMO DO705BL soepmaker. Vind instructies, veiligheidsvoorschriften, programma-informatie, onderhoudstips en veelgestelde vragen voor uw soepmaker.



#### DOMO DO498BL Soup Maker User Manual and Instructions

Comprehensive user manual and instructions for the DOMO DO498BL soup maker, covering operation, safety, programs, troubleshooting, and cleaning. Available in multiple languages.



## **DOMO DO726BL Soup Genius Handleiding**

Ontdek de DOMO DO726BL Soup Genius soepmaker. Deze handleiding biedt essentiële informatie over veilig gebruik, reiniging, onderhoud en probleemoplossing voor uw keukenapparaat.



## DOMO DO752BL Rechargeable Blender User Manual

User manual for the DOMO DO752BL Rechargeable Blender, providing instructions on operation, safety, cleaning, and troubleshooting for optimal use.