

[Manuals.plus](#) /

› [SpyCentre Security](#) /

› Zetta Max Swivel Hidden Security Camera User Manual

## SpyCentre Security Zetta Max Swivel

# Zetta Max Swivel Hidden Security Camera

## USER MANUAL

### Introduction

---

Thank you for choosing the Zetta Max Swivel Hidden Security Camera. This compact and versatile device is designed to provide discreet surveillance with its unique 180-degree rotatable lens, 720P high-definition video recording, and advanced motion detection capabilities. This manual will guide you through the setup, operation, and maintenance of your new security camera, ensuring optimal performance and peace of mind.

### Package Contents

---

- 1 x Zetta Max Swivel Hidden Security Camera
- 1 x USB Cable
- 1 x User Manual (this document)
- 1 x 5V DC Adapter

### Product Overview

---

Familiarize yourself with the components of your Zetta Max Swivel camera:



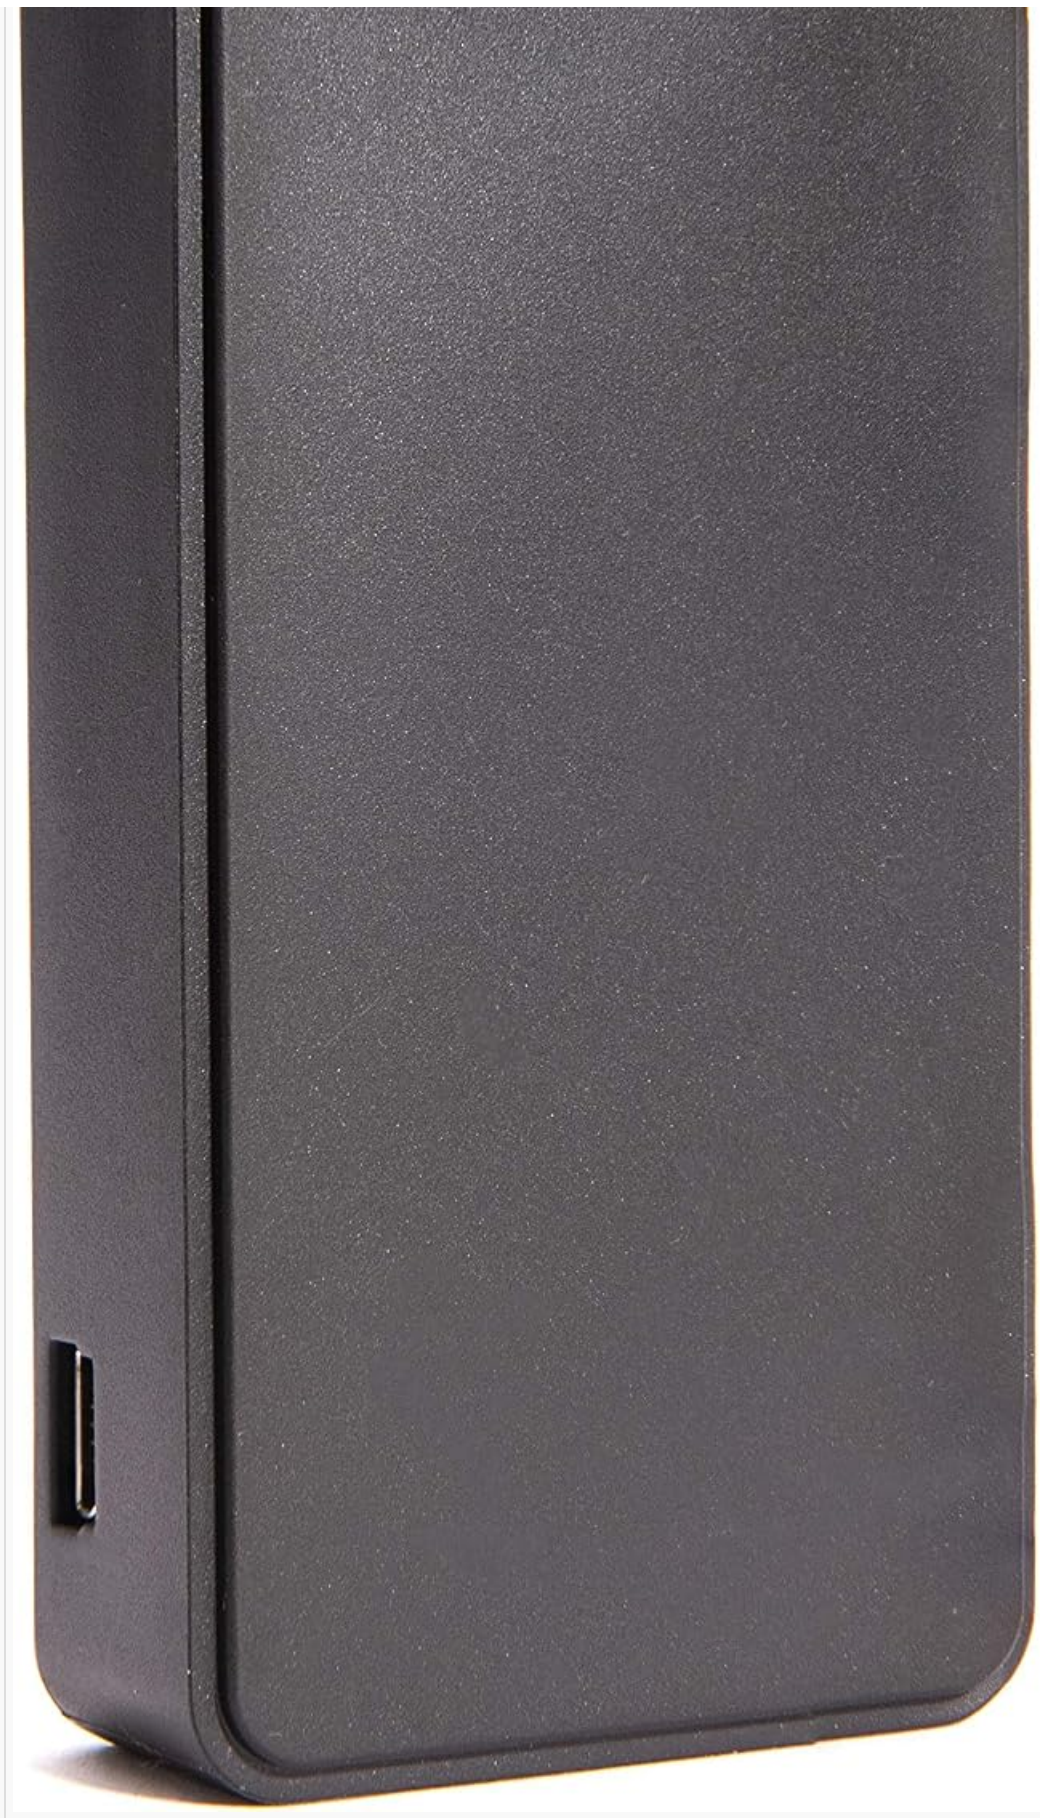


Figure 1: Front view of the Zetta Max Swivel Hidden Security Camera, showing its compact, rectangular design and the swivel lens at the top.



Figure 2: Side view of the camera, highlighting the Micro SD Card Slot, LED Indicator, and control buttons for Continuous Record Mode, Motion Record, Custom Mode, and On/Off switch.



Figure 3: Back view of the camera, showing the Zetta branding, input voltage information, and the RESET button.



Figure 4: Close-up view of the USB Port on the side of the camera, used for charging and data transfer.

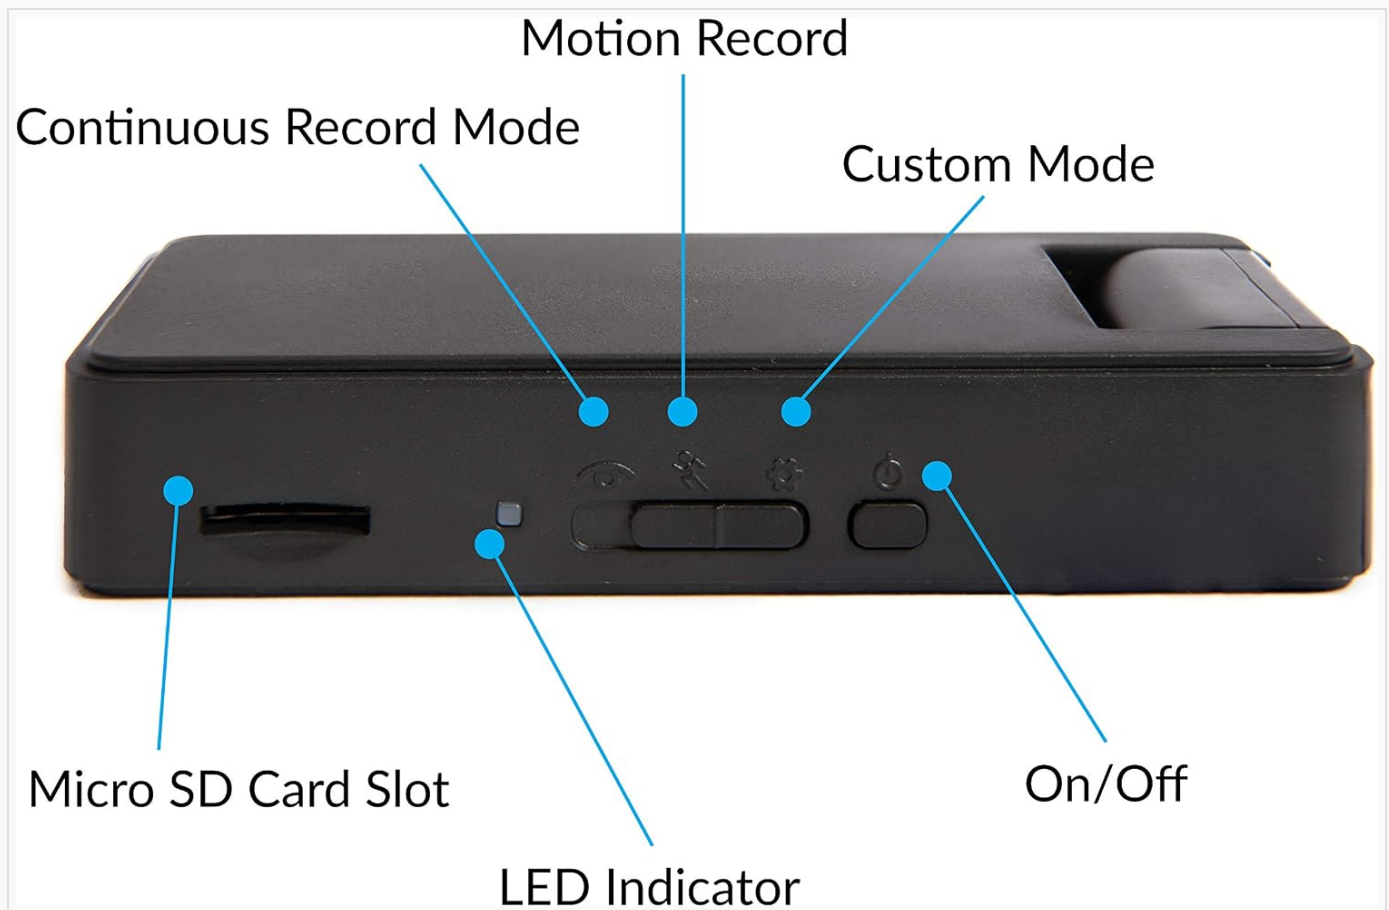


Figure 5: Detailed view of the camera's side controls, clearly labeling the Micro SD Card Slot, LED Indicator, Continuous Record Mode button, Motion Record button, Custom Mode button, and On/Off switch.

### Key Components:

- **Swivel Lens:** The 180-degree rotatable lens allows for flexible viewing angles, eliminating blind spots.
- **Micro SD Card Slot:** Supports up to a 64GB SD card for storing recorded video.
- **USB Port:** Used for charging the device and connecting to a computer for data transfer.
- **LED Indicator:** Provides status feedback on the camera's operation.
- **Control Buttons:** Buttons for selecting recording modes (Continuous, Motion, Custom) and an On/Off switch.
- **RESET Button:** Located on the back, used to reset the device if needed.

## Setup

---

1. **Charge the Camera:** Before first use, fully charge the camera using the provided USB cable and 5V DC adapter. Connect the USB cable to the camera's USB port and the adapter to a power outlet. The LED indicator will show charging status.
2. **Insert Micro SD Card:** Open the Micro SD card slot cover and carefully insert a compatible Micro SD card (up to 64GB, not included) into the slot until it clicks into place. Ensure the card is formatted to FAT32 for optimal performance.
3. **Set Date and Time (Optional but Recommended):** The camera supports date and time stamping for recorded video. To set this, connect the camera to a computer via the USB cable. Access the camera's storage and locate the configuration file (often named 'settings.txt' or similar). Edit this file to set the current date and time according to the instructions within the file or the Zetta software widget.
4. **Configure Settings (Zetta Software Widget):** For advanced settings like scheduled recording, vibration triggered recording sensitivity, and day/night modes, connect the camera to a computer. The Zetta software widget (usually found on the camera's internal storage when connected to a PC) allows for quick and easy adjustment of these parameters.

## Operating the Camera

---

1. **Power On/Off:** Use the On/Off switch on the side of the camera to power the device on or off. The LED indicator will illuminate to confirm power status.
2. **Select Recording Mode:** Use the control buttons to select your desired recording mode:
  - **Continuous Record Mode:** Records video continuously until the battery runs out or the SD card is full.
  - **Motion Record Mode:** Records only when motion is detected, conserving battery life and storage space.
  - **Custom Mode:** Allows for advanced configurations set via the Zetta software widget, such as scheduled recording or vibration-triggered recording.
3. **Adjust Lens Angle:** Manually swivel the camera lens up to 180 degrees to achieve the desired viewing angle for your surveillance area.
4. **Day/Night/Auto Mode:** Set the camera to "day mode" for recording in adequate lighting, "night mode" if not, or "auto" if lighting conditions will change throughout the recording. This setting is typically adjusted via the Zetta software widget.
5. **Viewing Recordings:** To view recorded videos, power off the camera and connect it to a Mac or PC using the USB cable. The camera will appear as a removable storage device. You can then access and play the video files using standard media players like Windows Media Player, VLC, or iTunes. No special software is needed for playback.

### Product Demonstration Video

Your browser does not support the video tag.

Video: An overview of the Zetta Max Swivel Hidden Security Camera, demonstrating its features including the 180-degree rotatable lens and its discreet design for home surveillance.

## Maintenance

---

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the camera regularly, especially if it will be stored for an extended period. The built-in rechargeable battery offers approximately 10 hours of continuous use.
- **Cleaning:** Use a soft, dry cloth to clean the camera's exterior. Do not use liquid cleaners or abrasive materials. Keep the lens free from dust and smudges for clear video quality.

- **SD Card Management:** Regularly back up important recordings from your Micro SD card to a computer. Format the SD card periodically (e.g., once a month) to maintain optimal recording performance and prevent data corruption.
- **Firmware Updates:** Check the manufacturer's website periodically for any available firmware updates to ensure your camera has the latest features and bug fixes.

## Troubleshooting

| Problem                          | Possible Cause                             | Solution                                                                                                                |
|----------------------------------|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Camera not turning on.           | Battery is depleted.                       | Charge the camera fully using the provided adapter and USB cable.                                                       |
| Camera not recording.            | SD card is full or not inserted correctly. | Check SD card insertion. Back up and format the SD card, or replace it with an empty one.                               |
| Poor video quality.              | Lens is dirty or lighting is insufficient. | Clean the lens with a soft cloth. Ensure adequate lighting or switch to 'night mode' if applicable.                     |
| Camera not detected by computer. | Faulty USB cable or port.                  | Try a different USB cable or a different USB port on your computer. Ensure the camera is powered off before connecting. |
| Settings not saving.             | Incorrect use of Zetta software widget.    | Ensure you are saving changes correctly within the Zetta software widget and disconnecting the camera safely.           |

## Specifications

| Feature                | Detail                                                                             |
|------------------------|------------------------------------------------------------------------------------|
| Model Name             | Zetta Max Swivel                                                                   |
| Video Resolution       | 720P (1280x960)                                                                    |
| Field of View          | 160 degrees                                                                        |
| Lens Rotation          | 180 degrees                                                                        |
| Storage                | Supports up to 64GB Micro SD card                                                  |
| Battery Life           | Approx. 10 hours continuous recording; up to 90 days standby (vibration triggered) |
| Power Source           | Built-in rechargeable battery, 5V DC Adapter                                       |
| Connectivity           | USB for data transfer, Wi-Fi for configuration (via software widget)               |
| Special Features       | Motion Sensor, Date and Time Stamping, Day/Night/Auto Mode                         |
| Dimensions (L x W x H) | 10.16 x 5.08 x 0.13 cm (approx. 4 x 2 x 0.05 inches)                               |
| Weight                 | 65.1 g (approx. 2.3 oz)                                                            |
| Color                  | Black                                                                              |
| Usage Environment      | Indoor (primarily for home surveillance)                                           |

## Warranty and Support

Your Zetta Max Swivel Hidden Security Camera comes with a **1 Year Manufacturer's Warranty**.  
For free lifetime technical support, please contact SpyCentre Security:

- **Phone:** 1-800-292-7748
- **Hours:** Monday through Saturday, 10 AM to 6 PM CST

Please have your product model and purchase information ready when contacting support.

© 2024 SpyCentre Security. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question