

[Manuals.plus](#) /

› [TIMEX](#) /

› TIMEX Classics Analog Watch TW0TG6504 Instruction Manual

TIMEX TW0TG6504

TIMEX Classics Analog Watch TW0TG6504 Instruction Manual

Model: TW0TG6504

INTRODUCTION

Thank you for choosing the TIMEX Classics Analog Watch, Model TW0TG6504. This manual provides essential information for the proper setup, operation, maintenance, and care of your new timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.





Image: Front view of the TIMEX Classics Analog Watch with a black dial and gold-tone stainless steel band.

Key Features:

- **Classic Design:** Features a 39mm black dial and brass case, offering a timeless aesthetic.
- **Durable Construction:** Crafted with a brass case and water resistant up to 30 meters.
- **Accurate Timekeeping:** Powered by a reliable Quartz movement for precise time.
- **Comfortable Fit:** Gold stainless steel band with a 20mm strap width designed for daily wear.
- **Low Maintenance:** Designed for ease of care and backed by a one-year manufacturing warranty.

SETUP

Before wearing your watch, you may need to set the time and date. The watch crown is located on the right side of the watch case.





Image: Side view of the watch, highlighting the crown used for setting time and date.

1. Setting the Time:

- Pull the crown out to position 2 (farthest out).
- Turn the crown clockwise or counter-clockwise to move the hands until the correct time is displayed. Ensure you differentiate between AM and PM if setting the date.
- Once the time is set, push the crown back into position 0 (normal operating position).

2. Setting the Date:

- Pull the crown out to position 1 (first click).
- Turn the crown clockwise or counter-clockwise to adjust the date.
- Once the date is set, push the crown back into position 0.
- *Note:* Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.

3. Adjusting the Band:

The stainless steel bracelet can be adjusted for a comfortable fit. This typically involves removing or adding links. It is recommended to have this done by a professional jeweler or watch repair service to prevent damage to the band or clasp.

OPERATING INSTRUCTIONS

Your TIMEX Classics Analog Watch is designed for daily wear and reliable performance.

Water Resistance:

This watch is water resistant up to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, diving, or prolonged water activities. Always ensure the crown is fully pushed in to maintain water resistance.



Image: An icon indicating the watch's water resistance feature.

General Use:

- Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Keep the watch away from strong magnetic fields, as this can affect the accuracy of the quartz movement.
- Protect the watch from impacts and shocks.

MAINTENANCE

Proper care will help maintain the appearance and function of your TIMEX watch.



Image: The watch packaging, a black cylindrical box with the TIMEX logo.

- **Cleaning:** Wipe the watch case and band regularly with a soft, dry cloth to remove dust and dirt. For the stainless steel band, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Your watch is powered by a Lithium Metal battery. When the watch stops running, it indicates the battery needs replacement. It is recommended to have the battery replaced by an authorized TIMEX service center or a qualified watch technician to ensure proper sealing and maintain water resistance.
- **Storage:** When not in use for extended periods, store your watch in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch is not running.	Battery is depleted.	Replace the battery at an authorized service center.
Time is inaccurate.	Watch hands were accidentally moved; exposure to strong magnetic fields.	Reset the time. Keep the watch away from magnets. If problem persists, seek service.
Date is not changing correctly.	Date was set during restricted hours (9 PM - 3 AM); incorrect setting.	Reset the date during non-restricted hours. Ensure the time is set correctly (AM/PM).
Moisture under the crystal.	Crown not fully pushed in; exposure to water beyond resistance limits.	Immediately take the watch to an authorized service center to prevent internal damage.

SPECIFICATIONS

Detailed specifications for your TIMEX Classics Analog Watch Model TW0TG6504:

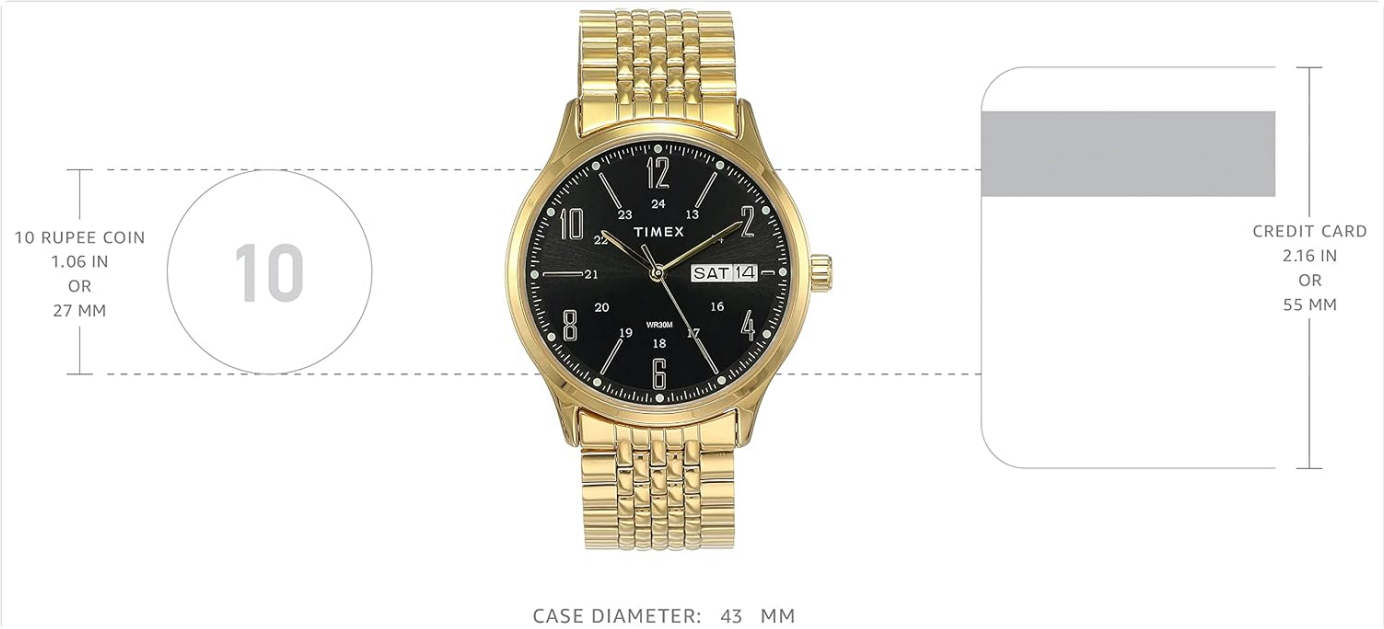


Image: Diagram illustrating the watch's dimensions, comparing it to a 10 Rupee coin and a credit card.

Model Number	TW0TG6504
Display Type	Analog
Movement Type	Quartz
Case Diameter	39 Millimetres
Case Material	Brass
Band Material Type	Stainless Steel
Band Width	20 Millimetres
Dial Colour	Black
Band Colour	Gold
Water Resistance Depth	30 Metres (3 ATM)

Item Weight	85 Grams
Battery Type	1 Lithium Metal battery (included)
Product Dimensions	3.6 x 3.5 x 1.5 cm

WARRANTY AND SUPPORT

Your TIMEX Classics Analog Watch comes with a manufacturer's warranty and dedicated customer support.

Warranty Information:

TIMEX Group India Limited warrants its TIMEX brand watches (purchased only from TIMEX authorized sellers) against all manufacturing defects for a period of **one (1) year** from the date of retail purchase.

How to Avail Warranty Service:

- To claim your watch service, produce either the original bill copy/invoice or warranty card at any authorized TIMEX service center.

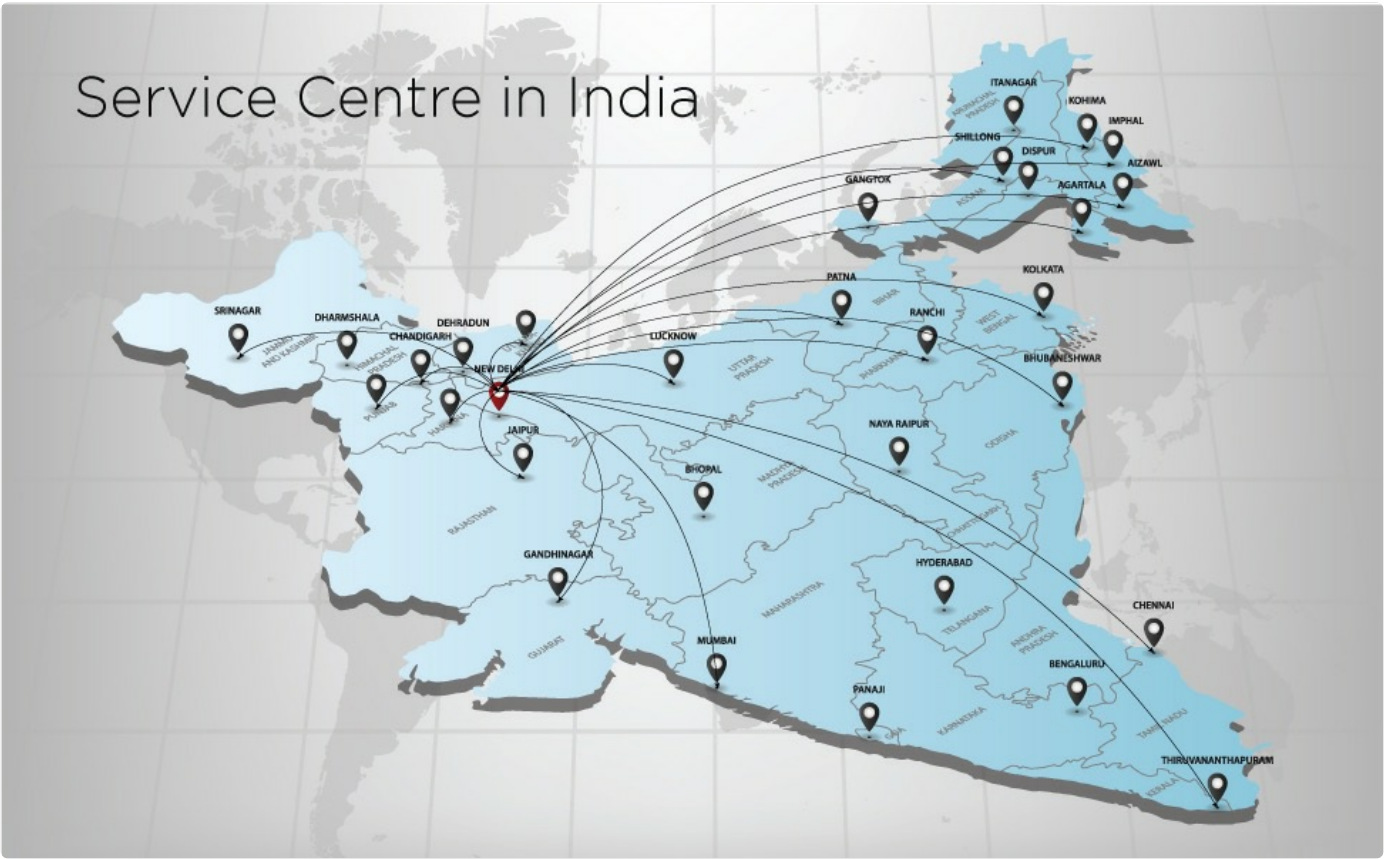


Image: A sign indicating a TIMEX Service Centre, representing authorized repair and support.

Customer Support:

For any service-related inquiries and feedback, please contact TIMEX India:

- Toll-Free Number:** 1800 419 2727 (Monday to Saturday, 10:00 AM to 7:00 PM, except government holidays)
- Email:** custservice@timexindia.com, feedback@timexindia.com
- Manufacturer Address:** Plot No. 10, Industrial Area- Katha, Bhatoli Kalan, Baddi, Himachal Pradesh – 173205, Timex Group India Limited

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question