

[manuals.plus](#) /› [Hama](#) /› **Hama 4601 Multi 4in1 Table Tripod Instruction Manual**

Hama 4601

Hama 4601 Multi 4in1 Table Tripod Instruction Manual

Model: 4601

1. INTRODUCTION

Thank you for choosing the Hama 4601 Multi 4in1 Table Tripod. This versatile accessory is designed to enhance your photography and videography experience with smartphones, GoPro cameras, and digital cameras. It functions as a tabletop tripod, handheld grip, selfie stick, and offers specific mounts for various devices. Please read this manual carefully to ensure proper setup and operation.



Image 1.1: The Hama 4601 Multi 4in1 Table Tripod in its compact tabletop configuration, featuring black legs with red tips and a silver telescopic pole.

2. PRODUCT OVERVIEW AND COMPONENTS

The Hama 4601 Multi 4in1 Table Tripod combines four functionalities into one compact device:

- **Tabletop Tripod:** Provides stable support for cameras and smartphones on flat surfaces.
- **Handheld Grip:** Offers a secure and comfortable grip for mobile shooting.
- **Selfie Stick:** Extends for wider angles and group shots.
- **GoPro Mount:** Dedicated attachment for GoPro action cameras.

Key components include:

- Tripod Base with foldable legs
- Telescopic Pole (integrated)

- Ball Head with 1/4-inch thread
- Smartphone Holder (adjustable)
- GoPro Mount Adapter



Image 2.1: Close-up view of the tripod's ball head and the top section of the legs, showing the adjustment knob.



Image 2.2: The included smartphone holder and GoPro mount adapter, shown detached from the tripod.

3. SETUP

3.1 Unpacking

Carefully remove all components from the packaging. Ensure all parts listed in Section 2 are present.

3.2 Attaching the Smartphone Holder

1. Locate the smartphone holder (Image 3.1).
2. Screw the smartphone holder onto the 1/4-inch thread of the ball head until secure.
3. Gently pull apart the spring-loaded clamps of the holder and insert your smartphone (width 5.5 cm to 7.8 cm). Ensure the phone is securely seated.



Image 3.1: The adjustable smartphone holder, designed to securely grip various smartphone sizes.

3.3 Attaching a GoPro Camera

1. Locate the GoPro mount adapter (Image 3.2).
2. Attach the GoPro mount adapter to the smartphone holder (if already attached to the tripod) or directly to the 1/4-inch thread of the ball head using the provided screw.
3. Secure your GoPro camera to the adapter using its standard mounting system.



Image 3.2: The GoPro mount adapter, featuring the standard two-pronged attachment point and a screw for securing it.



Image 3.3: The smartphone holder with the GoPro mount adapter attached, demonstrating how both can be used together or individually.

3.4 Attaching a Digital Camera

The tripod features a standard 1/4-inch thread on its ball head. Remove any smartphone or GoPro attachments. Screw your digital camera directly onto the 1/4-inch thread until it is firmly attached.



Image 3.4: The Hama 4601 tripod with the smartphone holder and GoPro mount adapter fully assembled and attached to the ball head.

4. OPERATING INSTRUCTIONS

4.1 Using as a Tabletop Tripod

1. Fold out the three legs of the tripod base completely to ensure maximum stability.
2. Place the tripod on a flat, stable surface.
3. Adjust the angle of your device using the ball head. Loosen the knob on the ball head, position your device, and then tighten the knob to secure it.
4. For additional height, gently pull the telescopic pole upwards to extend it. Ensure it is locked at the

desired height before use. The maximum height with the telescopic pole and ball head is 86 cm.

4.2 Using as a Handheld Grip

1. Fold the tripod legs together to form a comfortable grip.
2. Hold the tripod firmly.
3. Adjust the ball head to achieve the desired shooting angle.

4.3 Using as a Selfie Stick / Monopod

1. Ensure the tripod legs are folded together to form a handle.
2. Extend the telescopic pole to your desired length (Image 4.1).
3. Adjust the ball head for optimal framing of your selfie or group shot.



Image 4.1: The Hama 4601 tripod fully extended, demonstrating its use as a monopod or selfie stick.

5. MAINTENANCE

- Clean the tripod with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the tripod to extreme temperatures or moisture.
- Store the tripod in a dry, cool place when not in use.
- Regularly check all screws and connections for tightness.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tripod is unstable.	Legs not fully extended or placed on an uneven surface.	Ensure all three legs are fully spread and the tripod is on a flat, stable surface.
Device (smartphone/camera) is loose.	Mounting screw or holder clamps are not tight enough.	Tighten the 1/4-inch screw or ensure smartphone holder clamps securely grip the device.
Ball head does not hold position.	Ball head adjustment knob is loose.	Tighten the ball head adjustment knob firmly after positioning your device.

7. SPECIFICATIONS

Feature	Detail
Model Name	00004601
Brand	Hama
Material	Aluminum
Color	Black
Item Weight	185 Grams (6.5 ounces)
Maximum Height	90 Centimeters
Weight Limit	6.6 Pounds
Compatible Devices	GoPro, Smartphone, Digital Cameras (with 1/4-inch thread)
Tripod Head Type	Ball Head
Smartphone Holder Width	5.5 cm to 7.8 cm

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Hama website or contact Hama customer service directly. Keep your purchase receipt as proof of purchase.

Hama GmbH & Co KG

www.hama.com

