

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Supersonic](#) /

› [Supersonic SC-9050WA Portable Smart Speaker User Manual](#)

Supersonic SC-9050WA

Supersonic SC-9050WA Portable Smart Speaker User Manual

Model: SC-9050WA

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Supersonic SC-9050WA Portable Smart Speaker. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.

PRODUCT OVERVIEW

Package Contents

- Supersonic SC-9050WA Portable Smart Speaker
- Charging Cable
- User Manual (this document)

Speaker Components and Controls

Familiarize yourself with the speaker's physical components and control buttons.



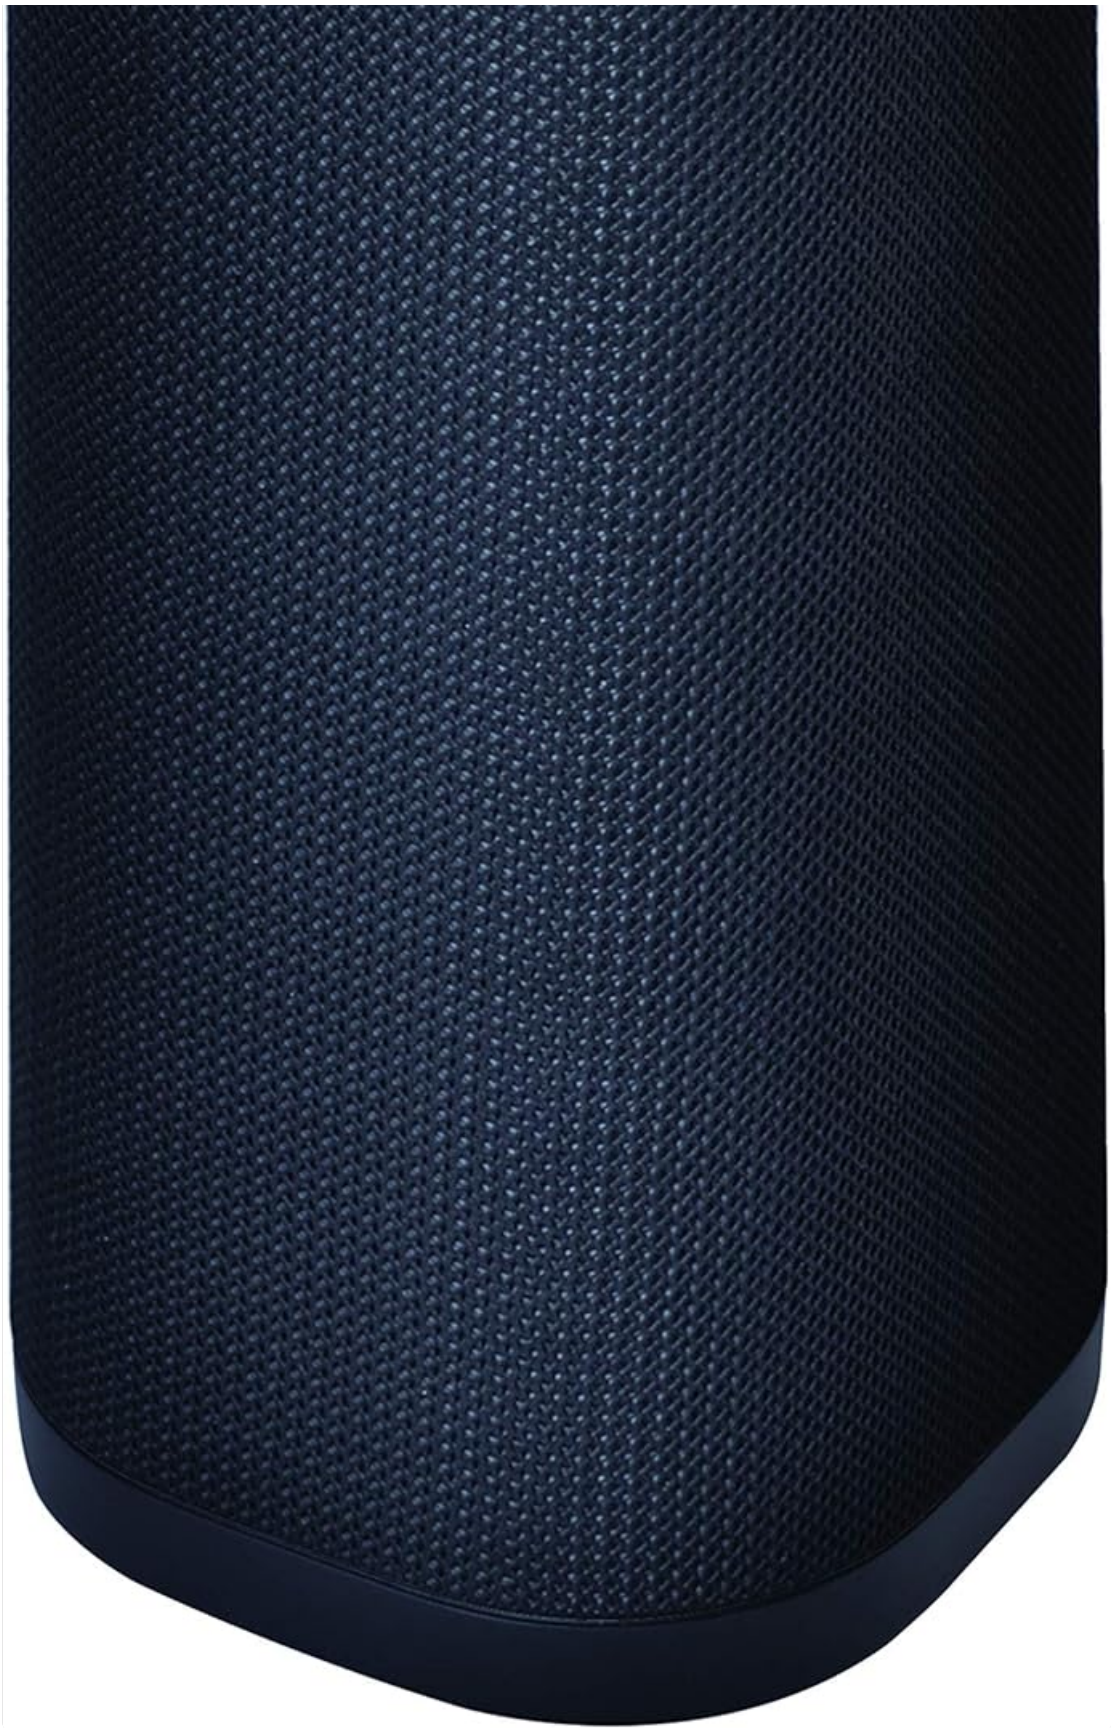


Image 1: Front view of the Supersonic SC-9050WA Portable Smart Speaker. This image displays the cylindrical speaker with a dark mesh grille and a control panel on the top surface.



Image 2: Close-up view of the top control panel of the Supersonic SC-9050WA speaker. Buttons visible include volume up (+), volume down (-), a mode/play/pause button (M / Play/Pause icon), and two microphone-related buttons (microphone mute and microphone activation).

- **Power Button:** (Location not specified, typically on the top panel or side) Turns the speaker on/off.
- **Volume Up (+) / Volume Down (-):** Adjusts the speaker's output volume.
- **Mode / Play/Pause Button (M / ►►):** Switches between input modes (e.g., Bluetooth, Wi-Fi) and controls media playback (play/pause).
- **Microphone Mute Button:** Toggles the built-in microphone's mute status.
- **Microphone Activation Button:** Activates the microphone for voice commands or calls.
- **LED Indicators:** (Assumed, for power, connectivity status) Provide visual feedback on the speaker's status.

SETUP

1. Charging the Speaker

Before initial use, fully charge the speaker. Connect the charging cable to the speaker's charging port and to a standard USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off or change color when fully charged.

The speaker is powered by a 1 Lithium Ion battery.

2. Powering On/Off

Press and hold the Power button (refer to Product Overview for location) for approximately 3 seconds to turn the speaker on or off. An audible prompt or LED indicator will confirm the status change.

3. Wi-Fi Connection (for Alexa and Streaming Services)

To utilize Alexa and Wi-Fi streaming features, the speaker must be connected to a Wi-Fi network. This process typically involves a dedicated mobile application.

1. **Download the Supersonic App:** Search for the official Supersonic companion app on your smartphone's app store (iOS App Store or Google Play Store).
2. **Launch the App and Follow On-Screen Instructions:** The app will guide you through connecting your speaker to your home Wi-Fi network.
3. **Important Note on Wi-Fi Band:** Ensure your Wi-Fi network is operating on a **2.4GHz channel**. This speaker may not be compatible with 5GHz Wi-Fi networks. If you have a dual-band router, you may need to configure it to enable or prioritize the 2.4GHz band for the speaker.
4. **Alexa Account Linking:** During the app setup, you will be prompted to link your Amazon Alexa account. Follow the instructions to authorize the speaker to access your Alexa services.

If you encounter difficulties with Wi-Fi connection, refer to the Troubleshooting section.

4. Bluetooth Connection

For direct audio playback from a mobile device without Wi-Fi, use Bluetooth.

1. **Enter Bluetooth Pairing Mode:** Press the Mode button (M) on the speaker until you hear an audible prompt indicating Bluetooth pairing mode, or see a corresponding LED indicator.
2. **Activate Bluetooth on Your Device:** On your smartphone, tablet, or computer, go to the Bluetooth settings.
3. **Select the Speaker:** Look for "SC-9050WA" or a similar name in the list of available devices and select it to pair.
4. **Confirmation:** Once paired, the speaker will provide an audible confirmation, and the LED indicator will change.

OPERATING INSTRUCTIONS

Basic Playback Controls

- **Play/Pause:** Press the Play/Pause button (▶ ▶) once to play or pause audio.
- **Volume Adjustment:** Use the Volume Up (+) and Volume Down (-) buttons to adjust the listening volume.
- **Mode Selection:** Press the Mode button (M) to cycle through available input modes (e.g., Wi-Fi, Bluetooth).

Using Alexa Voice Assistant

Once connected to Wi-Fi and linked to your Amazon Alexa account, you can use voice commands.

- **Activate Alexa:** Press the Microphone Activation button or simply say the wake word "Alexa" (if enabled and configured).
- **Give Commands:** Speak clearly after the activation tone. Examples:
 - "Alexa, play music."
 - "Alexa, what's the weather?"
 - "Alexa, set a timer for 10 minutes."
- **Mute Microphone:** Press the Microphone Mute button to disable the microphone for privacy. The LED indicator will typically show when the microphone is muted.

Streaming Music Services

With Wi-Fi connectivity and Alexa integration, you can stream from various services.

- Ensure your preferred music services (e.g., Spotify, Pandora, Apple Music) are linked to your Alexa account via the Alexa app.
- Use voice commands like "Alexa, play [artist/song] on Spotify."

MAINTENANCE

Cleaning

- Wipe the speaker's exterior with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- Avoid getting moisture into any openings.

Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically to maintain its health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot connect to Wi-Fi.	Incorrect Wi-Fi password; Speaker is too far from router; Router is on 5GHz band only; App issue.	<ul style="list-style-type: none">• Verify Wi-Fi password.• Move speaker closer to the Wi-Fi router.• Ensure your router supports 2.4GHz and the speaker is connecting to it.• Restart the Supersonic app and try the setup process again.• Restart the speaker and your router.
Alexa is not responding.	No Wi-Fi connection; Microphone muted; Alexa account not linked.	<ul style="list-style-type: none">• Check Wi-Fi connection status.• Ensure the microphone is not muted.• Verify your Amazon Alexa account is correctly linked via the Supersonic app.
Poor sound quality / distorted audio.	Volume too high; Source audio quality; Speaker placement.	<ul style="list-style-type: none">• Reduce volume on both the speaker and the source device.• Try a different audio source or song.• Adjust speaker placement.

Problem	Possible Cause	Solution
Cannot connect via Bluetooth.	Speaker not in pairing mode; Device Bluetooth off; Already connected to another device.	<ul style="list-style-type: none">• Ensure speaker is in Bluetooth pairing mode.• Turn Bluetooth on your device.• Disconnect from other Bluetooth devices.• Forget the speaker from your device's Bluetooth list and re-pair.

SPECIFICATIONS

Model Name	SC-9050WA
Brand	Supersonic
Connectivity Technology	Bluetooth, Wi-Fi
Special Feature	Portable
Power Source	Battery Powered (1 Lithium Ion battery required)
Speaker Maximum Output Power	10 Watts
Audio Output Mode	Stereo
Compatible Devices	Laptop, MP3 Player, Smartphone, Tablet
Control Method	Voice
Item Weight	1.54 Pounds (0.7 kg)
Product Dimensions	11.25 x 22.5 x 16.88 inches (28.58 x 57.15 x 42.88 cm)

WARRANTY INFORMATION

This Supersonic SC-9050WA Portable Smart Speaker comes with a **Limited Warranty**. For specific terms, conditions, and duration of the warranty, please refer to the warranty card included with your product or contact Supersonic customer support directly. Keep your proof of purchase for warranty claims.







CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact Supersonic customer support.

- **Manufacturer:** Supersonic, Inc
- **Website:** [Visit the Supersonic Store on Amazon](#) (for general brand information)
- For direct support contact information (phone, email), please refer to the product packaging or the official Supersonic website.



Related Documents - SC-9050WA

	<p>Supersonic SC-2211 21.5-Inch LED HDTV Specifications and Features</p> <p>Detailed specifications and features for the Supersonic SC-2211 21.5-inch LED HDTV, including product dimensions, weight, resolution, connectivity options, and power requirements.</p>
	<p>Supersonic SC-5032WKB User Manual</p> <p>User manual for the Supersonic SC-5032WKB tablet, covering setup, basic operations, connectivity, system settings, and specifications. Includes safety precautions and FCC compliance information.</p>
	<p>Supersonic SC-830SV Robot Vacuum Cleaner - Features, Specifications & Details</p> <p>Explore the Supersonic SC-830SV Robot Vacuum Cleaner. Learn about its features, battery details, product specifications, and accessories. Smart cleaning with Alexa support.</p>
	<p>Supersonic SC-2322BT Bluetooth Speaker User Manual</p> <p>Instruction manual for the Supersonic SC-2322BT Bluetooth Speaker, covering package contents, product features, specifications, ports and buttons, charging, instructions for use, pairing with Bluetooth devices, FM radio mode, Micro SD card mode, USB mode, FCC compliance, and warranty information.</p>
	<p>Supersonic 90-Day Product Warranty Information and Service Guide</p> <p>Comprehensive details on Supersonic's 90-day parts and labor warranty for products sold in the United States, including warranty terms, exclusions, service procedures, return instructions, and cost information.</p>
	<p>Supersonic SC-5524AIO User Manual: Setup, Features, and Operation</p> <p>Comprehensive user manual for the Supersonic SC-5524AIO All-in-One computer. Covers setup, basic operations, connectivity, specifications, warranty, and FCC compliance.</p>

