

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Braun](#) /

› Braun CareStyle 7 Pro 7156 BK Steam Generator Iron User Manual

Braun IS 7156 Pro

Braun CareStyle 7 Pro 7156 BK Steam Generator Iron User Manual

Model: IS 7156 Pro

1. INTRODUCTION

Thank you for choosing the Braun CareStyle 7 Pro 7156 BK Steam Generator Iron. This appliance is designed to provide efficient and effortless ironing, ensuring excellent results on a variety of fabrics. Please read this manual carefully before first use to ensure safe operation and optimal performance.



Image: The Braun CareStyle 7 Pro 7156 BK Steam Generator Iron, showcasing its compact design and black finish.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the iron.
- Do not immerse the iron or its base in water or other liquids.
- Always turn the iron OFF before plugging or unplugging from the electrical outlet.
- Never pull on the cord to disconnect from the outlet; instead, grasp the plug and pull to disconnect.
- Do not allow the cord to touch hot surfaces. Let the iron cool completely before putting away.
- Always disconnect the iron from the electrical outlet when filling with water or emptying, and when not in use.
- Do not operate the iron with a damaged cord or if the iron has been dropped or damaged.
- To avoid the risk of electric shock, do not disassemble the iron. Contact qualified service personnel for repair.
- Close supervision is necessary for any appliance used by or near children.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when turning the iron upside down.
- Use the iron only for its intended use.

3. PRODUCT OVERVIEW

The Braun CareStyle 7 Pro 7156 BK is a powerful steam generator iron designed for superior ironing performance. Key components include:

- **FreeGlide 3D Soleplate:** Unique rounded design for 360° glide over any fabric and obstacles.
- **High Pressure Steam:** 7.5 bar pump pressure for deep steam penetration.
- **Continuous Steam Output:** 125 g/min for effective wrinkle removal.
- **Steam Shot (Turbo Mode):** Up to 500 g/min for stubborn creases.
- **iCare Technology:** Smart temperature setting for all fabrics, protecting garments.
- **2-Liter Removable Water Tank:** Large capacity for extended ironing sessions and easy refilling.
- **Precision Tip:** Triangular steam zone for hard-to-reach areas.
- **Ergonomic Design:** Lightweight iron for maximum ironing comfort.



Image: A detailed view of the Braun CareStyle 7 Pro steam generator iron, highlighting its main unit and iron.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the iron and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Positioning:** Place the steam generator base on a stable, heat-resistant surface, such as an ironing board designed for steam generators.
3. **Filling the Water Tank:**
 - Ensure the appliance is unplugged.
 - Remove the 2-liter water tank from the base unit.
 - Fill the tank with tap water up to the MAX indicator. For areas with very hard water, a mixture of 50% tap water and 50% distilled water is recommended. Do not use pure distilled water or additives.
 - Reinsert the water tank securely into the base unit.
4. **Connecting to Power:** Plug the power cord into a suitable electrical outlet (220V).
5. **Initial Heating:** Press the ON/OFF button. The iron will begin to heat up. This may take a few minutes. The indicator light will stop flashing when the iron is ready for use.

5. OPERATING INSTRUCTIONS

5.1 Ironing with Steam

1. Ensure the water tank is filled and the iron is heated (indicator light solid).
2. Select the desired temperature setting using the iCare Technology. The intelligent iCare setting is suitable for all ironable fabrics.

3. Press the steam trigger located under the handle to release continuous steam.
4. For an extra burst of steam, press the steam shot button (often a double-press of the steam trigger or a dedicated button) for up to 500 g/min steam. This is ideal for stubborn creases.
5. Glide the iron smoothly over your garments. The FreeGlide 3D soleplate allows for effortless movement in all directions.

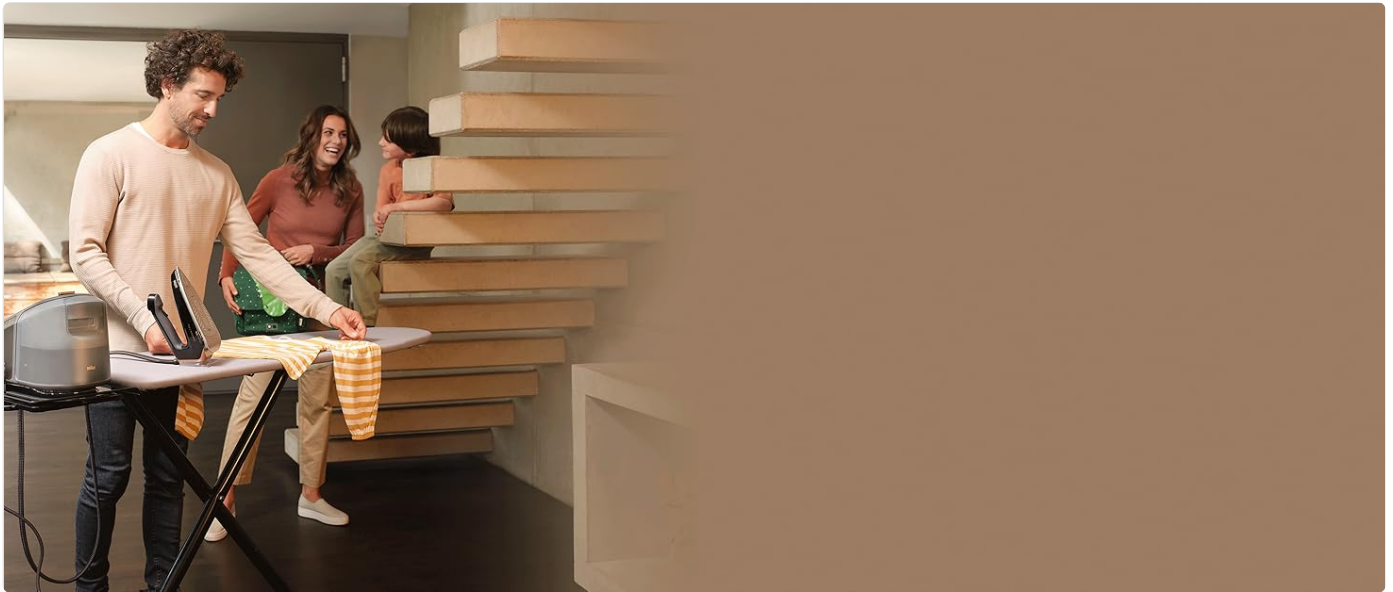


Image: A person using the Braun CareStyle 7 Pro steam generator iron to smooth a light blue shirt on an ironing board.

5.2 Vertical Steaming

The CareStyle 7 Pro can also be used for vertical steaming of hanging garments, curtains, or delicate fabrics.

1. Hang the garment on a hanger.
2. Hold the iron in an upright position, a few centimeters away from the fabric.
3. Press the steam trigger to release steam and move the iron up and down the garment.
4. Use caution as steam is hot.



Image: A woman demonstrating vertical steaming on a jacket using a Braun iron.

5.3 Dry Ironing

For dry ironing, simply do not press the steam trigger. The iron will function as a traditional dry iron.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your steam generator iron.

6.1 Cleaning the Soleplate

- Ensure the iron is unplugged and completely cool.
- Wipe the soleplate with a damp cloth and a non-abrasive liquid cleaner. Do not use abrasive pads or harsh chemicals.

6.2 Descaling (Calc-Clean System)

The CareStyle 7 Pro features an integrated descaling system. Refer to the appliance's specific instructions for activating the Calc-Clean cycle. Typically, this involves:

1. Ensuring the water tank is filled.
2. Placing the iron on its descaling tray (if provided).
3. Activating the Calc-Clean function (usually by pressing and holding a specific button).
4. Allowing the cycle to complete, which will flush out scale deposits.
5. Emptying the descaling tray and rinsing the water tank.

Perform descaling regularly, especially in hard water areas, or when the descaling indicator light illuminates.

6.3 Storage

- Unplug the iron and allow it to cool completely.
- Empty any remaining water from the tank.
- Secure the iron to its base (if applicable) and wrap the cord neatly.
- Store the appliance in a dry, safe place, out of reach of children.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam is produced.	Water tank is empty. Iron not hot enough. Steam trigger not pressed.	Fill the water tank. Wait for the iron to reach operating temperature. Press the steam trigger.
Water drips from the soleplate.	Iron not hot enough for steam. Overfilling the water tank.	Allow the iron to heat up completely before using steam. Do not exceed the MAX fill line.
Iron does not heat up.	Not plugged in. Power switch is off. Faulty outlet.	Ensure the power cord is securely plugged in. Turn the ON/OFF switch to ON. Test the outlet with another appliance.
White flakes or residue on clothes.	Mineral deposits (scale) in the iron.	Perform a descaling cycle (Calc-Clean). Use a mix of tap and distilled water.

If the problem persists after trying these solutions, please contact customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	IS 7156 Pro
Power	2400 Watts
Voltage	220 Volts
Pump Pressure	7.5 bar
Steam Shot	Up to 500 g/min
Continuous Steam Output	125 g/min
Water Tank Capacity	2 Liters (removable)
Soleplate Material	Aluminium (FreeGlide 3D)
Product Dimensions (L x W x H)	40 x 23 x 28 cm
Item Weight	4.9 Kilograms
Noise Level	44 Decibels

9. WARRANTY AND CUSTOMER SUPPORT

9.1 Warranty Information

This Braun CareStyle 7 Pro Steam Generator Iron comes with a manufacturer's warranty. The availability of spare parts is typically 2 years from the date of purchase. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Braun website for your region.

9.2 Customer Support

Should you have any questions, require assistance, or need to report a problem with your appliance, please contact Braun customer support. Contact information can typically be found on the official Braun website or in the product packaging. When contacting support, please have your product model number (IS 7156 Pro) and serial number (if applicable) ready.

© 2024 Braun. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I am looking for compatible spare parts and replacement models for the Braun CareStyle 7 Pro IS7155WH steam generator iron. I need information about compatible internal parts such as the water pump, steam valve, thermal fuse, and heating components. If this exact model is no longer supported, please tell me which other CareStyle 7 Pro models use compatible parts and where I can purchase them.

Based on the documentation for the Braun CareStyle 7 Pro series (specifically model IS 7156 Pro), here is the information regarding spare parts and compatibility: Spare Part Availability: Braun typically guarantees the availability of...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B07B9ZGCNF>

More documents and user manuals: <https://manuals.plus/>