

[Manuals.plus](#) /

› [Lorell](#) /

› Lorell Mesh Back Guest Chair Instruction Manual

Lorell 60511

Lorell Mesh Back Guest Chair

INSTRUCTION MANUAL

Introduction

Thank you for choosing the Lorell Mesh Back Guest Chair. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new chair. Please read these instructions carefully before assembly and use to ensure optimal performance and longevity of the product.



Figure 1: Lorell Mesh Back Guest Chair, showcasing its design with a black mesh back and fabric-upholstered seat.

Setup and Assembly

The Lorell Mesh Back Guest Chair is designed for minimal assembly. Please ensure all components are present before beginning.

Components Checklist:

- Chair Frame (pre-assembled base with legs and arms)
- Seat Cushion
- Backrest with Mesh
- Hardware Pack (screws, washers, Allen wrench)

Assembly Instructions:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Backrest:** Align the backrest with the pre-drilled holes on the chair frame. Secure it using the provided screws and Allen wrench. Do not overtighten.
3. **Attach Seat Cushion:** Place the seat cushion onto the frame, aligning it with the mounting points. Secure it from underneath using the remaining screws. Ensure the seat is firmly attached.
4. **Verify Stability:** Once assembled, gently rock the chair to ensure all connections are secure and the chair is stable.

Operating Instructions

The Lorell Mesh Back Guest Chair is designed for versatile use in office and reception environments. It features both casters for mobility and glides for stationary stability.

- **Caster Use:** The chair comes equipped with casters for easy movement across various floor surfaces. To move the chair, simply push or pull it to the desired location.
- **Glide Use:** For stationary placement and enhanced stability, the chair also includes glides. These can be used to prevent unwanted rolling and provide a firm base. Ensure the chair is placed on a level surface when using glides.
- **Weight Capacity:** This chair is designed to support a maximum weight of **275 pounds**. Exceeding this limit may compromise the chair's integrity and user safety.

Maintenance

Regular maintenance will help preserve the appearance and extend the lifespan of your Lorell Mesh Back Guest Chair.

Cleaning:

- **Fabric Seat:** For general cleaning, use a soft cloth dampened with mild soap and water. Blot spills immediately. For tougher stains, a fabric cleaner suitable for upholstery may be used, following the product's instructions. Test on an inconspicuous area first.
- **Mesh Back:** Wipe the mesh back with a damp cloth. For deeper cleaning, a soft brush can be used with mild soap and water. Rinse thoroughly and allow to air dry.
- **Plastic Frame and Arms:** Clean with a soft cloth and mild, non-abrasive cleaner. Avoid harsh chemicals that may damage the finish.

General Care:

- Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- Avoid exposing the chair to direct sunlight for prolonged periods, as this may cause fading of the fabric and mesh.

- Do not use the chair as a step stool or stand on it.

Troubleshooting

This section addresses common issues you might encounter with your Lorell Mesh Back Guest Chair.

Problem	Possible Cause	Solution
Chair feels wobbly or unstable.	Loose screws or uneven floor surface.	Check and tighten all assembly screws. Ensure the chair is on a flat, level surface.
Casters not rolling smoothly.	Debris caught in casters or worn casters.	Clean any hair or debris from the caster wheels. If casters are worn, they may need replacement.
Squeaking noises.	Loose connections or friction between parts.	Tighten all screws. A small amount of silicone spray can be applied to friction points, avoiding fabric.

Specifications

Detailed specifications for the Lorell Mesh Back Guest Chair.

Feature	Detail
Brand	Lorell
Model Name	Mesh Back Guest Chair
Model Number	60511
Color	Black
Product Dimensions (D x W x H)	23.9"D x 24.6"W x 33.6"H
Maximum Weight Recommendation	275 Pounds
Item Weight	23.6 pounds
Back Style	Split Back, Mesh
Seat Material	Fabric (Foam Fill)
Frame Material	Plastic
Included Components	Chair
UPC	035255605113

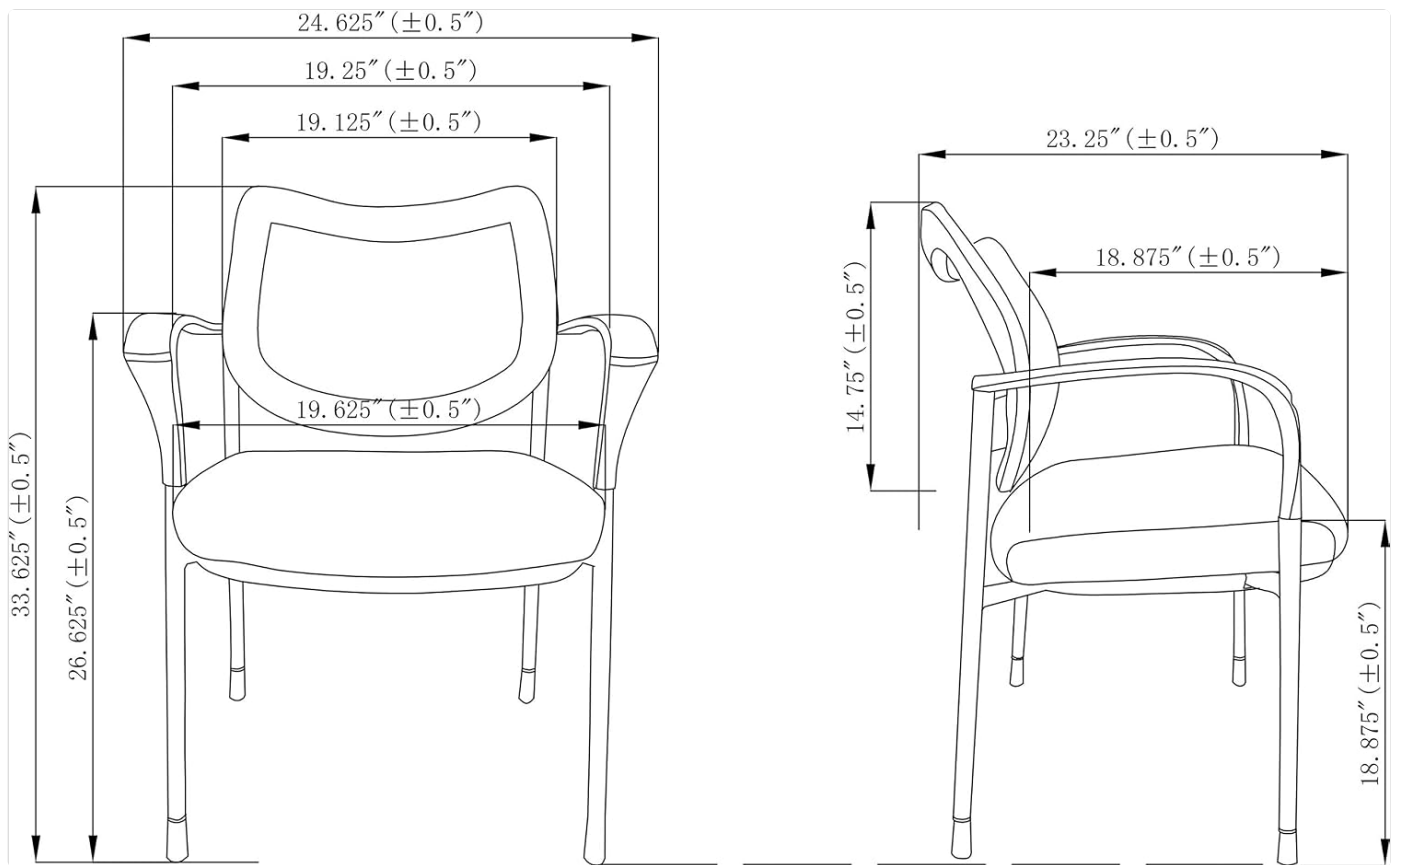


Figure 2: Detailed dimensions of the Lorell Mesh Back Guest Chair, showing overall width, depth, and height measurements.



Figure 3: Visual representation of the Lorell Mesh Back Guest Chair with key dimensions highlighted, including 33.6" height, 23.9" depth, and 24.6" width.

Warranty and Support

The Lorell Mesh Back Guest Chair is covered by a **Lorell 5-Year Warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or replacement parts, please contact Lorell customer service. Refer to your purchase documentation for specific contact details or visit the official Lorell website for the most current support

information.
Please retain your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question