

[Manuals.plus](#) /

› [Access Lighting](#) /

› Access Lighting Bayside Collection LED Wall Fixture Model 20032LEDMG-SAT/FST User Manual

Access Lighting 20032LEDMG-SAT/FST

Access Lighting Bayside Collection LED Wall Fixture User Manual

Model: 20032LEDMG-SAT/FST

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Access Lighting Bayside Collection LED Wall Fixture, model 20032LEDMG-SAT/FST. Please read this manual thoroughly before installation and retain it for future reference.



Figure 1: Access Lighting Bayside Collection LED Wall Fixture (Satin Finish). This image displays the modern, rectangular design of the wall fixture with its integrated LED light source at the bottom, showcasing its sleek appearance.

2. SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.

- All electrical connections must be in accordance with local codes and ordinances, and the National Electric Code (NEC).
- Consult a qualified electrician if you are unsure about the installation process.
- Ensure the fixture is properly grounded.
- Do not install this fixture on a wet surface.
- This product is designed for outdoor use and is water resistant. However, avoid direct high-pressure water spray.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- LED Wall Fixture (Model 20032LEDMG-SAT/FST)
- Mounting Hardware Kit (screws, wire nuts, mounting plate)
- Remote Control
- Instruction Manual

4. SETUP (INSTALLATION)

This fixture is designed for surface mount installation on a wall. Professional installation is recommended.

1. **Prepare for Installation:** Turn off power at the circuit breaker or fuse box to avoid electrical shock. Ensure the power is completely off before proceeding.
2. **Mounting Plate Installation:** Attach the mounting plate to the junction box on the wall using the provided screws. Ensure the plate is securely fastened.
3. **Wiring Connections:**
 - Connect the **black** wire from the fixture to the **black** (Live) wire from the junction box using a wire nut.
 - Connect the **white** wire from the fixture to the **white** (Neutral) wire from the junction box using a wire nut.
 - Connect the **green** or bare copper ground wire from the fixture to the ground wire from the junction box and to the mounting plate using a ground screw.
 - Carefully tuck all wires into the junction box.
4. **Secure the Fixture:** Align the fixture with the mounting plate and secure it using the provided screws. Ensure the fixture is flush against the wall and stable.
5. **Restore Power:** Once the fixture is securely installed and all connections are checked, restore power at the circuit breaker.



Figure 2: Fixture Dimensions. This image illustrates the physical dimensions of the wall fixture, showing a length of 4.5 inches, a width of 5.5 inches, and a height of 8 inches.

5. OPERATING INSTRUCTIONS

This LED wall fixture is controlled via a remote control.

1. **Power On/Off:** Use the **Power** button on the remote control to turn the fixture on or off.
2. **Light Control:** The fixture provides warm white light. Use the remote control to adjust brightness levels if applicable to your specific remote model. Refer to your remote control's specific instructions for advanced features.

6. MAINTENANCE

The Access Lighting LED Wall Fixture requires minimal maintenance.

- **Cleaning:** To clean the fixture, ensure power is off. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or electrical components.
- **LED Lifespan:** The integrated LED light source is designed for long-term use and does not require bulb replacement.
- **Inspection:** Periodically inspect the fixture for any signs of damage or loose connections.

7. TROUBLESHOOTING

If you encounter issues with your fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fixture does not light up.	No power supply. Loose wiring connection. Faulty remote control.	Check circuit breaker. Ensure all wire connections are secure (power off first). Replace remote control batteries or ensure line of sight.
Remote control not working.	Dead batteries. Obstruction between remote and fixture.	Replace batteries in the remote control. Ensure clear path between remote and fixture.
Light flickers or dims unexpectedly.	Unstable power supply. Loose wiring.	Consult an electrician to check power supply. Check all wiring connections (power off first).

If the problem persists after attempting these solutions, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Access Lighting
Model Number	20032LEDMG-SAT/FST
Material	Aluminum (Fixture), Glass (Shade)
Finish	Satin
Light Source	Integrated LED
Light Color	Warm White
Brightness	590 Lumens
Wattage	15 Watts
Voltage	120 Volts
Control Method	Remote Control
Indoor/Outdoor Usage	Outdoor

Feature	Detail
Water Resistance Level	Water Resistant
Dimensions (L x W x H)	4.5" x 5.5" x 8"
Item Weight	4.3 Pounds
Installation Type	Surface Mount
Required Assembly	Yes

9. WARRANTY INFORMATION

This Access Lighting fixture is covered by a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications. Please retain your proof of purchase for warranty claims.

10. SUPPORT

For technical assistance, replacement parts, or warranty inquiries, please contact Access Lighting customer support. You may also visit the official [Access Lighting Store on Amazon](#) for more information.

© 2023 Access Lighting. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

