

KODAK Printomatic

KODAK Printomatic Digital Instant Print Camera Instruction Manual

Model: Printomatic (RODOMATICBL)

1. INTRODUCTION

The KODAK Printomatic Digital Instant Print Camera offers a simple and enjoyable way to capture and instantly print memories. This compact camera features a 5MP sensor and utilizes Zink Zero Ink technology to produce smudge-proof, water-resistant, and tear-resistant 2x3 inch photos. These photos are also adhesive-backed, allowing for creative applications. The camera is designed for ease of use, allowing you to continue shooting while a previous photo is printing. It also includes a MicroSD card slot for additional memory storage.



Figure 1: KODAK Printomatic Digital Instant Print Camera Overview

2. WHAT'S IN THE Box

Upon unboxing your KODAK Printomatic camera, verify that all the following components are included:

- KODAK Printomatic Digital Instant Print Camera
- USB Micro Charging Cable
- Zink Photo Paper Starter Pack (5 sheets)
- Quick Start Guide

What's Included?

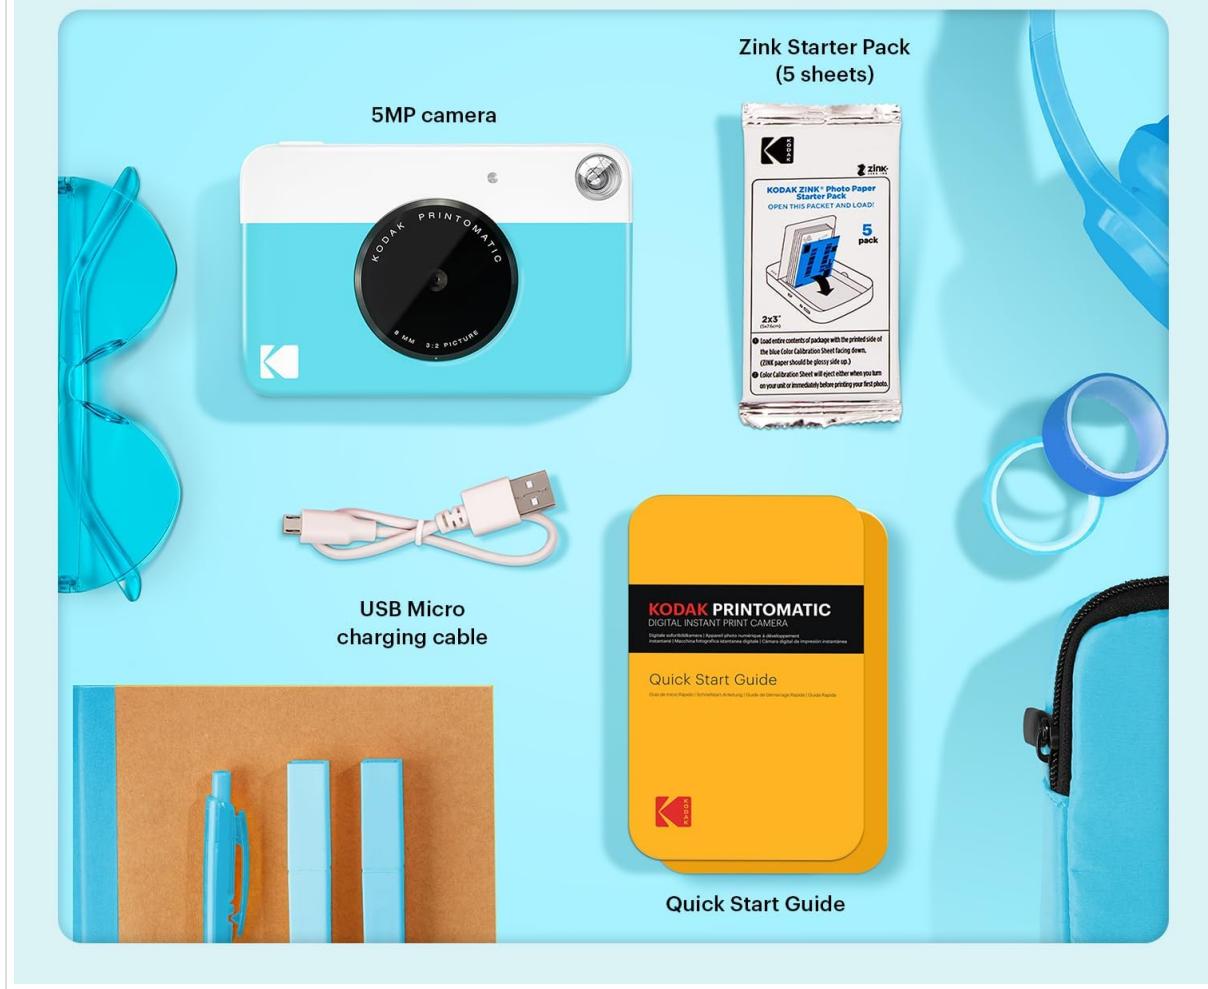


Figure 2: Included Components

3. SETUP

3.1 Charging the Camera

Before initial use, fully charge your KODAK Printomatic camera. Connect the provided USB Micro Charging Cable to the camera's charging port and plug the other end into a compatible USB power source (e.g., computer, wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged.

3.2 Loading Zink Photo Paper

The Printomatic camera uses KODAK Zink Photo Paper. Each pack includes a blue calibration sheet. Ensure this sheet is loaded first, facing down, as it calibrates the printer for optimal color quality.

1. Open the paper compartment door on the back of the camera.
2. Insert a pack of KODAK Zink Photo Paper with the blue calibration sheet at the bottom, facing down. The glossy side of the photo paper should face up.
3. Close the paper compartment door securely. The camera will automatically process the blue calibration sheet before printing your first photo.

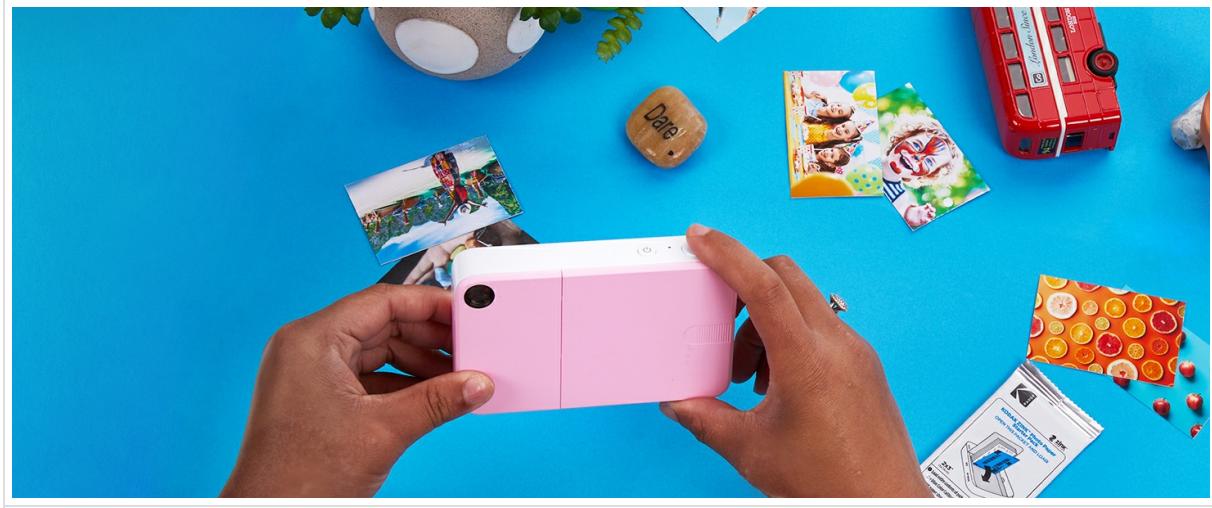


Figure 3: Loading Photo Paper

3.3 Inserting a MicroSD Card (Optional)

To save digital copies of your photos, insert a MicroSD card (up to 32GB, not included) into the designated slot on the side of the camera. The camera will automatically save images to the card.

4. OPERATING THE CAMERA

4.1 Powering On/Off

Press and hold the power button located on the top of the camera until the indicator light illuminates to turn the camera on. Repeat this action to turn the camera off.

4.2 Taking a Photo

Point the camera at your subject. The camera features an optical viewfinder for framing your shot. Press the shutter button firmly to capture a photo. The camera will automatically print the photo immediately after capture.

4.3 Automatic Printing

The KODAK Printomatic utilizes Zero Ink technology, meaning photos are printed directly onto the Zink paper without the need for ink cartridges. Once a photo is taken, it will automatically emerge from the side of the camera. The camera allows for continuous shooting even while a photo is being printed.



Figure 4: Photo Printing in Progress

4.4 Flash Operation

The camera is equipped with a built-in flash that automatically activates in low-light conditions to ensure proper exposure for your photos.

4.5 Adhesive-Backed Prints

All KODAK Zink Photo Paper prints are adhesive-backed. Simply peel off the backing to turn your photos into stickers, perfect for scrapbooks, journals, or decorating.



Figure 5: Adhesive-Backed Photo Feature

4.6 Saving Digital Copies

If a MicroSD card is inserted, the camera will automatically save a digital copy of each photo taken. You can later transfer these files to a computer or other device for storage or sharing.

[REDACTED]
Video 1: KODAK Printomatic Digital Instant Print Camera Overview by C&A Marketing, Inc.

[REDACTED]
Video 2: KODAK Printomatic Camera Demonstration by The Net Guy Reviews

5. MAINTENANCE

5.1 Cleaning the Camera

To maintain optimal performance and appearance, gently wipe the camera's exterior with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.

5.2 Battery Care

The camera contains a built-in lithium battery. For best battery life, avoid extreme temperatures and store the camera in a cool, dry place. Recharge the battery regularly, even if the camera is not in frequent use.

5.3 Photo Paper Storage

Store KODAK Zink Photo Paper in its original packaging in a cool, dry environment away from direct sunlight and humidity to preserve its quality and prevent damage.

6. TROUBLESHOOTING

If you encounter issues with your KODAK Printomatic camera, refer to the following common solutions:

- **Camera Not Turning On:** Ensure the battery is fully charged. Connect the camera to a power source and

allow it to charge for at least 30 minutes before attempting to power it on again.

- **Poor Print Quality (Dull Colors, Blurry):** Verify that the Zink Photo Paper is loaded correctly with the glossy side up and the blue calibration sheet was processed. Ensure there is adequate lighting when taking photos, as very dim or overly bright conditions can affect print quality.
- **Paper Not Printing:** Check if the paper compartment is empty or if the paper is jammed. Reload the paper pack, ensuring it is inserted correctly. If a jam occurs, gently open the compartment and remove any obstruction.
- **Photos Not Saving to MicroSD:** Confirm that a MicroSD card is properly inserted into the slot. Ensure the card is not full or corrupted. Try formatting the card (refer to the Quick Start Guide for instructions) or using a different MicroSD card.

7. SPECIFICATIONS


Feature	Detail
Product Dimensions	5 x 1 x 3.5 inches
Item Weight	7.1 ounces
Item Model Number	RODOMATICBL
Batteries	1 Lithium Polymer batteries required (included)
Manufacturer	C&A Marketing Inc.
Special Feature	Flash integrated
Film Format Type	Instant (Zink Zero Ink)
Model Name	Kodak Printomatic Instant Camera
Max Shutter Speed	1/125s


8. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your product or visit the official KODAK support website. Keep your proof of purchase for any warranty claims.

You can find additional information and support resources on the [KODAK Store on Amazon](#).

Related Documents - Printomatic

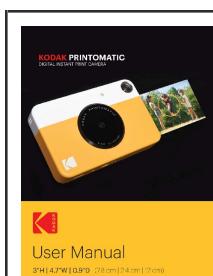	<p>KODAK PRINTOMATIC User Manual: Digital Instant Print Camera Guide</p> <p>Explore the KODAK PRINTOMATIC Digital Instant Print Camera with this comprehensive user manual. Learn about setup, operation, features, troubleshooting, and warranty information for your instant printing camera.</p>
--	---

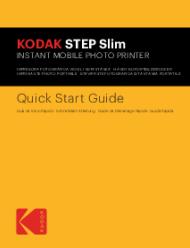	<p>KODAK PRINTOMATIC Digital Instant Print Camera Quick Start Guide</p> <p>Get started quickly with the KODAK PRINTOMATIC digital instant print camera. This guide covers charging, operation, paper loading, photo tips, and more for instant photo printing.</p>
	<p>KODAK PRINTOMATIC Digital Instant Print Camera User Manual</p> <p>Official user manual for the KODAK PRINTOMATIC Digital Instant Print Camera. This guide provides instructions on setup, operation, features, battery care, troubleshooting, FCC compliance, and warranty information.</p>
	<p>Kodak Step Slim Instant Mobile Photo Printer Quick Start Guide</p> <p>A quick start guide for the Kodak Step Slim Instant Mobile Photo Printer, detailing setup, paper loading, Bluetooth pairing, and safety precautions.</p>
	<p>Kodak STEP Instant Mobile Photo Printer Quick Start Guide</p> <p>Get started quickly with your Kodak STEP Instant Mobile Photo Printer. This guide covers setup, pairing, charging, and safety precautions for seamless photo printing.</p>
	<p>KODAK STEP Slim Instant Mobile Photo Printer Quick Start Guide</p> <p>Get started quickly with your KODAK STEP Slim Instant Mobile Photo Printer. This guide covers charging, loading paper, powering on, connecting via Bluetooth, and printing photos.</p>