

Manuals.plus /

› MUSYSIC /

› MUSYSIC MU-215P4K Portable PA Speaker System User Manual

MUSYSIC MU-215P4K

MUSYSIC MU-215P4K Portable PA Speaker System User Manual

Model: MU-215P4K | Brand: MUSYSIC

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your MUSYSIC MU-215P4K Portable PA Speaker System. Please read this manual thoroughly before using the product and retain it for future reference. Proper use will ensure optimal performance and extend the lifespan of your speaker system.

2. SAFETY INFORMATION

To prevent fire, electric shock, or product damage, always follow these basic safety precautions:

- Do not expose the unit to rain or moisture.
- Do not open the casing. Refer all servicing to qualified personnel.
- Ensure proper ventilation. Do not block ventilation openings.
- Place the unit on a stable, level surface.
- Disconnect the power cord during lightning storms or when unused for long periods.
- Avoid placing heavy objects on the power cord.
- Keep the unit away from heat sources, direct sunlight, and excessive dust.

3. PRODUCT OVERVIEW

The MUSYSIC MU-215P4K is a versatile portable PA speaker system designed for various audio applications. It features dual 15-inch subwoofers, a built-in amplifier, Bluetooth connectivity, FM radio, USB/SD card playback, and dynamic LED party lights. Its robust construction and multiple input options make it suitable for both indoor and outdoor use.

SIMPLE TO OPERATE

SEPERATE FUNCTION BUTTON DESIGN

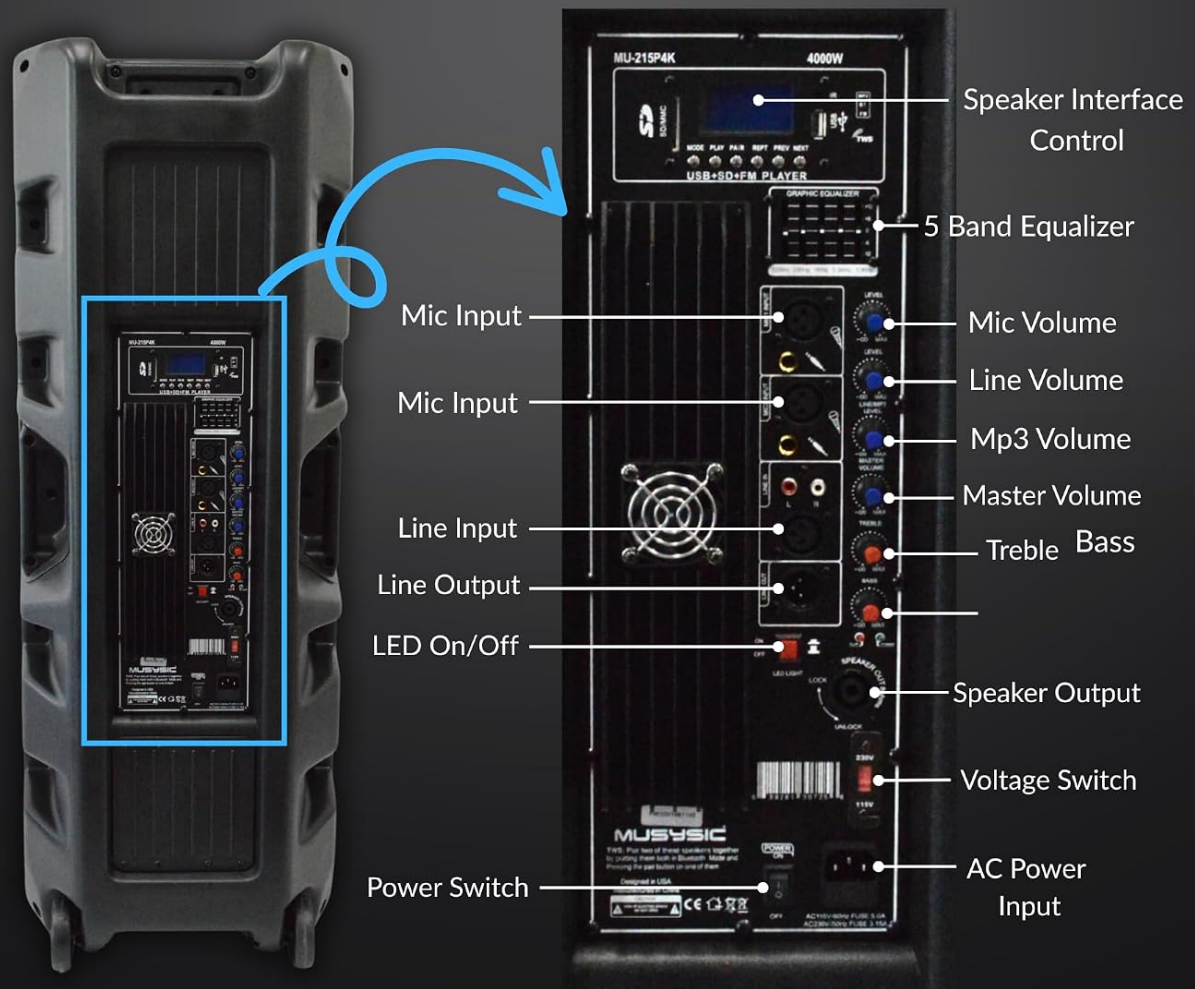


Figure 3.1: Front view of the MUSYSIC MU-215P4K Portable PA Speaker System with illuminated LED lights.



Figure 3.2: The speaker's LED lights in action, enhancing the audio experience.

4. COMPONENTS AND CONTROLS

The rear panel of the speaker houses all essential controls and input/output ports. Familiarize yourself with these components for proper operation.



Control Panel Features:

- **Speaker Interface Control:** Main display and navigation for media playback and modes.
- **5 Band Equalizer:** Adjust audio frequencies for desired sound.
- **Mic Input (1/4", XLR):** Connect microphones.
- **Mic Volume:** Adjust microphone input level.
- **Line Input (RCA, XLR):** Connect external audio sources.
- **Line Volume:** Adjust line input level.
- **MP3 Volume:** Adjust volume for USB/SD/Bluetooth playback.
- **Master Volume:** Overall system volume control.
- **Treble/Bass:** Fine-tune high and low frequencies.
- **LED On/Off:** Control the LED party lights.
- **Speaker Output:** Connect to another passive speaker (if applicable).
- **Voltage Switch:** Select appropriate voltage (110V/220V).
- **AC Power Input:** Connect the power cable.
- **Power Switch:** Turn the unit on or off.

5. SETUP

5.1 Unpacking and Placement

1. Carefully remove the speaker system from its packaging.
2. Inspect the unit for any signs of damage. If damaged, contact your retailer.
3. Place the speaker on a firm, level surface. Ensure adequate space around the unit for ventilation.
4. Attach the detachable wheels and handle if you intend to use the speaker for portable applications.

PARTY SPEAKER

LINEAR FREQUENCY RESPONSE: 55HZ - 18 KHZ (-10DB)



Figure 5.1: The speaker's portability features, including wheels and handle.

5.2 Power Connection

1. Before connecting to power, ensure the Voltage Switch on the rear panel is set to the correct voltage for your region (110V or 220V).
2. Connect the provided AC power cord to the AC Power Input on the rear panel and then to a suitable wall outlet.
3. Ensure the Power Switch is in the 'OFF' position before plugging in.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

To power on the speaker, flip the Power Switch to the 'ON' position. The display will illuminate. To power off, flip the Power Switch to the 'OFF' position.

6.2 Bluetooth Connectivity

1. Turn on the speaker.
2. Press the 'Mode' button on the control panel until 'Bluetooth' mode is selected. The display will show 'BT' and a pairing indicator.
3. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select 'MUSYSIC MU-215P4K' from the list of devices.
5. Once connected, the speaker will emit a confirmation tone, and you can stream audio wirelessly.



Figure 6.1: Stereo sound setup with two MUSYSIC speakers.

6.3 USB/SD Card Playback

1. Insert a USB drive or SD card into the corresponding slot on the control panel.
2. The speaker will automatically switch to USB/SD mode and begin playing compatible audio files. If not, press the 'Mode' button to select.
3. Use the playback controls (Play/Pause, Next, Previous) on the control panel or remote control to manage your music.

6.4 FM Radio

1. Press the 'Mode' button until 'FM' mode is selected.
2. Press the 'Play/Pause' button to initiate an automatic scan for available FM stations. The speaker will save detected stations.
3. Use the 'Next' and 'Previous' buttons to navigate through the saved FM stations.

6.5 Microphone and Line Inputs

1. Connect your microphone(s) to the 1/4" or XLR Mic Input jacks.
2. Connect external audio devices (e.g., mixer, instrument) to the RCA or XLR Line Input jacks.
3. Adjust the individual 'Mic Volume' and 'Line Volume' controls, as well as the 'Master Volume', to achieve the desired sound level.

6.6 LED Party Lights

The speaker features integrated LED party lights. Use the 'LED On/Off' switch on the control panel to activate or deactivate the lights. Some models may offer different light modes, which can be cycled through by pressing the LED button repeatedly.



Figure 6.2: The speaker providing entertainment at an outdoor event.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your speaker system.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners, waxes, or solvents.
- **Ventilation:** Ensure that the ventilation openings are clear of dust and debris. Use a soft brush or compressed air to clean them if necessary.
- **Storage:** When not in use, store the speaker in a cool, dry place, away from direct sunlight and extreme

temperatures.

- **Cables:** Regularly check all cables for damage. Replace any frayed or damaged cables immediately.

8. TROUBLESHOOTING

If you encounter issues with your speaker system, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; Power switch off; Outlet not working.	Ensure power cord is securely connected. Turn power switch ON. Test outlet with another device.
No sound output	Volume too low; Incorrect input mode; Audio cable issues; Bluetooth not connected.	Increase Master Volume and input-specific volumes. Select correct input mode (Bluetooth, USB, FM, Line). Check audio cables. Re-pair Bluetooth device.
Bluetooth connection unstable	Device too far; Interference; Low battery on source device.	Move device closer to the speaker. Avoid obstacles. Turn off other Bluetooth devices. Charge source device.
USB/SD playback not working	Unsupported file format; Corrupt media; Incorrect mode.	Ensure files are in a supported format (e.g., MP3). Try a different USB/SD card. Select USB/SD mode.

If the problem persists after trying these solutions, please contact MUSYSIC customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	MUSYSIC
Model Number	MU-215P4K
Output Wattage	4000 Watts (PMPO)
Subwoofer Size	2 x 15 inches
Connectivity Technology	AUX, Bluetooth, USB
Audio Input	1/4" microphone input, XLR microphone input, RCA line input, XLR line output
Frequency Response	55Hz - 18 KHz (-10db)
Item Dimensions (L x W x H)	42 x 18 x 15 inches
Enclosure Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	Corded Electric
UPC	688281307256

10. WARRANTY AND SUPPORT

This MUSYSIC MU-215P4K Portable PA Speaker System comes with a **1-Year Manufacturer's Warranty**. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact MUSYSIC customer service through their official channels or visit the [MUSYSIC Brand Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07BB836NK>

More documents and user manuals: <https://manuals.plus/>