

[Manuals.plus](#) /

› [Aquasonic](#) /

› AquaSonic Home Dental Center Rechargeable Power Toothbrush & Smart Water Flosser - Complete Family Oral Care System - 10 Attachments and Tips Included - Various Modes & Timers (White) User Manual

Aquasonic AS-HDCS-SET

AquaSonic Home Dental Center User Manual

Model: AS-HDCS-SET

INTRODUCTION

The AquaSonic Home Dental Center is a comprehensive oral care system designed for the entire family. It integrates a powerful sonic toothbrush and a smart water flosser to provide a complete and effective daily oral hygiene routine. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Figure 1: AquaSonic Home Dental Center Overview

SAFETY INFORMATION

For safe operation, please adhere to the following guidelines:

- The safe use of the water flosser is influenced by the correct location of the irrigator in the oral cavity, compliance with safety measures, and the correct choice of power.
- Do not immerse the charging base in water or any other liquid.
- Keep out of reach of children.
- Ensure the power cord is not damaged and is properly connected to a suitable power outlet.
- Consult a dental professional if you have any pre-existing oral conditions or concerns before using the device.

WHAT'S IN THE BOX

Your AquaSonic Home Dental Center package includes the following components:

- 1 Smart Toothbrush
- 4 Color-Coded Brush Heads
- 1 Interdental Brush Head
- 1 Oral Irrigator (Water Flosser)
- 2 Standard Jet Nozzles
- 1 Orthodontic Tip
- 1 Tongue Cleaner
- 1 Dental Mirror
- 1 Docking Stand
- 1 Charger
- Warranty Card
- User Manual (this document)



Figure 2: All Included Accessories

Initial Charging

Before first use, fully charge both the Smart Toothbrush and the Oral Irrigator. Place the toothbrush in its charging dock and connect the charger to a power outlet. For the Oral Irrigator, connect its separate charger. A full charge ensures optimal battery life and performance.

Attaching Brush Heads and Tips

For the Smart Toothbrush, align your chosen brush head (standard or interdental) with the metal shaft and push down firmly until it clicks into place. For the Oral Irrigator, select the desired tip (standard nozzle, orthodontic, or tongue cleaner) and insert it into the opening at the top of the flosser until it locks securely.



Figure 3: Smart Toothbrush with Interdental and Standard Brush Heads

The World's Most Advanced Oral Irrigator

2 Standard Nozzles

Below The
Gum Line



1

Orthodontic Tip

Cleans Between
Teeth



1

Tongue Cleaner

Clean Bacteria
Build Up



Figure 4: Oral Irrigator with Standard, Orthodontic, and Tongue Cleaner Tips

Filling the Water Reservoir

Open the water reservoir cap on the Oral Irrigator and fill it with lukewarm water. Close the cap firmly to prevent leaks.

OPERATING INSTRUCTIONS

Using the Smart Toothbrush

1. Apply a small amount of toothpaste to the brush head.
2. Place the brush head against your teeth at a slight angle towards the gumline.
3. Press the power button to turn on the toothbrush.
4. Select your desired cleaning mode (Normal, Soft, or Massage) by pressing the mode button. The toothbrush produces 31,000 Vibrations Per Minute (VPM).
5. Gently move the brush across all surfaces of your teeth. The built-in 2-minute auto shut-off timer and 30-second

interval timer will guide you to brush different areas of your mouth.

6. After brushing, rinse your mouth and the brush head thoroughly.

Powerful Electric Toothbrush

Whitens teeth by up to 2.5 shades in two weeks.

Precise Timing
2 min/30 sec Auto Timer

Inductive Charging
Extra Long Usage Time

31,000 VPM Motor
Clinically proven strength

3 Modes
High | Soft | Massage
For varying oral care needs

Figure 5: Smart Toothbrush Features and Modes

Using the Smart Water Flosser

1. Ensure the reservoir is filled with water and a tip is securely attached.
2. Place the tip into your mouth, aiming it at the gumline.
3. Press the power button to turn on the water flosser.
4. Select your desired mode (Normal, Soft, or Pulse) using the mode button.
5. Guide the water stream along your gumline and between your teeth. Allow the water to flow into the sink.
6. The water flosser provides powerful yet gentle jets of water to dislodge food and stimulate gums.

Powerful Oral Irrigator

Cleans faster and better than string floss

Up to **8 Hours**

on a single charge.

0.6 mm

Ultra Fine
Water Flow

360°

Rotary Nozzle

Easy To Use

Nozzle Release
Button



Figure 6: Oral Irrigator Water Flow and Nozzle

Using the Dental Mirror

The included dental mirror features an LED light for better visibility. Use it to accurately identify issues in non-visible areas of your mouth. The mirror reflects light onto desired surfaces, aiding in thorough oral inspection.

High Quality Dental Mirror

Accurately identify issues in non-visible areas.



Figure 7: High Quality Dental Mirror with LED Light

MAINTENANCE

Cleaning the Devices

- After each use, rinse the toothbrush head and water flosser tip under running water.
- Wipe the body of both devices with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Empty any remaining water from the Oral Irrigator's reservoir after each use to prevent mineral buildup.

Replacing Brush Heads and Tips

It is recommended to replace toothbrush heads every 3 months, or sooner if the bristles become frayed. Water flosser tips should be replaced every 6 months, or as needed. To remove, gently pull the head/tip straight off the device. To attach a new one, follow the setup instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not turning on	Low battery; Not charged	Ensure the device is fully charged. Check power connection to the charging base.
Weak water pressure (Oral Irrigator)	Low water level; Clogged tip; Low battery	Refill water reservoir. Clean or replace the tip. Charge the device.
Toothbrush not vibrating strongly	Low battery; Incorrect mode selected	Charge the toothbrush. Select a stronger mode (e.g., Normal).

SPECIFICATIONS

- **Brand:** Aquasonic
- **Model Number:** AS-HDCS-SET
- **Power Source:** Corded Electric
- **Toothbrush Vibrations:** 31,000 VPM
- **Toothbrush Modes:** Normal, Soft, Massage
- **Toothbrush Timer:** Built-in 2-minute auto shut-off, 30-second interval timer
- **Water Flosser Modes:** 3 convenient usage modes
- **Included Accessories:** 4 color coded brush heads, 1 interdental brush head, 2 jet nozzles, 1 orthodontic tip, 1 tongue cleaner, 1 dental mirror.
- **Package Dimensions:** 9.61 x 7.76 x 4.96 inches
- **Item Weight:** 2.49 Pounds
- **UPC:** 810016710240

WARRANTY AND SUPPORT

Your AquaSonic Home Dental Center comes with a warranty. Please refer to the included warranty card for specific terms and conditions, including warranty period and coverage details. For product support, technical assistance, or to inquire about replacement parts, please contact AquaSonic customer service. Contact information can typically be found on the product packaging or the official AquaSonic website.

For additional resources and frequently asked questions, visit the official AquaSonic store:[AquaSonic Store](#)

© 2025 AquaSonic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question