

KINGJOY G55C+G0

KINGJOY G55C+G0 Carbon Fiber Tripod with Ball Head Kit

User Instruction Manual

Introduction	Safety	Contents	Features	Setup	Operation	Maintenance	Troubleshooting
			Specifications	Warranty & Support			

1. INTRODUCTION

Thank you for purchasing the KINGJOY G55C+G0 Carbon Fiber Tripod with Ball Head Kit. This manual provides detailed instructions for the proper setup, operation, and maintenance of your tripod. Please read this manual thoroughly before using the product to ensure safe and efficient operation and to achieve optimal performance.

The KINGJOY G55C+G0 is a versatile and lightweight tripod designed for photographers seeking stability and portability. Its carbon fiber construction, foldable design, and integrated ball head make it suitable for various photography applications.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent damage to the product or injury to yourself:

- **Do not exceed the maximum load capacity of 10 kg (22.05 lbs).**Overloading can cause instability and damage to the tripod or attached equipment.
- Ensure all leg locks and the quick release plate are securely fastened before mounting your camera or leaving the tripod unattended.
- Avoid placing the tripod on uneven or unstable surfaces. Always ensure the tripod is level and stable before use.
- Do not expose the tripod to extreme temperatures, direct sunlight for prolonged periods, or corrosive chemicals.
- Keep hands and fingers clear of moving parts, especially when extending or collapsing the legs, to prevent pinching.
- When carrying the tripod, ensure all sections are fully retracted and locked, and the legs are folded.
- Do not use the tripod in strong winds without additional stabilization (e.g., hanging a weight from the center column hook, if available).

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- KINGJOY G55C+G0 Tripod kit
- User manual (this document)
- Zippered carrying case

4. PRODUCT FEATURES

The KINGJOY G55C+G0 tripod offers a range of features designed for professional and amateur photographers:

- **Carbon Fiber Construction:** Made of anodized carbon fiber, ensuring a lightweight yet robust design.
- **4-Section Legs:** Provides flexibility in height adjustment and compact storage.
- **Twist Lock System:** Allows for quick and secure adjustment of leg sections.
- **Adjustable Leg Angles:** Legs can be individually set to 25, 50, and 80-degree angles for stability on various terrains.
- **Quick Release Mounting Plate:** Enables fast attachment and removal of your camera.
- **Invertible Center Column:** Facilitates low-angle and macro photography.
- **Monopod Conversion:** One removable leg can be detached and used as a monopod or alpenstock.
- **Integrated Ball Head:** Provides smooth and precise camera positioning.
- **Non-slip Rubber Feet:** Enhances stability on diverse surfaces.
- **Built-in Compass:** Assists in direction identification in outdoor environments.

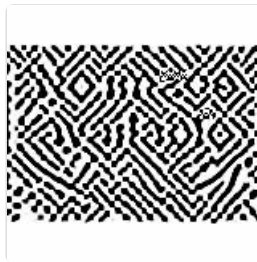


Image 1: The KINGJOY G55C+G0 Carbon Fiber Tripod with Ball Head Kit. This image displays the tripod in its extended form, highlighting its carbon fiber legs, ball head, and overall compact design.

5. SETUP INSTRUCTIONS

5.1 Unfolding the Tripod

1. Place the tripod on a flat, stable surface.
2. Grasp the tripod legs and gently pull them outwards until they are fully extended or set to your desired angle.
3. Rotate the twist locks on each leg section counter-clockwise to loosen, extend the leg to the desired height, then rotate clockwise to secure. Repeat for all leg sections.

5.2 Attaching Your Camera

1. Locate the quick release plate on the ball head.
2. Unscrew the quick release plate from the ball head by turning the locking knob or lever.
3. Attach the quick release plate to the bottom of your camera by screwing the 1/4-inch-20 mounting screw into the camera's tripod socket. Ensure it is tightened securely.
4. Slide the camera with the attached quick release plate back into the ball head's receiver.
5. Secure the quick release plate by tightening the locking knob or lever on the ball head. Ensure the camera is firmly attached before releasing your grip.

5.3 Adjusting Leg Angles

Each leg can be independently adjusted to three different angles (25, 50, and 80 degrees) for stability on uneven terrain or for low-angle shots.

1. Pull out the leg angle adjustment tab located at the top of each leg, near the tripod's center column.
2. Move the leg to the desired angle until the tab clicks into place.
3. Ensure all legs are securely locked at their chosen angles before use.

5.4 Inverting the Center Column (for Low-Angle Shots)

For extreme low-angle photography or macro shots, the center column can be inverted.

1. Remove the camera from the quick release plate.
2. Loosen the center column locking knob.
3. Pull the center column completely out of the tripod body.
4. Reinsert the center column upside down into the tripod body.
5. Tighten the center column locking knob to secure it.
6. Reattach your camera to the quick release plate.

6. OPERATING INSTRUCTIONS

6.1 Adjusting Tripod Height

The tripod's height can be adjusted using the leg sections and the center column.

- **Leg Sections:** Rotate the twist locks counter-clockwise to loosen, extend or retract the leg sections, then rotate clockwise to tighten.
- **Center Column:** Loosen the center column locking knob, raise or lower the center column to the desired height, then tighten the knob to secure.

6.2 Using the Ball Head

The integrated ball head allows for flexible camera positioning.

1. Loosen the main locking knob on the ball head to allow free movement of the camera.
2. Position your camera to the desired angle (tilt, pan, or rotate).
3. Tighten the main locking knob firmly to secure the camera in place.
4. Some ball heads may have a separate panning lock for horizontal rotation. Loosen this knob to pan the camera independently of the tilt, then tighten to lock.

6.3 Monopod Conversion

One of the tripod legs can be detached and used as a monopod.

1. Identify the leg with the foam grip (this is typically the detachable leg).
2. Unscrew this leg from the tripod's main body by rotating it counter-clockwise.
3. If desired, remove the ball head from the tripod's center column and attach it to the top of the detached leg.
4. Extend the monopod sections and secure them with the twist locks as needed.

6.4 Using the Built-in Compass

The tripod is equipped with a small compass, typically located on the tripod's shoulder or center column. This can be used

for basic directional guidance in outdoor settings.

7. MAINTENANCE

Proper maintenance will extend the life of your KINGJOY G55C+G0 tripod:

- **Cleaning:** Wipe down the tripod with a soft, dry cloth after each use. If it gets dirty, use a damp cloth with mild soap and water, then dry thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Lubrication:** The twist locks and ball head mechanism are generally self-lubricating. Do not apply oil or grease unless specifically instructed by the manufacturer, as this can attract dust and grit.
- **Storage:** Store the tripod in its carrying case in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all screws, knobs, and leg locks for tightness. Tighten any loose components.

8. TROUBLESHOOTING

If you encounter issues with your tripod, refer to the following common problems and solutions:

- **Tripod is unstable:**
 - Ensure all leg sections are fully extended and twist locks are securely tightened.
 - Verify that the leg angle adjustment tabs are fully engaged.
 - Check that the tripod is placed on a level and stable surface.
 - Ensure the center column locking knob is tightened.
- **Camera is loose on the ball head:**
 - Ensure the quick release plate is securely attached to your camera.
 - Verify that the quick release plate locking knob/lever on the ball head is fully tightened.
 - Tighten the main locking knob on the ball head after positioning the camera.
- **Leg sections are difficult to extend or retract:**
 - Check for dirt or debris inside the leg sections. Clean as per maintenance instructions.
 - Ensure the twist locks are fully loosened before attempting to adjust.

If problems persist, please contact KINGJOY customer support.

9. SPECIFICATIONS

Feature	Detail
Model Number	G55C+G0
Brand	KINGJOY
Material	Carbon Fiber
Number of Leg Sections	4
Minimum Height	47 cm (18.5 inches)
Maximum Height	136 cm (53.5 inches)

Feature	Detail
Folded Height	35.6 cm (14 inches)
Item Weight	1.4 kg (3.09 lbs)
Weight Limit (Load Capacity)	10 kg (22.05 lbs)
Head Type	Ball Head
Compatible Devices	Camera
Color	Black
UPC	610877751051

10. WARRANTY & SUPPORT

KINGJOY products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official KINGJOY website. Keep your proof of purchase for any warranty claims.

For technical support, troubleshooting assistance, or inquiries about replacement parts, please contact KINGJOY customer service through their official channels. Contact information can typically be found on the product packaging or the brand's website.

© 2023 KINGJOY. All rights reserved. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07BC3W93R>

More documents and user manuals: <https://manuals.plus/>