

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nerf](#) /

› [Nerf Elite Digital Target Instruction Manual](#)

### Nerf NER0150

# Nerf Elite Digital Target Instruction Manual

Model: NER0150

## INTRODUCTION

The Nerf Elite Digital Target is designed to enhance your Nerf blasting experience with interactive lights, sounds, and multiple game modes. It's perfect for sharpening your aim, practicing solo, or engaging in competitive team play. This manual provides essential information for setting up, operating, and maintaining your digital target.



Figure 1: Front view of the Nerf Elite Digital Target, showcasing its interactive target zones and digital display.

## SAFETY INFORMATION

---

- **CHOKING HAZARD:** Small parts. Not for children under 3 years.
- Always use official Nerf darts. Other darts may not function properly or could cause damage.
- Do not aim at eyes or face.
- Adult supervision is recommended during play.
- Ensure the target is placed on a stable surface or securely mounted to prevent tipping.

## PACKAGE CONTENTS

---

- 1 x Nerf Elite Digital Target
- 1 x Instruction Manual

*Note: 3 AA batteries are required and not included. Nerf blasters and darts are sold separately.*

## SETUP

---

### 1. Battery Installation:

- Locate the battery compartment on the back of the target.
- Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
- Insert 3 new AA (LR6) alkaline batteries, ensuring correct polarity (+/-).
- Replace the cover and tighten the screw.

### 2. Stand Setup:

The Nerf Elite Digital Target features an adjustable stand for tabletop use or can be wall-mounted.

- To use the stand, pull out the integrated kickstand from the back of the target.
- Adjust the kickstand to your desired angle for optimal stability and visibility. The stand has multiple grooves to set different angles.



Figure 2: Side view of the target showing the adjustable kickstand extended for tabletop use.

### 3. Wall Mounting (Optional):

- For wall mounting, locate the keyhole slots on the back of the target.
- Use appropriate hardware (screws, anchors - not included) suitable for your wall type.
- Ensure the target is securely mounted before use.

## OPERATING INSTRUCTIONS

---

The Nerf Elite Digital Target offers three interactive game modes with lights and sounds to keep track of your score.



Figure 3: Diagram highlighting the interactive lights & sounds, digital scoreboard, and adjustable stand/wall mount options.

**1. Power On/Off:**

- Locate the ON/OFF switch on the side of the target.
- Slide the switch to the "ON" position to power up the target. You will hear a startup sound.

**2. Selecting Game Modes:**

- Press the "Mode" button on the front panel to cycle through the available game modes. The digital display will show the current mode.
- Press the "Selection" button to confirm your chosen game mode.

**3. Game Modes Overview:**

- Mode 1 (Points Accumulation):** Hit any target zone to score points. The center bullseye is worth 50 points, inner rings 20 points, and outer rings 10 points. The digital display will show your accumulated score.
- Mode 2 (Speed Challenge):** Target zones will light up randomly. Hit the lit-up zone as quickly as possible to score. The faster you hit, the higher your score.
- Mode 3 (Accuracy Test):** Specific target zones will light up in a sequence. Hit them in the correct order to progress and score maximum points.

**4. Solo and Team Play:**

- The digital scoreboard supports both solo and team play scoring.

- In team play, players take turns, and the target will track scores for each team.

Video 1: Official demonstration of the Nerf Elite Digital Target, showcasing its interactive features and game modes.

## MAINTENANCE


- **Cleaning:** Wipe the target with a dry, soft cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the target in a cool, dry place away from direct sunlight when not in use. Remove batteries if storing for extended periods to prevent leakage.
- **Battery Replacement:** Replace batteries when the lights dim, sounds become distorted, or the target stops responding.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Target does not power on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new AA batteries.
Target does not register hits consistently.	Darts used are not official Nerf darts or are damaged. Target sensors are obstructed.	Use only official Nerf darts. Ensure target zones are clean and unobstructed.
Sounds are distorted or lights are dim.	Low battery power.	Replace all 3 AA batteries with new ones.

## SPECIFICATIONS

- **Model Number:** NER0150
- **Dimensions:** 11.75" (W) x 9.25" (H) x 1.75" (D)
- **Weight:** Approximately 15.8 ounces (0.45 kg)
- **Material:** Plastic
- **Color:** Blue/Orange
- **Power Source:** 3 x AA (LR6) 1.5V Alkaline Batteries (not included)
- **Recommended Age:** 8 years and up

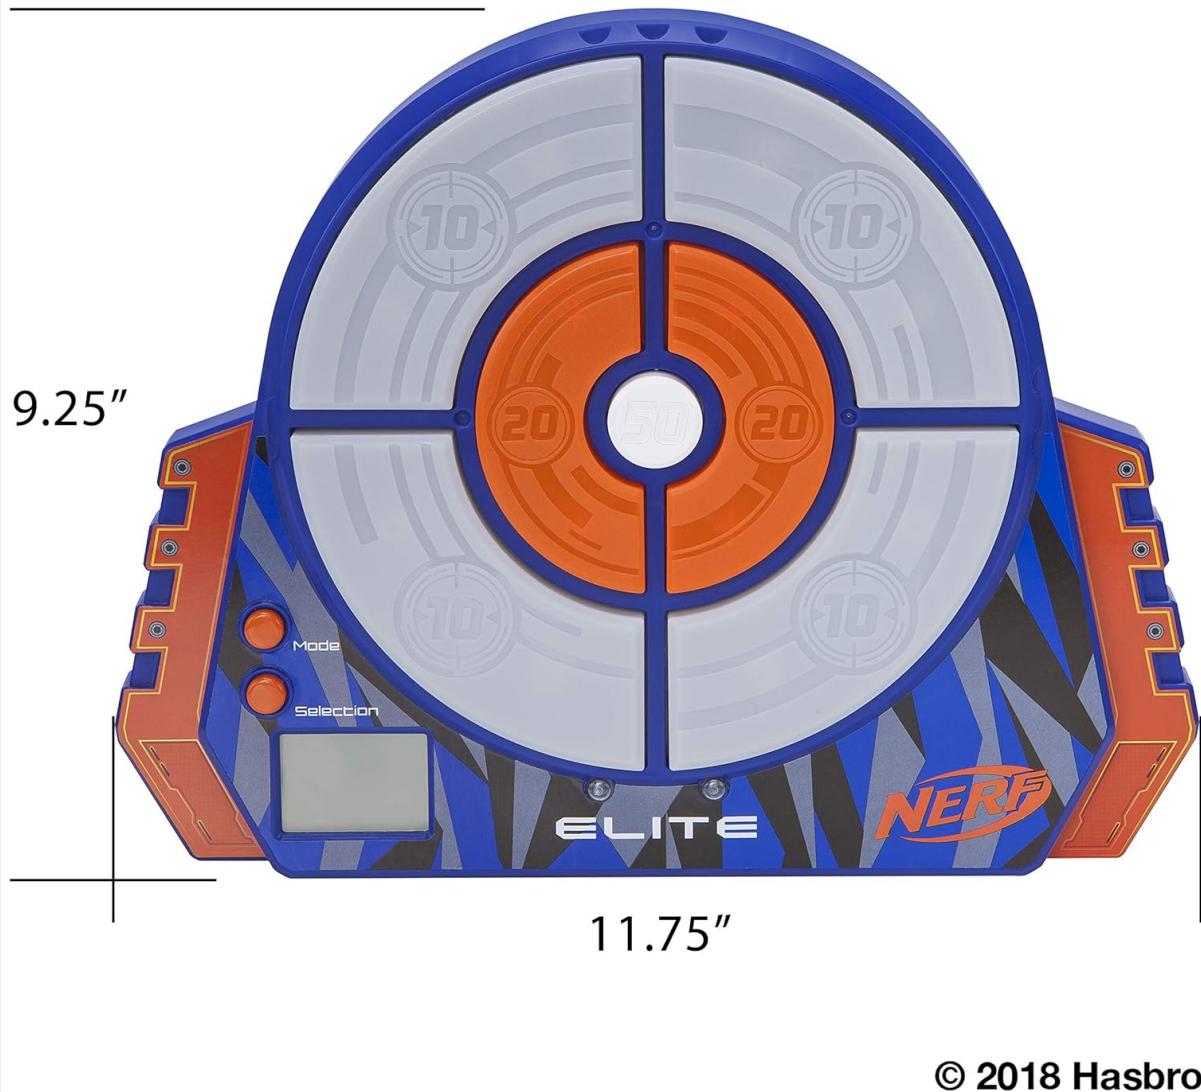

© 2018 Hasbro

Figure 4: Image illustrating the dimensions of the Nerf Elite Digital Target.

## **WARRANTY & SUPPORT**

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Nerf website. Keep your purchase receipt as proof of purchase.

© 2025 Nerf. All rights reserved.