

## Magic Sing TAG13

# Magic Sing Tagalog 13 Song Chip Instruction Manual

Model: TAG13

## INTRODUCTION

---

This manual provides essential instructions for the installation and operation of your Magic Sing Tagalog 13 Song Chip. This chip expands your karaoke system's song library with 200 popular Tagalog and English songs, enhancing your singing experience. Please read this manual thoroughly before use to ensure proper functionality and longevity of your product.

The Magic Sing Tagalog 13 Song Chip is compatible with various Magic Sing and Leadsinger karaoke systems, including models such as LEADSINGER KARAOKE LS-2000, LS-2100, LS-2700, LS-3000, LS-3700, LS-3700W, MagicSing ET23PRO, ET23KH, ET25K, ET9K, ET19Kv, ET18Kv, ET13K, ET12K, MT14K, ET15K, ET21K, EG-18000, ED-11000, ED-9000, ED-8000, ED-7000, ED-6000, and ED-2000 (Magic Sing II).



Image: Packaging for the Magic Sing Tagalog 13 Song Chip.

## SETUP

---

- 1. Identify Chip Slot:** Locate the song chip slot(s) on your Magic Sing or Leadsinger karaoke system. These are typically found on the main unit or microphone. Refer to your karaoke system's specific manual for exact location if unsure. The product is designed for systems with 3 or more slots.
- 2. Insert Song Chip:** Carefully align the Magic Sing Tagalog 13 Song Chip with the designated slot. Ensure the chip is oriented correctly (usually with the label facing up or as indicated by the system). Gently push the chip into the slot until it is fully seated. Do not force the chip, as this may cause damage.
- 3. Power On System:** Connect your karaoke system to a power source and your television or display unit as per your system's instructions. Power on the karaoke system.

4. **Verify Chip Recognition:** Once the system powers on, it should automatically detect the new song chip. A message on your screen or an indicator light may confirm successful installation. If the songs do not appear, power off the system, re-insert the chip, and power on again.

<b>WWW.MAGICKARAOKE.COM</b>			
<b>Xtreme Collection Vol.3</b>			
<b>Song Title</b>	<b>No.</b>	<b>Version of :</b>	<b>Composed by :</b>
AKO'Y SA 'YO IKA'Y AKIN	4661	FIRST CIRCLE	JEREMIAS BUNDA
ALL MY LIFE	4662	AMERICA	BECKLEY
ALL OF A SUDDEN	4663	MATT MONRO	
ALL THE LOVE IN THE WORLD	4664	CORRS	LANGE, CORR / CORR
ALL THIS TIME	4665	TIFFANY	T. JAMES/S. MCCLINTOCK
ANG GUGMANG GIBATI KO	4666	VISAYAN SONG	F. ESTELLORE
BAKIT NGAYON	4667	JULIE ANNE SAN JOSE	
BASANG-BASA SA ULAN	4668	AEGIS	CELSO E. ABENOJA
BEAUTY AND A BEAT	4669	JUSTINE BIEBER FEAT. NICKI MINAJ	M. MARTIN/A. ZASLAVSKI
BETCHA BY GOLLY WOW	4670	STYLISTICS	BELL AND CREED
BISAN SA DAMGO LANG	4671	VISAYAN SONG	MIL VILLAREAL
BIZARRE LOVE TRIANGLE	4672	FRENTE	MORRIS / HOOK
BOULEVARD	4673	DAN BYRD	
BRIDGES	4674	FLORA PUREM	
BROWN EYES	4675	DESTINY'S CHILD	AFANASIEFF/KNOWLES
BUKO	4676	JIREH LIM	JIREH LIM
CALL ME MAYBE	4677	CARLY RAE JEPSEN	JOSH RAMSAY/ CROW TAVISH
CAN'T CRY HARD ENOUGH	4678	WILLIAM BROTHERS	B.BROWN/K.TRIBBLE
CAN'T FIGHT THE MOONLIGHT	4679	LEANN RIMES	DIANNE WARREN
CHA CHA DABARKADS	4680	RYZZA MAE DIZON/ MANALO/BAYOLA	
CHANGE THE WORLD	4681	ERIC CLAPTON	KENNEDY/PATRICK/SIMS
CHASING PAVEMENTS	4682	ADELE	FRANCIS WHITE/ ADELE ADKINS
CLOSER YOU AND I	4683	GINO PADILLA	LOUIE OCAMPO/ GINA TABUENA
DANCE AGAIN	4684	JENNIFER LOPEZ	REDONE/IGLESIAS/ NOGHARANI
DAV LIGHT	4685	MARON 5	LEVINE/MARTIN/

DALIGTI	4685	MARTIN/LEVY	MARTIN/LEVY
DEEP	4686	BINOCULAR	RUDOLF
DI KO NA MAPIGILAN	4687	SEX BOMB GIRLS	
DIAMONDS	4688	RIHANNA	FURLER/LEVIN/ ERICKSEN/HERMANSEN
DIARY	4689	BREAD	DAVID GATES
DIE YOUNG	4690	KESHA	GOTTWALD/LEVIN/ RUESS/SEBERT

www.enter-tech.com 1

Image: A Magic Sing Song Chip next to a compatible karaoke microphone, illustrating where the chip might be inserted.

## OPERATING INSTRUCTIONS

After successful installation, you can access the new songs added by the Tagalog 13 Song Chip. A hard copy of the song list is included with your purchase to help you navigate the new additions.

1. **Access Song List:** Use your karaoke system's remote control or on-screen menu to access the song selection interface. The new songs from the Tagalog 13 chip will be integrated into the system's song library.
2. **Browse Songs:** Refer to the physical song list provided with the chip. This list contains song titles, numbers, versions, and composers. You can typically search for songs by number, title, or artist using your karaoke system's controls.
3. **Select and Play:** Enter the song number or select the desired song from the on-screen list. Press the play button to begin singing.
4. **Adjust Settings:** Use your karaoke system's controls to adjust microphone volume, music volume, echo, and other audio settings to your preference.

## Tagalog 13 Song List Overview

The following images display pages from the included song list, providing a reference for the songs available on the Tagalog 13 Magic Sing Song Chip.



Image: Page 1 of the Tagalog 13 Song Chip list, showing song titles like "Ako'y Sa 'Yo Ika'y Akin" and "All My Life".



Image: Page 2 of the Tagalog 13 Song Chip list, showing song titles like "Dito Sa Puso Ko" and "Don't Cry Out Loud".



Image: Page 3 of the Tagalog 13 Song Chip list, showing song titles like "I Do" and "I Don't Wanna Lose Your Love".



Image: Page 4 of the Tagalog 13 Song Chip list, showing song titles like "Let The Love Begin" and "Lift Up Your Hands".



Image: Page 5 of the Tagalog 13 Song Chip list, showing song titles like "One In A Million You" and "One More Night".

 


Image: Page 6 of the Tagalog 13 Song Chip list, showing song titles like "Skyscraper" and "Some Nights".



Image: Page 7 of the Tagalog 13 Song Chip list, showing song titles like "Waiting For Your Love" and "We Are Never Ever Getting Back Together".

## MAINTENANCE

---

- **Handling:** Always handle the song chip by its edges. Avoid touching the metal contacts to prevent damage from oils or static electricity.
- **Storage:** When not in use, store the song chip in its original packaging or a protective case to prevent dust accumulation and physical damage.
- **Cleaning:** If the metal contacts appear dirty, gently wipe them with a clean, dry, lint-free cloth. Do not use liquids or abrasive cleaners.
- **System Maintenance:** For maintenance of your karaoke system, refer to its specific user manual.

## TROUBLESHOOTING

---

**Problem: Song chip not recognized / Songs do not appear.**

**Solution:**

- Ensure the song chip is fully and correctly inserted into the slot. Power off the karaoke system, remove the chip, re-insert it firmly, and power on again.
- Check for any visible damage to the chip's contacts.
- Verify that your karaoke system model is listed as compatible with the Tagalog 13 Song Chip.

**Problem: Audio issues (no sound, distorted sound).**

**Solution:**

- This is likely related to the karaoke system or its connection to the audio output (TV, speakers). Refer to your karaoke system's manual for audio troubleshooting.
- Ensure all cables (audio, video) are securely connected.

## SPECIFICATIONS

---

Feature	Detail
Brand	Magic Sing
Model Name	TAG13
Item Type Name	SONGPACK

Connectivity Technology	40 pins
Included Components	Song list (hard copy)
Item Weight	1.58 Ounces
UPC	688948340886
Manufacturer	entertech
Compatible Karaoke Systems	LEADSINGER KARAOKE LS-2000, LS-2100, LS-2700, LS-3000, LS-3700, LS-3700W, MagicSing ET23PRO, ET23KH, ET25K, ET9K, ET19Kv, ET18Kv, ET13K, ET12K, MT14K, ET15K, ET21K, EG-18000, ED-11000, ED-9000, ED-8000, ED-7000, ED-6000, ED-2000 (Magic Sing II)

## WARRANTY AND SUPPORT

---

For specific warranty information regarding your Magic Sing Tagalog 13 Song Chip, please refer to the documentation included with your purchase or contact the seller directly. Warranty terms may vary depending on the retailer and region.

If you encounter any issues that cannot be resolved using the troubleshooting guide, or for further assistance, please contact the manufacturer, Entertech, or the authorized seller, magicsing, through their official support channels.