

## Nilfisk E150.2-10 H X-TRA

# Kew Nilfisk Alto E150.2-10 H X-TRA Pressure Washer User Manual

Model: E150.2-10 H X-TRA (128471201)

## 1. INTRODUCTION

---

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Kew Nilfisk Alto E150.2-10 H X-TRA Pressure Washer. Please read this manual thoroughly before using the product and retain it for future reference.

## 2. SAFETY INFORMATION

---

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. This pressure washer generates high-pressure water jets, which can be dangerous if misused. Never direct the water jet at people, animals, electrical equipment, or the unit itself. Always wear appropriate personal protective equipment, including eye protection and sturdy footwear. Ensure the power supply matches the unit's requirements and use a residual current device (RCD) for added protection. Disconnect the power supply before performing any maintenance or cleaning.

## 3. PACKAGE CONTENTS

---

Upon unpacking, verify that all components are present and undamaged. The standard package for your Nilfisk E150.2-10 H X-TRA Pressure Washer includes:

- 1 x 10m Armoured High-Pressure Hose on a Hose Reel
- 1 x G4 Spray Handle
- 1 x G4 ClickClean Extension Lance
- 1 x ClickClean Powerspeed Nozzle
- 1 x ClickClean Tornado Nozzle
- 1 x ClickClean Foam Sprayer Bottle
- 1 x 5m Mains Supply Cable
- 1 x Nozzle Jet Cleaning Tool



Image: The Nilfisk E150.2-10 H X-TRA Pressure Washer shown with its main unit, spray handle, extension lance, various nozzles, foam sprayer bottle, and hose reel.

## 4. SETUP AND ASSEMBLY

---

1. **Unpack the Unit:** Carefully remove all components from the packaging.
2. **Attach the Handle:** Secure the telescopic aluminium handle into its designated slots on the main unit.
3. **Connect High-Pressure Hose:** Attach the 10m armoured high-pressure hose from the hose reel to the pressure washer's outlet. Ensure a secure connection.
4. **Assemble Spray Handle and Lance:** Connect the G4 spray handle to the G4 ClickClean extension lance.
5. **Attach Nozzle:** Select the desired ClickClean nozzle (Powerspeed or Tornado) and attach it to the extension lance. The ClickClean system allows for quick and easy nozzle changes.
6. **Connect Water Supply:** Connect a garden hose (not supplied) to the water inlet of the pressure washer. Ensure the water supply is turned on before starting the unit. The maximum water feed temperature is 40°C.
7. **Connect Power:** Plug the 5m mains supply cable into a suitable 240V electrical outlet.



Image: A side view of the Nilfisk E150.2-10 H X-TRA Pressure Washer, highlighting its compact design and hose reel.

## 5. OPERATING INSTRUCTIONS

---

1. **Preparation:** Ensure all connections are secure and the water supply is fully open.
2. **Priming the Pump:** Before switching on the motor, squeeze the trigger on the spray handle to allow water to flow through the system and expel any air. Continue until a steady stream of water emerges.
3. **Starting the Unit:** Switch on the pressure washer. The induction motor will start, and the pump will build pressure.
4. **Using the Spray Handle:** Squeeze the trigger to activate the high-pressure jet. Release the trigger to stop the flow.
5. **Changing Nozzles:** To change nozzles, turn off the unit and release any residual pressure by squeezing the trigger. Detach the current nozzle and attach the desired ClickClean nozzle.
6. **Using the Foam Sprayer:** Fill the ClickClean Foam Sprayer Bottle with appropriate cleaning solution. Attach it to the lance. The unit will then apply foam.
7. **Shutting Down:** Turn off the pressure washer. Turn off the water supply. Squeeze the trigger to release any remaining pressure in the system. Disconnect the water hose and power cable.

## 6. MAINTENANCE

---

- **Nozzle Cleaning:** Regularly clean the nozzles using the provided nozzle jet cleaning tool to prevent blockages and maintain optimal spray patterns.

- **Water Filter:** Check and clean the water inlet filter periodically to prevent debris from entering the pump.
- **Hose and Connections:** Inspect the high-pressure hose and all connections for wear, damage, or leaks before each use. Replace damaged parts immediately.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Ensure all water is drained from the pump and hose before storing to prevent freezing damage. Utilize the hose reel for neat storage of the high-pressure hose.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Motor does not start	No power supply; tripped circuit breaker; faulty switch.	Check power connection; reset circuit breaker; contact service.
Low pressure	Insufficient water supply; clogged nozzle; air in pump; worn seals.	Ensure full water flow; clean nozzle; prime pump; contact service.
Pulsating pressure	Air in pump; restricted water flow; dirty inlet filter.	Prime pump; check water supply; clean inlet filter.
Water leaks	Loose connections; damaged O-rings or seals.	Tighten connections; replace damaged parts.

## 8. TECHNICAL SPECIFICATIONS

Specification	Value
Model Number	128471201
Max. Pressure	150 bar
Flow Rate	500 L/hr.
Motor Power	2,100W
Max. Water Feed Temperature	40°C
Hose Length	10m
Item Weight	20.8 kg
Product Dimensions (L x W x H)	37.5 x 39 x 78 cm
Power Source	Corded Electric (240V)
Colour	Black, Navy Blue, Grey
Certification	CSA, CE

## 9. WARRANTY AND SUPPORT

Your Kew Nilfisk Alto E150.2-10 H X-TRA Pressure Washer comes with a standard **2-year warranty** from the date of purchase. You can extend this warranty to **5 years** by registering your product online. To qualify for the extended warranty, registration must be completed within 30 days of purchase.

**Product Registration:** Visit [www.yournilfisk.com](http://www.yournilfisk.com) to register your product.

For technical support, spare parts, or warranty claims, please contact Nilfisk customer service through their official website or authorized service centers. Please have your model number (128471201) and proof of purchase ready when contacting

support.