

[Manuals.plus](#) /

> [ZENY](#) /

> ZENY Portable Clothes Washing Machine Mini Twin Tub Washing Machine 13lbs Capacity with Spin Dryer User Manual

ZENY ZENYJA019042T

ZENY Portable Twin Tub Washing Machine User Manual

Model: ZENYJA019042T | Brand: ZENY

INTRODUCTION

Thank you for choosing the ZENY Portable Twin Tub Washing Machine. This compact and efficient appliance is designed to provide convenient laundry solutions for small living spaces such as apartments, dorms, RVs, and more. Featuring separate tubs for washing and spin-drying, it offers powerful performance while saving space and time. Please read this manual thoroughly before operation to ensure safe and optimal use of your new washing machine.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before using the appliance.
- Do not immerse the electrical parts of the machine in water or other liquids.
- Ensure the machine is properly grounded to prevent electrical shock.
- Keep out of reach of children and pets.
- Always unplug the machine from the power outlet when not in use, before cleaning, or before performing any maintenance.
- Place the washing machine on a stable, level, and dry surface.
- Do not overload the machine beyond its stated capacity.
- Ensure the drain hose is properly positioned to allow for complete water drainage and prevent flooding.
- Do not wash waterproof materials or clothing that may float, as this can cause imbalance.
- Avoid touching the spin dryer basket until it has completely stopped rotating.

PARTS INCLUDED

- ZENY Portable Twin Tub Washing Machine
- Inlet Pipe
- Drain Pipe



Image: Overview of the ZENY Portable Twin Tub Washing Machine.

SETUP GUIDE

Unpacking

- Carefully remove the washing machine from its packaging.
- Inspect the machine for any signs of damage during transit. If damaged, do not operate and contact customer support.
- Remove all packing materials, including any protective films or tapes.

Placement

- Choose a location that is stable, level, and can support the weight of the machine when full of water and clothes.
- Ensure the location is near a water source and a drain.
- Allow sufficient space around the machine for ventilation and operation.



Image: The portable washing machine placed in a typical laundry area, demonstrating its compact size.

Connecting Water and Drain Hoses

- Connect the inlet pipe to the water inlet port on the top of the washing machine.
- Place the other end of the inlet pipe into a water source (e.g., a faucet or bucket).
- Position the drain pipe to allow water to flow into a sink, bucket, or drain. Ensure the drain hose is not kinked

or blocked.

Twin Tubs

Featuring spin wash and spin dry



Image: Close-up view showing the water inlet on top and the drain hose on the side of the machine.

OPERATING INSTRUCTIONS

The ZENY Portable Twin Tub Washing Machine features two separate tubs: one for washing and one for spin-drying. It operates with simple knob controls for wash time, wash mode, and spin time.



Image: Top view of the washing machine highlighting the separate wash and spin dry tubs.

Washing Cycle

1. **Load Clothes:** Open the lid of the wash tub and place your clothes inside. Do not exceed the maximum load capacity (13 lbs).
2. **Add Water and Detergent:** Fill the wash tub with water using the inlet pipe. Add the appropriate amount of laundry detergent.
3. **Select Wash Mode:** Turn the 'Select Switch' knob to choose your desired wash mode: 'Soft' for delicate items, 'Standard' for normal loads, or 'Drain' to empty the wash tub.
4. **Set Wash Timer:** Turn the 'Wash Timer' knob to set the desired washing time, up to 15 minutes. The machine will start washing automatically.
5. **Drain Water:** Once the wash cycle is complete, turn the 'Select Switch' knob to 'Drain' to empty the water from the wash tub.
6. **Rinse (Optional):** For rinsing, refill the wash tub with clean water and run a short wash cycle (e.g., 3-5 minutes) without detergent, then drain again.

Spin Drying Cycle

1. **Transfer Clothes:** Carefully transfer the washed clothes from the wash tub to the spin dryer tub.
2. **Distribute Evenly:** Ensure clothes are distributed evenly inside the spin tub to prevent excessive vibration and noise during operation. Place the spin cap on top of the clothes.
3. **Set Spin Timer:** Close the spin tub lid and turn the 'Spin Timer' knob to set the desired spin drying time, up to 5 minutes. The spin dryer will start.
4. **Wait for Stop:** Allow the spin dryer to come to a complete stop before opening the lid and removing clothes.



Image: Detailed view of the control panel with knobs for Wash Timer, Select Switch (Soft/Standard/Drain), and Spin Timer.



Image: View inside the spin dryer tub, showing the perforated basket for water extraction.

MAINTENANCE AND CARE

Cleaning the Exterior

- Wipe the exterior of the machine with a soft, damp cloth after each use.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface.

Cleaning the Interior

- Periodically clean the inside of the wash and spin tubs to prevent residue buildup.
- You can run a short wash cycle with just water and a small amount of white vinegar to help remove odors and mineral deposits.
- Ensure the drain hose is clear of lint and debris.

Storage

- Before storing, ensure both tubs are completely empty and dry.
- Store the machine in a cool, dry place, away from direct sunlight and extreme temperatures.
- If storing for an extended period, consider covering the machine to protect it from dust.

TROUBLESHOOTING GUIDE

If you encounter any issues with your ZENY Portable Twin Tub Washing Machine, please refer to the following table for common problems and their solutions.

| Problem | Possible Cause | Solution |
|--|--|---|
| Machine does not start | Not plugged in; Power outage; Timer not set. | Ensure power cord is securely plugged into a working outlet; Check household circuit breaker; Set the Wash or Spin Timer. |
| Water not draining | Drain hose kinked or blocked; Drain mode not selected. | Straighten the drain hose and check for obstructions; Turn the 'Select Switch' to 'Drain'. |
| Excessive vibration or noise during spin | Clothes unevenly distributed in spin tub; Machine not on a level surface; Overloaded spin tub. | Rearrange clothes evenly in the spin tub; Place machine on a flat, stable surface; Reduce the amount of clothes in the spin tub. |
| Clothes not clean enough | Insufficient detergent; Overloaded wash tub; Incorrect wash mode. | Increase detergent amount; Reduce load size; Select appropriate wash mode ('Standard' for most loads). |
| Water leaking | Hoses not securely connected; Overfilling the tub; Damaged hose. | Check and tighten all hose connections; Do not fill water above the maximum fill line; Inspect hoses for damage and replace if necessary. |

PRODUCT SPECIFICATIONS

| Feature | Specification |
|--------------------------------|----------------------|
| Model Number | ZENYJA019042T |
| Item Weight | 26.5 pounds |
| Product Dimensions (D x W x H) | 13.5"D x 23"W x 26"H |
| Capacity | 13 Pounds |
| Voltage | 110 Volts |
| Controls Type | Knob |
| Maximum Rotational Speed | 1300 RPM |
| Number of Washing Cycles | 2 (Soft, Standard) |
| Number of Drying Cycles | 1 (Spin) |

| Feature | Specification |
|---------------------------------|---------------|
| Laundry Appliance Drum Material | Plastic |
| Installation Type | Free Standing |



Image: Diagram showing the dimensions of the ZENY Portable Twin Tub Washing Machine.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your product packaging or visit the official ZENY website. Keep your purchase receipt for warranty claims. You can also visit the [ZENY Store on Amazon](#) for more products and support.

