

[Manuals.plus](#) /

› [Arendo](#) /

› Arendo Gallant Stainless Steel Kettle User Manual

Arendo B07BDLBB4F

Arendo Gallant Stainless Steel Kettle

Model: B07BDLBB4F

INTRODUCTION

Thank you for choosing the Arendo Gallant Stainless Steel Kettle. This appliance is designed for efficient water heating with precise temperature control and a convenient keep-warm function. Please read this manual carefully before first use to ensure safe and optimal operation.



Image: The Arendo Gallant Stainless Steel Kettle, showcasing its sleek black design and integrated digital display on the handle.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the lid is securely closed before operating.
- The kettle features boil-dry protection and overheat protection. If the kettle is accidentally switched on without water, it will automatically shut off.



Image: Diagram highlighting the safety features of the Arendo kettle, including overheat protection, double-wall design, Strix controller, safety lid, and boil-dry protection, all certified by Intertek GS.

PACKAGE CONTENTS

Please check the package contents upon unboxing:

- Arendo Gallant Stainless Steel Kettle
- 360° Rotatable Power Base
- 3 x Washable Limescale Filters (1 pre-installed, 2 spares)
- User Manual (this document)



Image: The Arendo Gallant kettle, its packaging, and the included three spare limescale filters, demonstrating the complete set.

SETUP

1. **Unpack:** Carefully remove all packaging materials and the kettle from the box.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water up to the MAX line. Boil the water (select 100°C) and then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Positioning:** Place the power base on a stable, flat, and dry surface, away from the edge of the counter. Ensure the power cord is not dangling where it can be tripped over. The base features integrated cable winding for neat storage.
4. **Connect Power:** Plug the power cord into a grounded 220-240V, 50/60Hz electrical outlet.
5. **Kettle Placement:** Place the kettle securely onto the 360° rotatable power base. It can be placed in any direction.



Image: The Arendo Gallant kettle positioned on a kitchen countertop, ready for use, demonstrating its compact and stable design.

OPERATING INSTRUCTIONS

Filling the Kettle

- Remove the kettle from its base.
- Open the lid.
- Fill the kettle with fresh water. Do not fill below the MIN (0.5L) mark or above the MAX (1.5L) mark. Overfilling may cause boiling water to spill out. The water level indicator is located on the side of the kettle.
- Close the lid firmly.
- Place the kettle back on the power base.

Temperature Selection and Boiling

The Arendo Gallant kettle offers 7 selectable temperature levels for various beverages:

1. Ensure the kettle is filled with water and placed on the base.
2. Press the **ON/OFF** button (power symbol) to activate the kettle. The LED display will light up.
3. Press the **SET TEMP °C** button repeatedly to cycle through the desired temperature settings:
 - **40°C**: Ideal for baby food or lukewarm water.
 - **50°C**: Suitable for hot lemon drinks.
 - **60°C**: Recommended for white tea.
 - **70°C**: Perfect for green tea.
 - **80°C**: Good for instant coffee.
 - **90°C**: Optimal for herbal tea.
 - **100°C**: For black tea, instant noodles, or boiling water.

The selected temperature will be displayed on the LED screen.

4. Once the desired temperature is selected, the kettle will automatically begin heating. The LED display will show the current water temperature as it rises.
5. The kettle will automatically shut off once the target temperature is reached. A beep sound will indicate completion.

Keep Warm Function

The kettle can maintain the selected temperature for up to 30 minutes:

1. After selecting your desired temperature (as described above), press the **KEEP WARM** button.
2. The kettle will heat the water to the selected temperature and then maintain it for 30 minutes.
3. To deactivate the keep-warm function, press the **ON/OFF** button or lift the kettle from its base.



Image: Close-up of the Arendo kettle's handle with the LED display showing "100" and the control buttons: SET TEMP °C, KEEP WARM, and ON/OFF, illustrating the intuitive temperature control interface.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

General Cleaning

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Never immerse the kettle or its power base in water or any other liquid.

Limescale Filter Cleaning

The kettle is equipped with a removable and washable limescale filter to prevent scale particles from entering your

beverage.

1. Ensure the kettle is cool and empty.
2. Open the lid and locate the filter at the spout.
3. Gently unclip and remove the filter.
4. Rinse the filter under running water, brushing away any limescale deposits. For stubborn deposits, soak the filter in a descaling solution.
5. Reinsert the clean filter back into its position until it clicks securely.



Image: Close-up view of the Arendo kettle's open lid, showing the integrated and removable limescale filter at the spout, with a spare filter shown separately, emphasizing its ease of cleaning and replacement.

Descaling

Limescale buildup can affect the kettle's performance and energy efficiency. Descale your kettle regularly, especially in

areas with hard water.

- Use a commercial descaling solution suitable for kettles, or a natural solution like white vinegar or citric acid.
- Follow the instructions on the descaling product. For natural solutions, fill the kettle with a mixture of water and vinegar (1:2 ratio) or citric acid solution.
- Boil the solution and let it stand for at least 30 minutes, or longer for heavy scale.
- Empty the kettle and rinse it thoroughly several times with fresh water to remove any residue and odor.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in. No power at the outlet. Kettle not properly seated on the base. Boil-dry protection activated.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Lift the kettle and reseal it firmly on the base. Allow the kettle to cool down for 10-15 minutes, then refill with water and try again.
Water does not heat up.	Insufficient water (below MIN level). Lid not closed properly.	Fill water above the MIN mark. Ensure the lid is securely closed.
Kettle switches off too soon.	Limescale buildup. Boil-dry protection activated.	Descal the kettle as per the Maintenance section. Allow the kettle to cool down, then refill with water.
Water tastes strange or has particles.	New kettle residue. Limescale buildup. Filter not installed or dirty.	Perform initial cleaning (boil and discard water several times). Descal the kettle. Ensure the limescale filter is correctly installed and clean.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	Arendo Gallant Stainless Steel Turbo Kettle
Model Number	B07BDLB4F
Power Supply	220-240V, 50/60Hz
Power Consumption	1850 - 2200W
Capacity	1.5 Liters (Max)

Feature	Specification
Temperature Settings	40°C, 50°C, 60°C, 70°C, 80°C, 90°C, 100°C
Keep Warm Function	Up to 30 minutes
Material	Inner: SUS/SAE 304 Stainless Steel; Outer: Plastic (BPA-free)
Dimensions (H x W x D)	25cm x 15cm x 22cm
Power Cable Length	Approx. 73cm
Weight (Kettle / Base)	955g / 492g
Safety Features	Overheat Protection, Boil-Dry Protection, Automatic Shut-off, Safety Lid, Cool-Touch Double Wall Design, GS Certified
Stand-By Consumption	<0.5W



Image: Diagram illustrating the dimensions of the Arendo Gallant kettle, showing its height (25cm), width (15cm), and depth (22cm).



Image: Cross-section view illustrating the Arendo kettle's double-wall design, with stainless steel on the inside and plastic on the outside, providing cool-touch exterior and improved heat insulation.

WARRANTY AND SUPPORT

Arendo products are manufactured with high quality standards. For warranty information and support, please refer to the specific warranty card included with your product or visit the official Arendo website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact Arendo customer support through their official channels. You can find more information and products from Arendo at their Amazon store: [Arendo Amazon Store](#).

