

[Manuals.plus](#) /

> [CedarCraft](#) /

> CedarCraft Greenhouse Cover (43" L x 22" W x 24" H) Instruction Manual

CedarCraft Greenhouse Cover

CedarCraft Greenhouse Cover Instruction Manual

Model: Greenhouse Cover

INTRODUCTION

The CedarCraft Greenhouse Cover is designed to create an optimal microclimate for your plants, allowing for an extended growing season. It provides protection against frost, wind, and pests. This manual provides instructions for the assembly, operation, and maintenance of your greenhouse cover.



Image: CedarCraft Greenhouse Cover in use, protecting plants in a raised planter.

SAFETY INFORMATION

Caution:

- This product contains sharp steel edges. Handle with care during assembly to prevent injury.
- Ensure proper anchoring of the frame to the planter to prevent damage or injury, especially in windy conditions.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present:

- Steel Tube Frame Components
- Plastic Joints/Connectors
- Reinforced Polyethylene Greenhouse Cover
- Frame Clips (for attaching to planter)

Note: Planter is NOT included with this product.

SETUP AND ASSEMBLY

Follow these steps to assemble your CedarCraft Greenhouse Cover:

1. **Assemble the Steel Frame:** Connect the steel tube components using the plastic push-fit connectors. Ensure all connections are secure. The frame is designed for quick assembly.
2. **Attach Frame to Planter:** Position the assembled steel frame onto your compatible CedarCraft planter. Use the provided clips to secure the frame to the planter. This ensures stability and prevents the frame from shifting or being dislodged by wind.

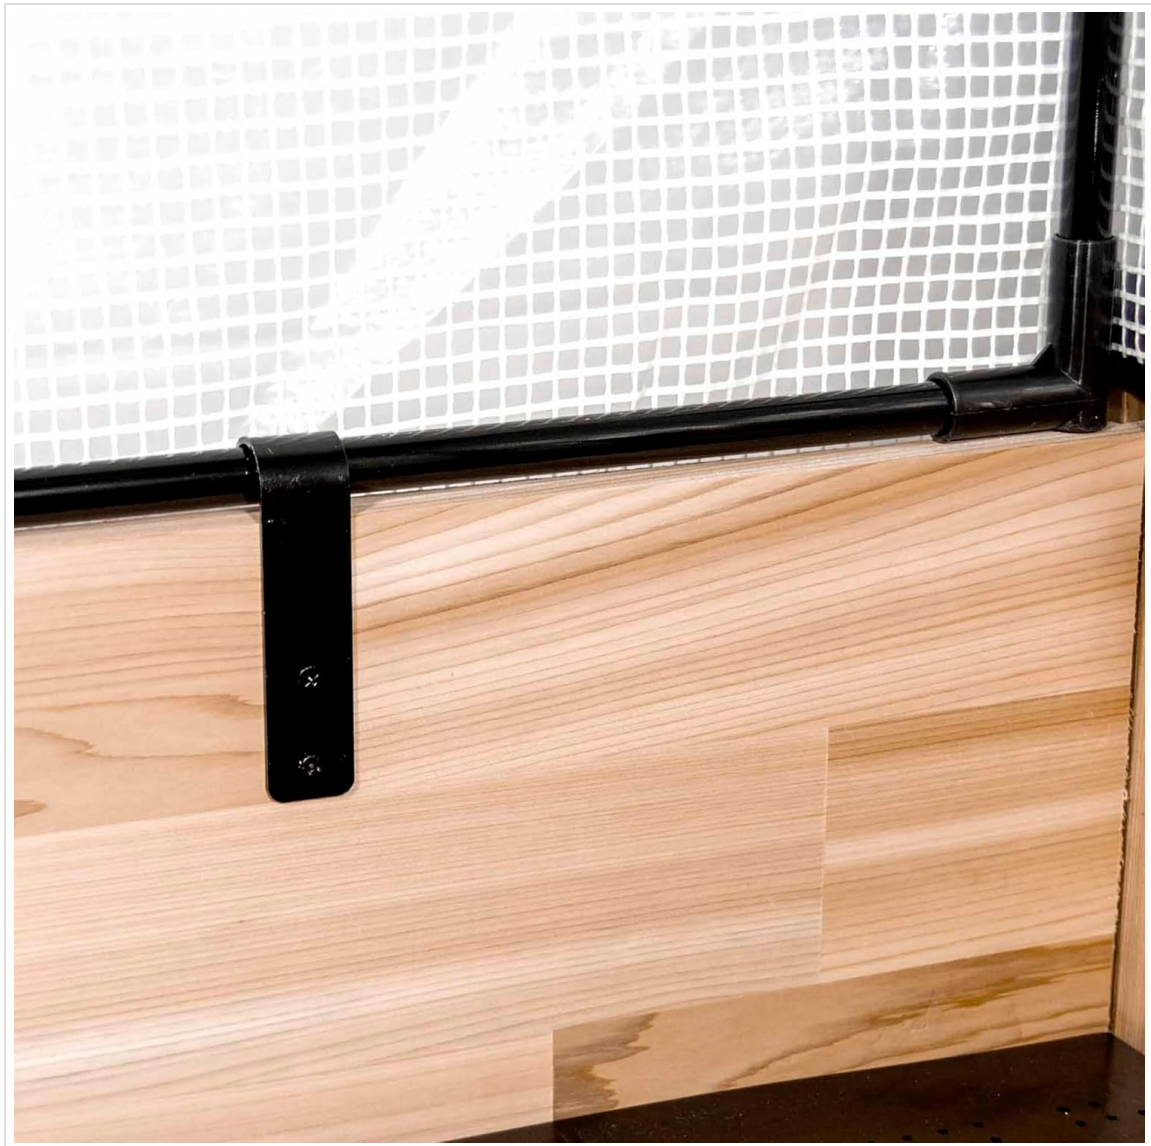 


Image: Detail of the frame clip securing the greenhouse frame to the planter.

3. **Install the Greenhouse Cover:** Drape the reinforced polyethylene cover over the assembled steel frame. The cover is designed to fit snugly over the frame.
4. **Secure the Cover:** The cover features Velcro tabs. Use these tabs to attach the cover securely to the steel frame. This helps maintain the microclimate and prevents the cover from being lifted by wind.

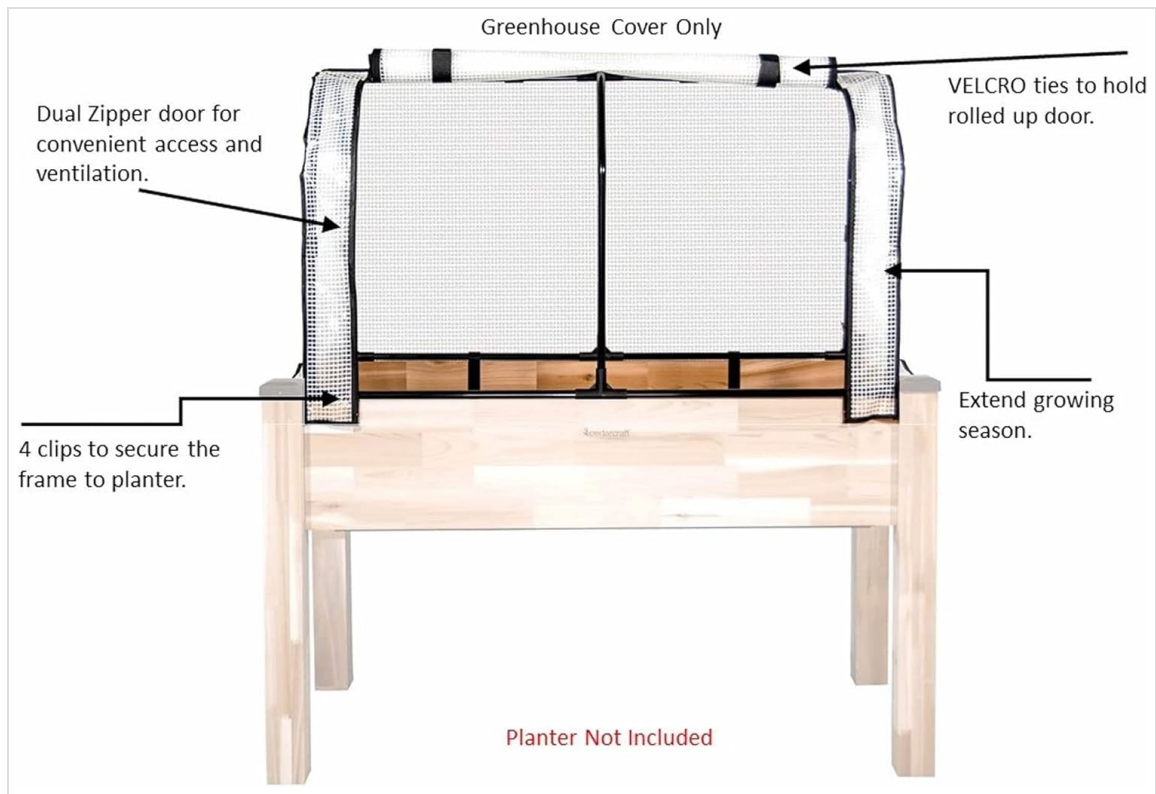 


Image: Overview of the greenhouse cover showing key features like zipper doors and Velcro ties.

OPERATING INSTRUCTIONS

The CedarCraft Greenhouse Cover is designed for ease of use:

- **Accessing Plants:** The cover features dual zipper doors on the front. Unzip these doors to easily access your plants for watering, tending, or harvesting.

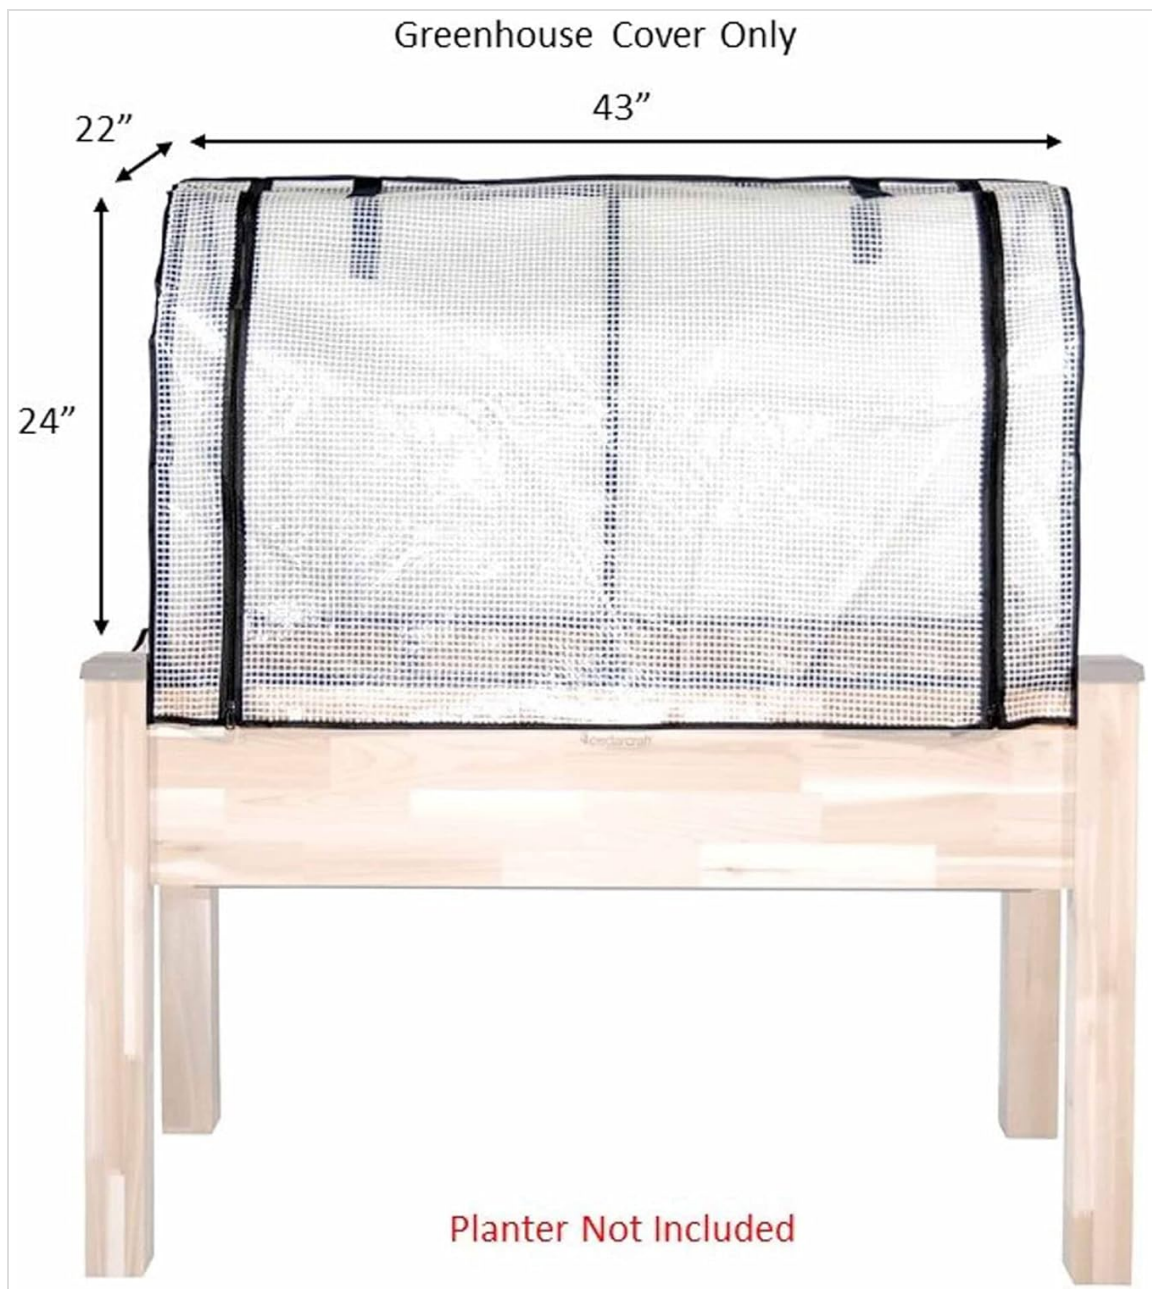


Image: Detail of the zipper mechanism for accessing the greenhouse interior.

- **Ventilation:** For ventilation or extended access, the rolled doors can be held open using the integrated Velcro ties at the top of the frame.
- **Removal:** The entire cover, or the frame with the cover attached, can be easily removed from the planter if not needed, for example, during warmer months or for storage.

MAINTENANCE

To ensure the longevity of your CedarCraft Greenhouse Cover:

- **Cleaning:** Wipe the polyethylene cover with a damp cloth and mild soap as needed. Avoid abrasive cleaners that could damage the material.
- **Frame Inspection:** Periodically check the steel frame and plastic joints for any signs of wear or damage. Ensure all connections remain secure.
- **Zipper Care:** Keep zippers clean and free of debris to ensure smooth operation. Lubricate with a silicone-based spray if they become stiff.
- **Storage:** When not in use, especially during extreme weather or off-season, clean the cover and frame, then store them in a dry, protected area to prevent damage.

TROUBLESHOOTING

If you encounter issues with your greenhouse cover, consider the following:

- **Cover not fitting correctly:** Ensure the steel frame is assembled correctly and fully seated in all plastic joints. Verify that the cover is oriented correctly on the frame.
- **Instability in wind:** Confirm that the frame clips are securely attached to the planter. In very high winds, additional anchoring may be necessary (not provided). Consider temporarily removing the cover during severe weather.
- **Zipper sticking:** Clean any dirt or debris from the zipper teeth. Apply a small amount of zipper lubricant or wax.

For further assistance, please contact CedarCraft customer support.

SPECIFICATIONS

Product Dimensions (L x W x H)	43 inches x 22 inches x 24 inches
Frame Material	Alloy Steel
Cover Material	Reinforced Polyethylene (PE)
Number of Doors	2
Closure Type	Zipper
Compatible Planter Models	CC_SW2349EG, B079Z1DD45, CC_ELV2349EG, B06XH7P7YZ, CC_SW2248SC, B07NYW21FS
UPC	852404002872
ASIN	B07BDP8QT7



Image: Dimensional diagram of the greenhouse cover.

WARRANTY AND SUPPORT

The CedarCraft Greenhouse Cover comes with a **1-year manufacturer's warranty**.

For warranty claims, technical support, or replacement parts, please contact CedarCraft customer service through their official website or the retailer where the product was purchased.