

TableTop King 140 Conveyor Toaster

AvaToast 140 Conveyor Toaster User Manual

Model: 140 Conveyor Toaster | Brand: TableTop King

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before operating this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the toaster is connected to a grounded 120V AC power outlet.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Avoid touching hot surfaces. Use handles or knobs. The exterior of the toaster becomes very hot during operation.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure adequate ventilation around the toaster during operation. Do not block air vents.
- Do not place the toaster near flammable materials or heat sources.
- This appliance is intended for commercial use only.

2. SETUP AND INSTALLATION

Follow these steps to properly set up your AvaToast 140 Conveyor Toaster:

1. **Unpacking:** Carefully remove the toaster from its packaging. Retain packaging for future storage or transport. Inspect the toaster for any shipping damage.
2. **Placement:** Place the toaster on a stable, level, heat-resistant surface. Ensure there is sufficient clearance (at least 6 inches) around all sides for proper ventilation. Do not place it directly against a wall or under cabinets.
3. **Crumb Tray Installation:** Slide the removable crumb tray into its designated slot at the bottom front of the toaster. Ensure it is fully inserted.
4. **Power Connection:** Plug the power cord into a dedicated 120V AC, 800-watt minimum, grounded electrical outlet. Do not use extension cords or adapters.



Image: Side view of the AvaToast 140 Conveyor Toaster, showing the overall unit and the extended crumb tray at the bottom. This view highlights the compact design and the four sturdy legs.

3. OPERATING INSTRUCTIONS

The AvaToast 140 Conveyor Toaster is designed for efficient toasting of various bread products.



Image: Front view of the AvaToast 140 Conveyor Toaster, displaying the control panel with two large black knobs labeled "Bread" and "Buns", and a "Standby" indicator. The conveyor rack is visible at the top.

1. **Power On:** Ensure the toaster is plugged in. The power indicator light (usually orange) will illuminate.
2. **Select Toasting Mode:**
 - Turn the left knob to select the desired toasting mode: "**Bread**" for standard bread slices or "**Buns**" for thicker items like bagels or buns.
 - The right knob controls the conveyor speed, which determines the toasting level. A slower speed results in darker toast.
3. **Preheating:** Allow the toaster to preheat for approximately 5-10 minutes before first use or after extended periods of inactivity. This ensures consistent toasting results.
4. **Loading Product:** Carefully place bread slices, bagels, or buns onto the conveyor belt at the front opening. Do not overload the conveyor.
5. **Toasting Process:** The conveyor will automatically carry the product through the heating elements. Toasted items will exit at the rear chute.
6. **Adjusting Toasting Level:** Adjust the right knob (conveyor speed) as needed to achieve your preferred level of browning. Experiment with different settings for various bread types.
7. **Standby Mode:** When not actively toasting, you can switch the toaster to "Standby" using the right knob to conserve energy while keeping the unit warm for quick resumption of operation.
8. **Power Off:** When finished, turn both knobs to the "Off" position and unplug the toaster from the power outlet.

4. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your AvaToast 140 Conveyor Toaster.

- **Always unplug the toaster and allow it to cool completely before cleaning.**
- **Crumb Tray:** The removable crumb tray should be emptied daily or as needed. Pull the tray out from the front, discard crumbs, and wipe clean with a damp cloth. Reinsert the tray securely.
- **Exterior Cleaning:** Wipe the stainless steel exterior with a soft, damp cloth and mild detergent. Do not use abrasive cleaners, scouring pads, or steel wool, as these can scratch the surface. Dry thoroughly.
- **Interior Cleaning:** For the interior, use a soft brush or vacuum cleaner to remove any accumulated crumbs or debris from the heating elements and conveyor area. Do not use water or liquid cleaners inside the toaster.
- **Conveyor Belt:** Periodically inspect the conveyor belt for any debris or sticking. Clean gently with a dry brush if necessary.
- **Storage:** If storing the toaster for an extended period, ensure it is clean and dry. Store in a cool, dry place.

5. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet issue; circuit breaker tripped.	Ensure power cord is securely plugged in. Check the power outlet with another appliance. Reset the circuit breaker if tripped.

Problem	Possible Cause	Solution
Uneven toasting.	Insufficient preheating; conveyor speed too fast/slow; debris inside.	Allow adequate preheating time. Adjust conveyor speed. Clean interior of toaster to remove crumbs.
Smoke or burning smell.	Accumulated crumbs; food stuck in heating elements.	Immediately unplug the toaster. Allow to cool. Empty and clean crumb tray. Carefully remove any stuck food.
Conveyor belt not moving.	Motor malfunction; obstruction.	Unplug the toaster. Check for any visible obstructions. If the problem persists, contact customer support.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	TableTop King
Manufacturer	AvaToast
Model	140 Conveyor Toaster
Voltage	120 Volts
Wattage	800 watts
Material	Stainless Steel
Color	Silver
Opening Size	3 inches (approximate, inferred from title)
UPC	689267156622
Special Feature	Compact

7. WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical assistance, please contact TableTop King customer support. Keep your purchase receipt for warranty claims.

You can visit the official TableTop King store for more information and contact details:[TableTop King Store on Amazon](#)

When contacting support, please have your product model (140 Conveyor Toaster) and UPC (689267156622) ready.