

[manuals.plus](#) /› [Samsung](#) /› [Samsung 32-inch C32F397FWN Curved Full-HD Monitor Instruction Manual](#)

Samsung C32F397FWN

Samsung 32-inch C32F397FWN Curved Full-HD Monitor Instruction Manual

Brand: Samsung | Model: C32F397FWN

1. INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Samsung 32-inch C32F397FWN Curved Full-HD Monitor. Designed for an immersive viewing experience, this monitor combines a sleek design with advanced display technologies to enhance your daily computing and entertainment.

2. KEY FEATURES

- 1800R Curvature:** Provides a truly immersive viewing experience, allowing you to enjoy big, bold, and stunning panoramic views. The design is inspired by the curve of the human eye for comfortable viewing.
- Ultra-Slim Design:** Features an ultra-slim and sleek profile, measuring less than 0.5 inches thick. The simple circular stand adds a modern aesthetic to any space.
- Vibrant Visuals:** Experience vibrant, stunningly vivid colors with Samsung's Active Crystal Color technology. A 3000:1 contrast ratio delivers deep blacks and bright whites for clear visibility in any scene.
- Energy Efficiency:** The Eco-Saving Plus feature reduces screen brightness to save power, with fluid transitions for even greater energy reduction. The monitor is also constructed without PVC.

3. SETUP GUIDE

3.1 Unpacking and Assembly

Carefully remove all components from the packaging. Assemble the stand by attaching the neck to the base, then secure the assembled stand to the monitor panel. Ensure all connections are firm.



Figure 1: Front view of the Samsung 32-inch C32F397FWN Curved Full-HD Monitor on a desk.

3.2 Connecting Your Monitor

Connect the power adapter to the monitor and a power outlet. Use an HDMI cable to connect your computer or other video source to the monitor's HDMI input. This monitor also supports VGA (D-Sub) connections.



Figure 2: Rear view of the monitor, highlighting the HDMI and VGA input ports for connectivity.



Figure 3: Back of the monitor with the stand securely attached, showing the overall design.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Menu Navigation

The monitor's power and menu functions are controlled by a single joystick button located on the back of the display. Press the joystick to power on/off or to access the On-Screen Display (OSD) menu. Navigate through menu options by moving the joystick up, down, left, or right.

4.2 Display Settings

- **Brightness and Contrast:** Adjust these settings via the OSD menu to suit your viewing environment.
- **Active Crystal Color:** This technology is enabled by default to provide a wide range of vibrant colors.
- **Eco-Saving Plus:** Activate this feature in the OSD menu to automatically adjust screen brightness and reduce power consumption.
- **Eye Saver Mode:** Reduce blue light emissions for enhanced viewing comfort during extended use. This mode can be toggled on/off through the OSD menu.
- **Game Mode:** Optimize display settings for gaming by activating Game Mode. This feature enhances color and contrast for a more dynamic gaming experience.

5. MAINTENANCE

To ensure the longevity and optimal performance of your monitor, follow these maintenance guidelines:

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Avoid using harsh chemicals or abrasive materials.
- **Cleaning the Casing:** Use a soft, dry cloth to clean the monitor's casing.
- **Ventilation:** Ensure the monitor's ventilation openings are not blocked to prevent overheating.
- **Power Off:** Always power off the monitor and unplug it from the power outlet before cleaning or if it will be unused for an extended period.

6. TROUBLESHOOTING

If you encounter issues with your monitor, refer to the following common troubleshooting steps:

- **No Display:**
 - Check if the power cable is securely connected to both the monitor and the power outlet.
 - Verify that the video cable (HDMI or VGA) is properly connected to both the monitor and your computer.
 - Ensure the monitor is powered on using the joystick button.
 - Confirm that your computer's display output is active and correctly configured.
- **Flickering Screen:**
 - Adjust the refresh rate in your computer's display settings to match the monitor's supported rates (e.g., 60Hz, 75Hz).
 - Check for any nearby electronic devices that might be causing interference.
 - Try a different video cable.
- **Incorrect Colors:**
 - Reset the monitor's display settings to factory defaults via the OSD menu.
 - Adjust color settings (e.g., Active Crystal Color) in the OSD menu.
 - Ensure your computer's graphics drivers are up to date.

For more detailed troubleshooting, please consult the full user manual available on the Samsung support website.

7. SPECIFICATIONS

Brand	Samsung
Model Number	C32F397FWN (Series: 5120593)
Screen Size	32 Inches
Max Screen Resolution	1920 x 1080 (Full HD)
Screen Curvature	1800R
Aspect Ratio	16:9
Contrast Ratio	3000:1
Connectivity	HDMI, VGA (D-Sub)
Item Weight	16.96 pounds
Color	White
Date First Available	March 12, 2018

8. WARRANTY AND SUPPORT

For detailed warranty information, product registration, and technical support, please visit the official Samsung support website. You can find comprehensive FAQs, driver downloads, and contact information for customer service.

As this is a renewed product, specific warranty terms may vary. Please refer to the documentation provided with your renewed monitor or contact the seller for details regarding your specific warranty coverage.

© 2024 Samsung. All rights reserved. Information in this manual is subject to change without notice.