

YAMAHA RX-V383

Yamaha RX-V383 Remote Control User Manual

Model: RX-V383

1. SETUP

1.1 Battery Installation

The Yamaha RX-V383 remote control requires two (2) AA batteries for operation. Ensure you use fresh batteries for optimal performance.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image 1: Back view of the remote control, showing the battery compartment.

1.2 Initial Use

This remote control is an original equipment manufacturer (OEM) replacement designed specifically for the Yamaha RX-V383 AV receiver. In most cases, it does not require any programming and will function immediately upon battery installation when used with the compatible RX-V383 receiver.

If the remote does not respond, ensure that the batteries are correctly installed and that there are no obstructions between the remote and the receiver's infrared sensor. For advanced setup or troubleshooting specific to your AV receiver, please refer to the Yamaha RX-V383 AV receiver's original instruction manual.

2. OPERATING INSTRUCTIONS

The Yamaha RX-V383 remote control provides comprehensive control over your AV receiver's functions. Familiarize yourself with the button layout for efficient operation.



Image 2: Front view of the remote control, displaying all function buttons.

2.1 Basic Functions

- **POWER (Orange Button):** Turns the receiver on or off.
- **SLEEP:** Sets the receiver to automatically turn off after a specified period.
- **SCENE Buttons (BD/DVD, TV, CD, RADIO):** These buttons allow you to instantly recall preset settings for various input sources, optimizing audio and video for that specific source.
- **INPUT:** Selects the desired input source (e.g., HDMI 1, AV1, etc.).
- **VOLUME (+/-):** Adjusts the master volume level of the receiver.
- **MUTE:** Temporarily silences the audio output. Press again to restore sound.
- **PROGRAM (Up/Down Arrows):** Selects different sound programs or surround modes.
- **FM/AM:** Switches between FM and AM radio bands.
- **USB / BLUETOOTH:** Selects USB or Bluetooth as the audio input source.

2.2 Navigation and Menu Control

- **SETUP:** Accesses the receiver's main setup menu.
- **OPTION:** Displays options relevant to the current screen or function.
- **Arrow Buttons (Up, Down, Left, Right):** Navigate through menus and adjust settings.
- **ENTER:** Confirms selections within menus.
- **RETURN:** Goes back to the previous menu or screen.
- **TOP MENU / HOME / POP-UP/MENU:** Accesses various menu functions depending on the source and receiver state.

2.3 Tuner and Playback Controls

- **TUNING (Left/Right Arrows):** Adjusts radio frequency manually.
- **PRESET (Left/Right Arrows):** Selects stored radio presets.
- **MEMORY:** Stores the current radio station as a preset.
- **Color Buttons (RED, GREEN, YELLOW, BLUE):** These buttons may have specific functions depending on the connected device or menu context, often used for interactive features or quick access.

3. MAINTENANCE

3.1 Cleaning the Remote Control

To maintain the appearance and functionality of your remote control, follow these cleaning guidelines:

- Wipe the surface of the remote with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

3.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or it stops functioning. Refer to Section 1.1 for detailed battery installation instructions. Always replace both batteries at the same time

with new ones of the same type (AA).

3.3 Storage

When not in use for extended periods, it is recommended to remove the batteries from the remote control to prevent potential leakage and damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

4. TROUBLESHOOTING

If you experience issues with your remote control, consult the following troubleshooting tips:

- **Remote not responding:**
 - Check if the batteries are correctly inserted and have sufficient charge. Replace them if necessary.
 - Ensure there is a clear line of sight between the remote control and the infrared sensor on your Yamaha RX-V383 receiver. Remove any obstructions.
 - Verify that the remote is pointed directly at the receiver.
- **Limited functionality or incorrect commands:**
 - Confirm that the remote control is indeed the correct model (RX-V383) for your receiver.
 - Ensure the receiver is powered on and not in a standby mode that restricts remote commands.
 - If certain buttons do not work, it might indicate a specific setting on the receiver. Refer to your Yamaha RX-V383 receiver's manual for detailed operational guidance.
- **Interference:**
 - Strong light sources, such as direct sunlight or fluorescent lighting, can sometimes interfere with infrared signals. Try operating the remote in different lighting conditions.

5. SPECIFICATIONS

Model Number	RX-V383
Brand	YAMAHA
Compatible Devices	AV Receiver (RX-V383, RXV383)
Batteries Required	2 AA batteries
Item Weight	2.39 ounces
Package Dimensions	8.6 x 2.4 x 1 inches
Color	Black
Special Feature	Universal (designed for specific Yamaha AV receivers)

6. WARRANTY AND SUPPORT

For information regarding the warranty of your Yamaha RX-V383 remote control, please refer to the original purchase documentation or the warranty information provided with your Yamaha RX-V383 AV receiver.

For further technical assistance or customer support, please visit the official Yamaha website or contact

Yamaha customer service directly. Contact details can typically be found in your receiver's manual or on the Yamaha support portal.