

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sangean](#) /

› [Sangean HDR-14 HD Radio Portable Receiver User Manual](#)

Sangean HDR-14

Sangean HDR-14 HD Radio Portable Receiver User Manual

Model: HDR-14

INTRODUCTION

Welcome to your new Sangean HDR-14 HD Radio portable receiver. This manual provides comprehensive instructions for setting up, operating, and maintaining your device. The HDR-14 offers digital and analog AM/FM stereo reception, allowing access to additional content and improved sound quality where available.

KEY FEATURES

- HD Radio digital & analog AM/FM-stereo reception
- 40 memory presets (20 FM, 20 AM)
- PAD (Program Associated Data) service
- Supports emergency alerts function
- Automatic multicast reconfiguration
- Battery Powered or AC Adapter

PACKAGE CONTENTS

- Sangean HDR-14 HD Radio
- AC Adapter
- Owner's Manual (this document)

PRODUCT OVERVIEW

Front Panel Controls and Display

The front panel features the speaker, LCD display, and control buttons.



This image shows the front of the Sangean HDR-14 HD Radio, highlighting the speaker grille on the left, the LCD display in the center, and various control buttons below and to the right of the display. Buttons include "BAND", "INFO/MENU", "HD SEEK/APS", "PAGE", and numbered preset buttons (1-5), along with up/down tuning buttons and a power button.

Rear Panel and Connections

The rear panel includes the battery compartment, antenna, and power input.



This image displays the rear of the Sangean HDR-14 HD Radio, showing the extendable telescopic antenna at the top, the battery compartment cover in the middle, and the DC 5V power input jack at the bottom right. Frequency range and battery specifications are printed on the back.

Dimensions

The compact design of the HDR-14 makes it highly portable.



This image illustrates the dimensions of the Sangean HDR-14 HD Radio, indicating a length of 5 inches, a width of 1.25 inches, and a height of 3.03 inches.

SETUP

Powering the Radio

The HDR-14 can be powered by batteries or the included AC adapter.

Battery Installation

1. Open the battery compartment cover on the rear of the radio.
2. Insert 3 x 1.5V AA/UM-3/R6 batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

AC Adapter Connection

1. Connect the AC adapter to the DC 5V input jack on the rear of the radio.
2. Plug the AC adapter into a standard wall outlet.

Antenna Adjustment

For optimal FM and HD Radio reception, fully extend the telescopic antenna. For AM reception, the radio has a built-in AM antenna; rotate the radio for best reception.

OPERATING INSTRUCTIONS

Turning On/Off

Press the **POWER** button (red button) to turn the radio on or off.

Selecting Band (AM/FM/HD)

Press the **BAND** button to switch between FM and AM bands. When an HD Radio signal is detected on FM, the display will indicate "HD1" or "HD2" for sub-channels.

Tuning to Stations

Use the **UP** and **DOWN** arrow buttons to manually tune to frequencies.

HD Seek Tuning

Press the **HD SEEK/APS** button to automatically scan for the next available HD Radio station.

Storing and Recalling Presets

The radio supports 40 memory presets (20 FM, 20 AM).

Storing a Preset

1. Tune to the desired station.
2. Press and hold one of the numbered preset buttons (1-5) until the display confirms the station is saved.
3. To access additional preset pages, press the **PAGE** button, then select a numbered preset.

Recalling a Preset

Briefly press one of the numbered preset buttons (1-5) to recall a saved station. Use the **PAGE** button to cycle through preset pages.

Program Associated Data (PAD)

When tuned to an HD Radio station, the display may show Program Associated Data (PAD) such as song title, artist, and station information. Press the **INFO/MENU** button to cycle through available information.

MAINTENANCE

Cleaning

Wipe the radio with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Battery Care

Remove batteries if the radio will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Solution
No power	Check battery installation or AC adapter connection. Ensure batteries are not depleted.
Poor reception (FM/HD)	Fully extend the telescopic antenna. Try repositioning the radio.
Poor reception (AM)	Rotate the radio for best reception. AM signals are directional.
No HD signal	HD Radio signals may not be available in all areas or for all stations. Ensure you are within range of an HD broadcast.

SPECIFICATIONS

- Product Dimensions: 5"L x 1.25"W x 3.03"H
- Item Weight: 6.7 ounces
- Tuner Technology: HD AM/FM
- Power Source: Battery (3 x AA) / Corded Electric (AC Adapter)
- Radio Bands Supported: 2-Band (AM/FM)
- Manufacturer: Sangean America, Inc.
- Color: Black

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Sangean America, Inc. directly. Refer to the official Sangean website or the packaging for contact details.

IMPORTANT SAFETY INFORMATION

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.