

[Manuals.plus](#) /

› [Epson](#) /

› Epson L4150 All-in-One Wireless Ink Tank Colour Printer User Manual

Epson L4150

Epson L4150 All-in-One Wireless Ink Tank Colour Printer User Manual

Model: L4150 | Brand: Epson

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Epson L4150 printer.

1. PRODUCT OVERVIEW

The Epson L4150 is an All-in-One Ink Tank Colour Printer designed for home and small office use. It offers print, scan, and copy functionalities with convenient Wi-Fi and USB connectivity. Its integrated ink tank system provides an economical printing solution with high page yields.



Figure 1.1: Front view of the Epson L4150 printer in operation.

Key features include:

- **Printer Type:** Ink Tank, All-in-One (Print, Scan, Copy)
- **Connectivity:** Wi-Fi, USB
- **Ink Bottles:** C13T03Y100 (Black), C13T03Y200 (Cyan), C13T03Y300 (Magenta), C13T03Y400 (Yellow)
- **Page Yield:** Up to 7,500 pages (Black & White), 6,000 pages (Colour)
- **Print Speed:** Up to 33 ppm (Black & White), 15 ppm (Colour)
- **Print Resolution:** Up to 5760 × 1440 dpi
- **Supported Page Sizes:** A4, Legal, Letter, B5, A5, A6, B6, Envelopes (DL, C6)

2. SETUP GUIDE

2.1 Unpacking the Printer

1. Carefully remove the printer from its packaging.
2. Remove all protective tapes and packing materials from the exterior and interior of the printer.
3. Ensure all included components (printer, power cable, USB cable, driver CD, ink bottles) are present.

2.2 Filling the Ink Tanks

The Epson L4150 features an integrated ink tank system. Follow these steps to fill the ink tanks:



Figure 2.1: Integrated ink tanks on the Epson L4150.

1. Open the ink tank unit cover on the side of the printer.
2. Open the cap for each color tank (Black, Cyan, Magenta, Yellow).
3. Uncap the corresponding ink bottle and insert it into the correct tank's filling port. The bottles are designed to prevent incorrect filling.
4. Allow the ink to drain into the tank. Do not squeeze the bottle.
5. Once the tank is full, remove the bottle and securely close the tank cap.
6. Repeat for all colors. Close the ink tank unit cover.

2.3 Initial Power On and Software Installation

1. Connect the power cable to the printer and a power outlet.
2. Press the power button to turn on the printer.
3. Follow the on-screen instructions on the printer's small display (if available) or refer to the quick start guide for initial setup.

4. Insert the driver CD into your computer or visit the official Epson support website to download the latest drivers and software for the L4150 model.
5. Run the installer and follow the prompts to complete the software installation. This will guide you through connecting the printer via USB or setting up Wi-Fi connectivity.

3. OPERATING INSTRUCTIONS

3.1 Loading Paper

The Epson L4150 supports various paper types and sizes.



Figure 3.1: Paper input tray location.

1. Open the paper support and pull out the output tray.
2. Slide the edge guides to their outermost positions.
3. Load paper print-side up into the rear paper feed slot.
4. Slide the edge guides against the sides of the paper, but not too tightly.

3.2 Printing Documents

1. Open the document or image you wish to print on your computer or mobile device.
2. Select **Print** from the application's menu (e.g., File > Print).
3. Choose **Epson L4150 Series** as your printer.
4. Adjust print settings such as paper size, print quality, color/monochrome, and number of copies.
5. Click **Print**.

3.3 Scanning Documents

1. Lift the scanner lid and place the document face-down on the scanner glass, aligning it with the corner mark.
2. Close the scanner lid gently.
3. On your computer, open the Epson Scan software or a compatible scanning application.
4. Select scan settings such as document type, resolution, and destination folder.
5. Click **Scan**.

3.4 Copying Documents

1. Place the document face-down on the scanner glass.
2. Close the scanner lid.
3. On the printer's control panel, select the copy function.
4. Choose the number of copies and whether to copy in color or black and white.
5. Press the **Start** button to begin copying.

3.5 Wireless Connectivity (Wi-Fi)

The L4150 supports Wi-Fi for convenient wireless printing.

1. Ensure your printer is connected to a power source and turned on.
2. On the printer's control panel, navigate to the Wi-Fi setup menu.
3. Select **Wi-Fi Setup Wizard** and choose your network from the list.
4. Enter your Wi-Fi password using the control panel buttons.
5. Once connected, the Wi-Fi indicator light on the printer will illuminate steadily.
6. For mobile printing, download the **Epson iPrint** app on your smartphone or tablet.

4. MAINTENANCE

4.1 Checking Ink Levels and Refilling

Regularly check ink levels to ensure continuous printing and prevent air from entering the ink tubes.

1. Visually inspect the ink tanks on the side of the printer.

- 2. Alternatively, check ink levels through the Epson printer utility software on your computer.
- 3. When an ink tank is low, refill it using genuine Epson ink bottles as described in Section 2.2.

4.2 Print Head Cleaning

If print quality declines (e.g., missing lines, faded prints), perform a print head cleaning.

- 1. Access the printer utility software on your computer.
- 2. Navigate to the **Maintenance** or **Utility** tab.
- 3. Select **Head Cleaning** and follow the on-screen instructions. This process uses a small amount of ink.
- 4. After cleaning, print a nozzle check pattern to verify print quality. Repeat if necessary.

4.3 Paper Path Cleaning

If you experience smudges or streaks on prints, the paper path may need cleaning.

- 1. Load a few sheets of plain paper into the paper tray.
- 2. From the printer utility software, select **Paper Guide Cleaning** or a similar option under the Maintenance tab.
- 3. Follow the instructions to clean the paper path.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Epson L4150 printer.

Problem	Possible Cause	Solution
Printer not responding	Power off, loose cables, incorrect driver, network issue.	Ensure printer is on and cables are secure. Reinstall drivers. Check Wi-Fi connection.
Poor print quality (streaks, faded)	Low ink, clogged print head, incorrect paper settings.	Check ink levels and refill. Perform Head Cleaning (Section 4.2). Verify paper type settings.
Paper jams	Incorrect paper loading, foreign objects, worn rollers.	Remove jammed paper carefully. Reload paper correctly. Clean paper path (Section 4.3).
Wi-Fi connection issues	Incorrect password, router issues, printer too far from router.	Re-enter Wi-Fi password. Restart router and printer. Move printer closer to router.

If the problem persists after trying these solutions, please contact Epson customer support.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Product Dimensions	41.2D x 44.7W x 26.9H Centimeters
Item Weight	8 kg 210 g
Printer Type	Ink Tank, All-in-One (Print, Scan, Copy)
Connectivity	Wi-Fi, USB
Print Resolution (Max)	5760 x 1440 dpi
Print Speed (Mono)	33 ppm
Print Speed (Colour)	15 ppm
Scanner Type	Flatbed
Duplex Printing	Manual
Compatible Ink Bottles	C13T03Y100 (Black), C13T03Y200 (Cyan), C13T03Y300 (Magenta), C13T03Y400 (Yellow)
Included Components	Printer, Power Cable, USB Cable, Driver CD

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Your Epson L4150 printer comes with a **1-year manufacturer warranty** from the date of purchase or up to 30,000 pages, whichever comes earlier. Please retain your purchase receipt for warranty claims.

7.2 Customer Support

For free installation assistance, technical support, or any service-related queries, please contact Epson customer support:

- **Contact Number:** 1860 3000 1600
- **Timings:** 9 am - 6 pm (IST)

It is recommended to contact support post receipt of the product to book and schedule free installation and support services.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question