

[Manuals.plus](#) /

› [Kikkerland](#) /

› Kikkerland Extendable Duster Instruction Manual (Model CD140-A)

Kikkerland CD140-A

Kikkerland Extendable Duster Instruction Manual

Model: CD140-A

INTRODUCTION

The Kikkerland Extendable Duster is designed for efficient dust removal from various surfaces, including hard-to-reach areas. Its extendable handle and bendable head allow for versatile cleaning. This manual provides essential information for the proper use and care of your duster.



Image: A green Kikkerland Extendable Duster, shown fully extended, highlighting its reach.

SETUP

1. **Unpack:** Carefully remove the duster from its packaging.
2. **Extend the Handle:** Grip the handle firmly and pull the metal shaft outwards to extend it to your desired length. The handle is made of stainless steel for durability.
3. **Bend the Head:** The duster head is bendable. Gently flex the head to conform to the shape of the surface you intend to clean, such as around corners or over fan blades.

OPERATING INSTRUCTIONS

To effectively use your Kikkerland Extendable Duster:

- **Dusting Surfaces:** Gently wipe the chenille head across dusty surfaces. The chenille yarns are designed to attract and hold dust particles.
- **Reaching High Areas:** Utilize the extended handle to reach ceilings, high shelves, and other elevated spots without the need for a step stool.
- **Cleaning Awkward Spaces:** Bend the duster head to navigate around obstacles, into tight corners, or

over irregularly shaped objects like light fixtures or blinds.



Image: A green Kikkerland Extendable Duster being used to clean dust from a shelf, demonstrating its reach.

MAINTENANCE

Proper care ensures the longevity and effectiveness of your duster:

- **Cleaning the Duster Head:** The chenille duster head is designed for hand washing only.
- **Washing Procedure:** Remove the chenille head from the handle. Wash it gently by hand using mild soap and cool water. Rinse thoroughly until all soap residue is gone.
- **Drying:** Allow the duster head to air dry completely before reattaching it to the handle or storing it. Do not machine wash or tumble dry.
- **Storage:** Store the duster in a clean, dry place when not in use. You may retract the handle for compact storage.





Image: A close-up view of the green chenille duster head, illustrating its material for cleaning.

TROUBLESHOOTING

- **Duster not picking up dust effectively:** Ensure the chenille head is clean. A dirty head may not attract dust efficiently. Follow the maintenance instructions to wash the head.
- **Handle not extending/retracting smoothly:** Check for any debris or obstructions in the telescoping mechanism. Clean the handle if necessary. Avoid forcing the mechanism.

SPECIFICATIONS

Brand	Kikkerland
Model Number	CD140-A
Product Dimensions	29.13"L x 2.95"W (Extended)
Color	Multicolor (Color picked at random when shipping)
Special Feature	Bendable
Handle Material	Stainless Steel
Head Material	Chenille Yarns
Item Weight	0.14 Kilograms (approximately 5 ounces)
Care Instructions	Hand Wash Only
UPC	612615091870

WARRANTY AND SUPPORT

Kikkerland does not provide explicit warranty information for this product within the available details. For any product inquiries, support, or to report issues, please contact Kikkerland customer service directly through their official website or the retailer where the product was purchased.