

[Manuals.plus](#) /

› [OCT17](#) /

› OCT17 Wooden Wood Clock User Manual - Model 10516

OCT17 10516

OCT17 Wooden Wood Clock User Manual

Model: 10516

INTRODUCTION

Thank you for choosing the OCT17 Wooden Wood Clock. This digital alarm clock features an LED display, showing time, date, and temperature. It also includes adjustable brightness and a sound control function. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance of your device.

PACKAGE CONTENTS

- OCT17 Wooden Wood Clock (Bamboo)
- USB Power Cable
- AC Adapter
- User Manual



Image: USB power cable and AC adapter. The cable connects to the clock for power, and the adapter plugs into a wall outlet.

PRODUCT OVERVIEW

Familiarize yourself with the clock's components and controls.



Image: Front view of the OCT17 Wooden Wood Clock. The LED display shows the time, in this example, 18:50.

Sound Control Function

In sound control mode,
clap hands or make noise to wake up the clock

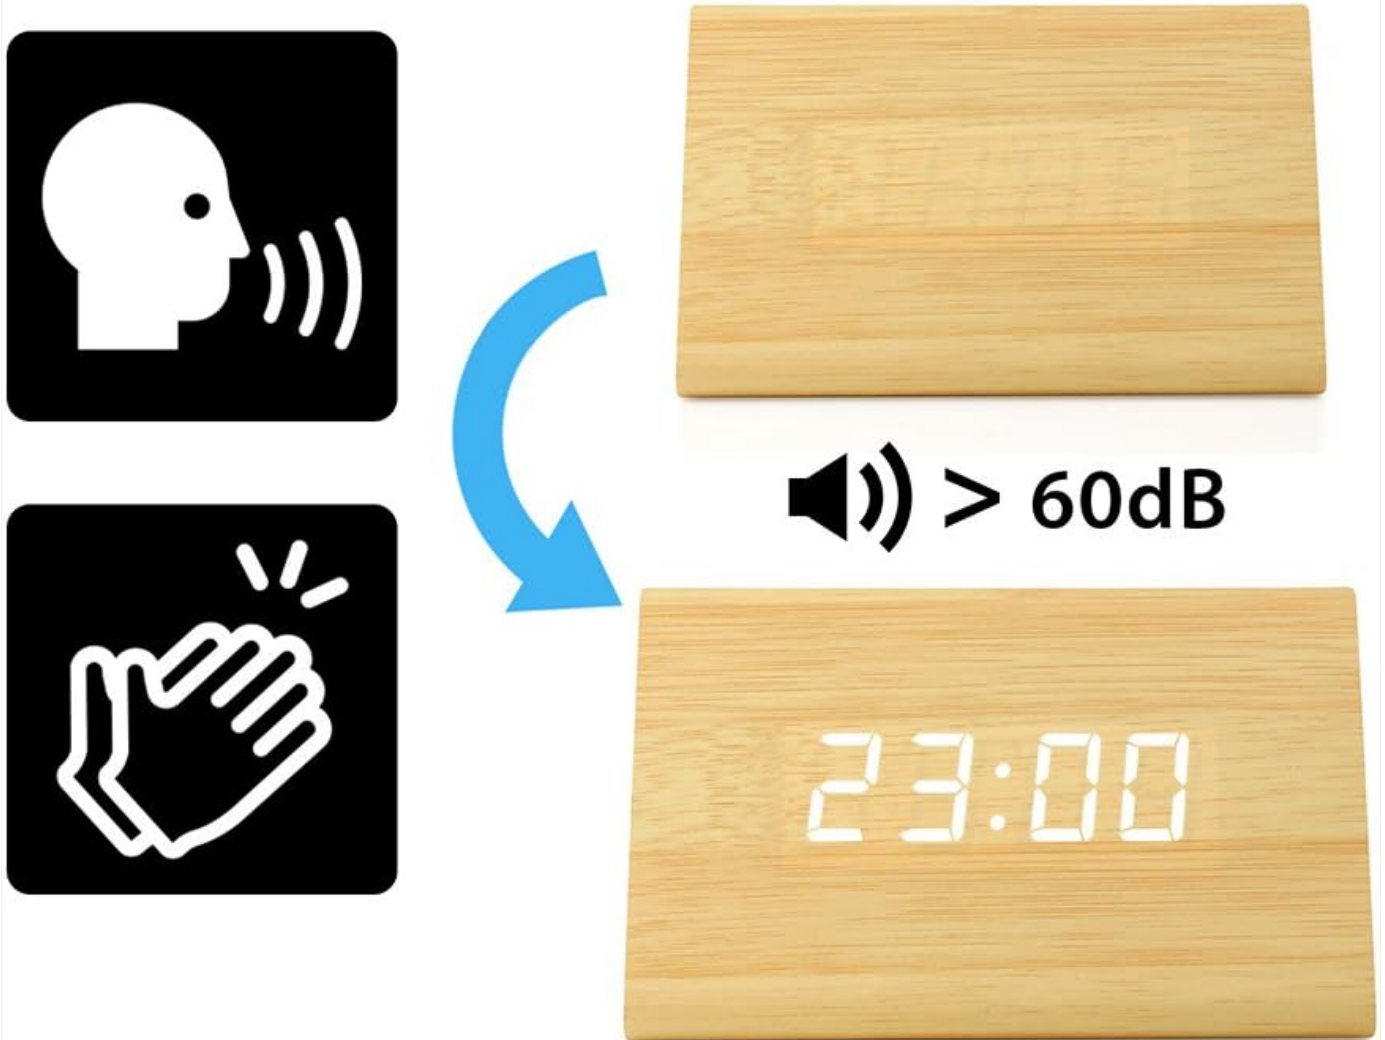


Image: Rear view of the clock. This shows the control panel with buttons for ALARM, ENTER, TIME, RST, a +/- scroll wheel, an ON/OFF switch, a DC5V power input, and two USB output ports (5V/1A).

Control Buttons:

- **ALARM:** Used to set and activate/deactivate alarms.
- **ENTER:** Confirms settings and switches display modes.
- **TIME:** Used to set the current time and date.
- **+/- Scroll Wheel:** Adjusts values (e.g., hours, minutes, year).
- **RST:** Resets the clock to factory defaults.
- **ON/OFF Switch:** Controls the sound control function.

Ports:

- **DC5V Input:** Connects the USB power cable for main power.
- **USB Output (5V/1A):** Two ports for charging external devices.

SETUP

1. Power Connection:

1. Connect the small end of the USB power cable to the DC5V input port on the back of the clock.
2. Connect the larger USB end of the cable to the provided AC adapter.
3. Plug the AC adapter into a standard wall outlet. The clock display will illuminate.

2. Battery Backup (Optional):

The clock requires 1 CR2025 Lithium Ion battery (not included) for memory backup. This battery preserves time and alarm settings during a power outage, but the display will not be active.

1. Locate the battery compartment on the back of the clock.
2. Insert one CR2025 battery, ensuring correct polarity (+/-).
3. Close the battery compartment securely.

OPERATING INSTRUCTIONS

1. Setting Time and Date:

1. Press the **TIME** button. The year will begin to flash.
2. Use the **+/- Scroll Wheel** to adjust the year.
3. Press **ENTER** to confirm and move to the next setting (Month, Day, Hour, Minute).
4. Repeat steps 2 and 3 for Month, Day, Hour, and Minute.
5. After setting minutes, press **ENTER** to select 12-hour or 24-hour format. Use the **+/- Scroll Wheel** to choose.
6. Press **ENTER** to save all time and date settings.

2. Setting Alarms:

The clock supports up to three independent alarms (A1, A2, A3).

1. Press the **ALARM** button. "A1" will appear, and the alarm hour will flash.
2. Use the **+/- Scroll Wheel** to set the alarm hour.
3. Press **ENTER** to confirm and set the alarm minute.
4. Use the **+/- Scroll Wheel** to set the alarm minute.
5. Press **ENTER** to activate or deactivate the alarm (ON/OFF). Use the **+/- Scroll Wheel** to select.
6. Press **ALARM** again to set A2, then A3, or to exit alarm setting mode.

When an alarm sounds, press any button to snooze for 5 minutes. To turn off the alarm completely, press and hold the **ALARM** button until "OFF" is displayed for that alarm.

3. Display Modes:

The clock can cycle through Time, Date, and Temperature, or display only the time.

- **DP-1 Mode:** Press **ENTER** once. The display will cycle between Time, Date, and Temperature.
- **DP-2 Mode:** Press **ENTER** again. The display will show only the Time.

4. Brightness Adjustment:

The clock offers three levels of brightness (L1, L2, L3).



Image: Illustration of adjustable brightness. L1 is dim, L2 is medium, and L3 is bright.

1. In normal time display mode, press and hold the **ENTER** button for 3 seconds. "L3" (brightest) will appear.
2. Use the **+/- Scroll Wheel** to cycle through L3 (Bright), L2 (Medium), and L1 (Dim).
3. Press **ENTER** to confirm your selection.

5. Sound Control Function:

When enabled, the display will turn off after a short period of inactivity. It can be reactivated by sound (e.g., a clap or tap).



Image: Diagram showing the sound control function. A sound louder than 60dB (like a clap or voice) will activate the clock display from standby mode.

1. Locate the **ON/OFF switch** on the back of the clock.
2. Slide the switch to **ON** to enable sound control. The display will turn off after approximately 10 seconds of silence.
3. Slide the switch to **OFF** to keep the display continuously on.

6. USB Charging Ports:

The two USB output ports (5V/1A) on the back of the clock can be used to charge small electronic devices, such as smartphones or tablets. Ensure the clock is connected to its main power source for this function.

MAINTENANCE

- Clean the clock surface with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents, as these may damage the wood finish or display.
- Keep the clock away from direct sunlight, high temperatures, and high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Display is off or blank.	No power, sound control enabled, or battery backup only.	◦ Ensure the USB power cable is securely connected and the AC adapter is plugged into a working outlet. ◦ If sound control is ON, make a sound (e.g., clap) to activate the display. ◦ If using battery backup only, the display will not show. Connect to main power.
Alarm does not sound.	Alarm not set or deactivated.	◦ Verify that the alarm (A1, A2, or A3) is set to "ON" in the alarm settings. ◦ Check that the alarm time is correctly set.
Time is incorrect.	Time not set correctly or power interruption without battery backup.	◦ Re-set the time and date using the TIME button. ◦ Consider installing a CR2025 battery for backup power.
Display is too bright/dim.	Brightness level needs adjustment.	◦ Adjust the brightness level (L1, L2, L3) by pressing and holding the ENTER button.

SPECIFICATIONS

- **Brand:** OCT17
- **Model:** 10516
- **Color:** Bamboo
- **Display Type:** Digital LED
- **Material:** Wood (Bamboo)
- **Power Source:** Corded Electric (DC 5V)
- **Battery Backup:** 1 x CR2025 Lithium Ion battery (not included)
- **Product Dimensions:** Approximately 4.75"W x 2.75"H x 3.1"D (based on image)
- **Special Features:** Alarm, Time, Date, Temperature Display, Adjustable Brightness, Sound Control, USB Charging Ports (2x 5V/1A)



Image: Dimensions of the clock. The clock measures approximately 4.75 inches in width, 2.75 inches in height, and 3.1 inches in depth.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact OCT17 customer service through the retailer where the product was purchased. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07BFLXV46>

More documents and user manuals: <https://manuals.plus/>