Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Philips /
- > PHILIPS Series 3000 HC3535/15 Stainless Steel Trimmer User Manual

Philips HC3535/15

Philips Series 3000 Hair Clipper HC3535/15 User Manual

Model: HC3535/15

1. Introduction

Thank you for choosing the Philips Series 3000 Hair Clipper HC3535/15. This manual provides essential information for the safe and effective use, maintenance, and care of your new hair clipper. Please read these instructions carefully before using the appliance and retain them for future reference.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory
 or mental capabilities, or lack of experience and knowledge, unless they have been given supervision
 or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance near water, such as in a bathtub, shower, or over a basin filled with water.
- Always check the appliance before use. Do not use the appliance if it is damaged, as this may cause injury.
- Only use the original charger and accessories provided with the appliance.
- Keep the appliance and its cord away from heated surfaces.
- Do not insert any object into the appliance openings.
- For cleaning, refer to the 'Maintenance' section. Ensure the appliance is switched off and unplugged before cleaning.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Philips Series 3000 Hair Clipper.







Image 1: Front view of the Philips Series 3000 Hair Clipper HC3535/15, showing the integrated comb and adjustable length settings from 1mm to 23mm.



Image 2: The Philips Series 3000 Hair Clipper HC3535/15 shown alongside its two detachable comb attachments, one black and one clear, for varying hair lengths.

Key Components:

• Cutting Unit: Stainless steel blades for precise trimming.

- Integrated Adjustable Comb: Allows for various length settings.
- Length Setting Wheel: Used to select desired hair length.
- Power Button: To switch the appliance on and off.
- Charging Indicator Light: Shows battery status.
- Power Socket: For connecting the charger.

4. SETUP

4.1 Charging the Appliance

- 1. Ensure the appliance is switched off.
- 2. Insert the small plug of the charger into the power socket at the bottom of the clipper.
- 3. Plug the charger into a wall outlet. The charging indicator light will illuminate to show that the appliance is charging.
- 4. A full charge typically takes several hours. Refer to the specifications for exact charging time and operating time.

4.2 Attaching and Detaching the Comb

- To attach a comb: Align the comb with the grooves on the clipper head and push it down until it clicks into place.
- To detach a comb: Gently pull the comb upwards from the clipper head.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off

- To turn on: Press the power button once.
- To turn off: Press the power button once again.

5.2 Adjusting Cutting Length

The clipper features an integrated adjustable comb with multiple length settings.

- 1. Ensure the appliance is switched off before adjusting the length setting.
- 2. Rotate the length setting wheel to select your desired hair length. The available settings range from 0.5mm (without comb) up to 23mm. Specific marked settings include 1, 3, 5, 7, 9, 11, 13, 15, 17, 19, 21, and 23mm.
- 3. The selected length will be displayed on the clipper.

5.3 Trimming Hair

- 1. Ensure hair is clean and dry before trimming.
- 2. Select the desired cutting length.
- 3. Turn on the clipper.
- 4. Start trimming from the back of the head, moving against the direction of hair growth.
- 5. Use slow, controlled movements. For an even cut, ensure the flat part of the comb always rests against the scalp.
- 6. Regularly remove accumulated hair from the comb and blades during use to maintain optimal performance.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your hair clipper.

6.1 Cleaning the Appliance

- 1. Switch off the appliance and unplug it from the power outlet.
- 2. Remove the comb attachment.
- 3. Brush away any loose hairs from the cutting unit and the inside of the appliance using the cleaning brush provided.
- 4. The cutting unit is designed for easy cleaning. You can rinse the cutting unit under running tap water. Ensure it is completely dry before reattaching or storing.
- 5. Wipe the body of the appliance with a dry or slightly damp cloth. Do not use abrasive cleaning agents or solvents.

6.2 Lubrication

For optimal performance, it is recommended to regularly oil the blades with a drop of light machine oil (not included) after cleaning, especially if rinsed with water. Apply a small drop to the blades and run the clipper for a few seconds to distribute the oil.

6.3 Storage

Store the appliance in a dry, safe place, out of reach of children, when not in use. Protect the cutting unit from damage.

7. TROUBLESHOOTING

If you encounter problems with your Philips Hair Clipper, refer to the following common issues and solutions:

• Appliance does not turn on:

- Ensure the battery is charged. Connect the clipper to the charger and allow it to charge for at least 30 minutes before attempting to turn it on again.
- · Check if the power button is fully pressed.

• Poor cutting performance:

- The blades may be clogged with hair. Clean the cutting unit as described in the 'Maintenance' section.
- The blades may require lubrication. Apply a drop of oil to the blades.
- The battery might be low. Charge the appliance fully.
- Ensure the comb attachment is correctly secured and not damaged.

· Appliance makes unusual noise:

- · Clean and lubricate the blades.
- If the noise persists, contact customer support.

If the problem cannot be resolved with the above steps, please contact Philips customer support.

8. Specifications

Feature	Detail
Brand	Philips
Model Number	HC3535/15
Power Source	AC/Battery
Blade Material	Stainless Steel
Special Features	Easy to Clean
Color	Black, Gray
Package Dimensions	21.6 x 18.6 x 6.8 cm; 480 g
Batteries	1 Product Specific battery required (included)
Recommended Use	Trimming

9. WARRANTY AND SUPPORT

This Philips appliance is designed and manufactured to the highest quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Philips website for your region.

For further assistance, product registration, or to find answers to frequently asked questions, please visit www.philips.com/support or contact Philips customer service in your country.

Related Documents - HC3535/15



Машинка для стрижки волосся Philips серії 5000 HC5610/15: Точність, Довговічність та Легкість

Огляд машинки для стрижки волосся Philips серії 5000 HC5610/15. Дізнайтеся про технології Trim-and-Flow, DuraPower, 28 налаштувань довжини, самозаточувані леза та легке обслуговування.



Philips All-in-One Trimmer 3000 Series MG3915/15: 6-in-1 Grooming Solution

Discover the Philips All-in-One Trimmer 3000 Series MG3915/15, a versatile 6-in-1 grooming tool for face, hair, and body. Featuring self-sharpening blades, ergonomic design, 60-minute runtime, and multiple attachments for precise styling.



Philips Series 3000 All-in-One Trimmer MG3945/15 - Features and Specifications

Discover the Philips Series 3000 All-in-One Trimmer (MG3945/15) with 9 attachments, self-sharpening steel blades, and a comfortable design for all your grooming needs. Features include long-lasting battery, ergonomic grip, and easy cleaning.



Philips MG3930/15 All-in-One Trimmer 3000 Series: Versatile Grooming Guide

Discover the Philips MG3930/15 All-in-One Trimmer 3000 Series. This 7-in-1 trimmer offers versatile face and hair styling with self-sharpening blades, rounded tips, and 60 minutes of runtime. Learn about its features, specifications, and easy maintenance.



Philips MG3945/15 Series 3000 All-in-One Trimmer User Guide & Specifications

Comprehensive guide to the Philips MG3945/15 Series 3000 All-in-One Trimmer. This device features 9 attachments for face, hair, and body grooming, self-sharpening DualCut blades, 90 minutes of cordless runtime, and easy cleaning. Includes detailed specifications and features for optimal personal care.



Philips All-in-One Trimmer 3000 Series MG3911/15: Versatile Grooming

Discover the Philips All-in-One Trimmer 3000 Series (MG3911/15) for easy and efficient styling of face, hair, and body. Features 7 attachments, self-sharpening blades, and a 60-minute runtime.