Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Sceptre /
- > Sceptre 32-inch Class FHD (1080P) LED TV with Built-in DVD (Model E325BD-FSR) User Manual

Sceptre E325BD-FSR

Sceptre 32-inch Class FHD (1080P) LED TV with Built-in DVD (Model E325BD-FSR) User Manual

Model: E325BD-FSR

1. Introduction

Thank you for choosing the Sceptre 32-inch Class FHD (1080P) LED TV with Built-in DVD, Model E325BD-FSR. This manual provides essential information for the proper setup, operation, and maintenance of your new television. Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Read all instructions before operating the TV.
- · Keep this manual for future reference.
- Heed all warnings on the appliance and in the operating instructions.
- · Follow all instructions.
- Clean only with a dry cloth.
- Ensure proper ventilation. Do not block any ventilation openings.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Sceptre 32-inch Class FHD (1080P) LED TV with Built-in DVD (Model E325BD-FSR)
- TV Stand
- Remote Control
- Power Cord
- 6ft Indoor 3-Outlet Extension Cord
- User Manual (this document)



Image: The Sceptre 32-inch Class FHD LED TV with its built-in DVD player visible on the side, accompanied by a 6ft indoor 3-outlet extension cord.

4. SETUP

4.1 Stand Installation

- 1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
- 2. Align the TV stand with the mounting holes on the bottom of the TV.
- 3. Secure the stand using the provided screws. Do not overtighten.

4.2 Connecting Power

Plug the power cord into the TV's power input, then connect the other end to a standard electrical outlet. Use the included 6ft indoor 3-outlet extension cord if additional outlets are needed.

4.3 Connecting External Devices

Your TV features various input ports for connecting external devices:

- HDMI: For high-definition video and audio from devices like Blu-ray players, game consoles, or cable/satellite boxes.
- Antenna/Cable (RF): For connecting an antenna for over-the-air broadcasts or a cable TV connection.
- USB: For media playback from USB storage devices.

Connect your devices to the appropriate ports on the back or side of the TV.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **POWER** button on the remote control or on the TV itself to turn the TV on or off.

5.2 Input Source Selection

Press the **INPUT** or **SOURCE** button on the remote control to cycle through available input sources (e.g., TV, HDMI1, HDMI2, DVD, USB).

5.3 Channel Scan (TV Input)

If using an antenna or cable connection, select the 'TV' input source. Navigate to the TV's menu, find the 'Channel' or 'Setup' section, and initiate an 'Auto Scan' or 'Auto Program' to find available channels.

5.4 Built-in DVD Player Operation

- 1. Ensure the TV is powered on and the input source is set to 'DVD'.
- 2. Gently insert a DVD disc into the disc slot on the side of the TV, label side facing up. The TV will automatically detect the disc and begin playback.
- 3. Use the DVD control buttons on your remote control (Play, Pause, Stop, Fast Forward, Rewind, Skip) to manage playback.
- 4. To eject a disc, press the **EJECT** button on the remote control or the TV.

5.5 Menu Navigation

Press the **MENU** button on the remote control to access the TV's settings. Use the arrow buttons to navigate and the **ENTER** or **OK** button to select options. Press **EXIT** or **MENU** again to close the menu.

6. MAINTENANCE

6.1 Cleaning the Screen

Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.

6.2 Cleaning the Exterior

Wipe the TV's exterior with a soft, slightly damp cloth. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish.

6.3 Storage

If storing the TV for an extended period, unplug it from the power outlet and store it in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

Before contacting customer support, try the following solutions for common issues:

- **No Power:** Ensure the power cord is securely plugged into both the TV and a working electrical outlet. Check if the outlet has power.
- No Picture: Verify the correct input source is selected. Check all cable connections (HDMI, antenna) are secure.
- No Sound: Check the volume level and ensure the TV is not muted. Verify audio settings in the menu.
- Remote Control Not Working: Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
- **DVD Playback Issues:** Ensure the disc is clean and free of scratches. Verify the disc is inserted correctly. Confirm the input source is set to 'DVD'.

8. Specifications

| Model | E325BD-FSR | | |
|-----------------------------|----------------------------------|--|--|
| Screen Size | 31.5 Inches | | |
| Resolution | 1080p (Full HD) | | |
| Special Features | Flat Screen, Built-in DVD Player | | |
| Tuner Technology | ATSC | | |
| Control Method | Remote | | |
| Screen Surface | Glossy | | |
| Year (Manufacturing) | 2017 | | |
| Supported Internet Services | Blockbuster | | |

9. WARRANTY AND SUPPORT

Your Sceptre TV is covered by a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official Sceptre website. For technical assistance, troubleshooting beyond this

Related Documents - E325BD-FSR

