

Manuals.plus /

> [Gemmy](#) /

> Gemmy 19836 Airblown Grinch and Max in Sleigh Christmas Inflatable Instruction Manual

Gemmy 19836

Gemmy 19836 Airblown Grinch and Max in Sleigh Christmas Inflatable Instruction Manual

Brand: Gemmy | Model: 19836

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Gemmy 19836 Airblown Grinch and Max in Sleigh Christmas Inflatable. Ensure safe and proper use by following all guidelines to enjoy this festive outdoor decoration.

Key Features

- Dimensions: 144.09 inches (L) x 53.54 inches (W) x 118.11 inches (H)
- Suitable for indoor or outdoor use
- Self-inflates in seconds for quick and easy setup
- Includes stakes and tethers for secure outdoor placement
- Deflates for convenient storage
- Equipped with bright white LED lights for nighttime visibility

WHAT'S IN THE BOX

- 1 x Gemmy 19836 Airblown Grinch and Max in Sleigh Inflatable Decoration
- Stakes for anchoring
- Tethers for securing

SETUP INSTRUCTIONS

1. Unpacking

Carefully remove the inflatable from its packaging. Ensure all components, including the inflatable unit, stakes, and tethers, are present.

2. Placement

Choose a flat, clear area for placement, free from debris, sharp objects, or overhead obstructions. Ensure the power cord can reach a suitable outdoor-rated electrical outlet.

3. Securing the Inflatable

Lay the inflatable flat on the ground. Locate the attachment points for the stakes and tethers. Secure the base of the inflatable to the ground using the provided stakes. Attach the tethers to the designated loops on the inflatable and secure them to the ground with additional stakes. Adjust the tethers to ensure the inflatable stands upright and is stable, especially in windy conditions.

Note: For optimal stability, especially in windy conditions, ensure all stakes and tethers are properly utilized. Some users recommend using twisted ground pins for enhanced security over straight pins.

4. Inflation

Plug the inflatable into a standard electrical outlet. The built-in blower will automatically inflate the decoration within seconds. Ensure the blower is unobstructed and the zipper access panels are fully closed to allow for proper inflation.

Video: Demonstrates the unboxing, securing, and inflation process of a similar Christmas inflatable. This video is provided by a seller and is relevant for visual guidance on setup.

Video: A quick demonstration of the Grinch and Max inflatable inflating. This video is provided by a vendor and is relevant for showing the product's inflation.

OPERATING INSTRUCTIONS

1. Powering On/Off

To power on, simply plug the inflatable into a suitable electrical outlet. To power off, unplug the unit from the outlet. The inflatable will begin to deflate automatically.

2. Lighting

The inflatable features built-in LED lights that illuminate the Grinch, Max, and the sleigh scene, providing a festive glow for nighttime display. These lights activate automatically when the unit is powered on.



MAINTENANCE

1. Cleaning

To clean the inflatable, wipe it gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.

2. Storage

After use, unplug the inflatable and allow it to fully deflate. Fold or roll the inflatable neatly and store it in a cool, dry place, away from direct sunlight and extreme temperatures. This helps preserve the material and extend the product's lifespan.

TROUBLESHOOTING

- Inflatable does not fully inflate:** Ensure all zippers and openings are completely closed. Check that the blower is free from obstructions and the power supply is stable. If operating in snowy conditions, gently brush off any accumulated snow to allow for full inflation.
- Inflatable falls over in windy conditions:** Verify that all stakes and tethers are securely anchored to the ground. Adjust tether tension as needed. Consider using additional or stronger ground stakes if your area experiences frequent high winds.
- Parts become tangled during inflation:** During initial setup, carefully unfold the inflatable and ensure no parts (like Max's leash) are tangled before powering on the blower.
- Lights are not working:** Check the power connection. The LED bulbs are designed for longevity, but if issues persist, consult the manufacturer for support.

SAFETY INFORMATION

- Follow general safety guidelines for inflatable decorations.
- Ensure the product is securely anchored to prevent it from being blown away or falling over.
- Keep sharp objects away from the inflatable during setup, operation, and storage to prevent punctures.
- Do not operate the inflatable in extreme weather conditions, such as heavy winds, storms, or excessive snow, which could damage the unit or cause it to become a hazard.
- Keep children and pets away from the inflatable during inflation and deflation to prevent injury.
- Always unplug the inflatable when not in use or during strong winds.

PRODUCT SPECIFICATIONS

Specification	Detail
Brand	Gemmy
Theme	Christmas
Cartoon Character	Grinch

Item Dimensions (L x W x H)	118.11 x 53.54 x 144.09 inches
Item Weight	9.86 pounds
Light Color	Bright White
Special Feature	Easy Setup
Model Number	19836

WARRANTY AND SUPPORT

For specific warranty details, product registration, or customer support, please refer to the product packaging or contact Gemmy customer service directly. Contact information can typically be found on the product box or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07BH6RRD1>

More documents and user manuals: <https://manuals.plus/>