

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Trelock](#) /

› [Trelock BC260 Code Chain Lock User Manual](#)

Trelock BC260

Trelock BC260 Code Chain Lock User Manual

Model: BC260 (8004886)

INTRODUCTION

Thank you for choosing the Trelock BC260 Code Chain Lock. This manual provides essential information for the proper setup, operation, and maintenance of your new lock. Designed for reliable security, the BC260 features a durable steel chain and a convenient resettable combination mechanism. Please read these instructions carefully before first use to ensure optimal performance and longevity of your product.

Key features of the Trelock BC260 include:

- Strong steel chain construction for enhanced security.
- Resettable combination lock mechanism for keyless convenience.
- Corrosion-resistant design for durability in various weather conditions.
- Security Level 2, offering good protection against casual theft.

PRODUCT OVERVIEW



An image showing the Trelock BC260 Code Chain Lock. The lock features a black fabric-covered steel chain and a black combination lock head with a four-digit resettable code. A yellow '2' indicates its security level, visible on a small graphic next to the combination dial.

SETUP: SETTING YOUR COMBINATION CODE

Your Trelock BC260 lock comes with a factory preset combination, usually "0000". It is highly recommended to change this to a personal, memorable combination immediately after purchase.

- 1. Open the Lock:** Align the factory preset combination (or your current combination) with the indicator line on the lock head. Pull the shackle or chain end to open the lock.
- 2. Locate the Reset Mechanism:** On the side or bottom of the lock head, you will find a small reset button or screw. This is often recessed and may require a pen tip or small screwdriver to activate.
- 3. Activate Reset Mode:**
 - If it's a button: Press and hold the button firmly.
 - If it's a screw: Turn the screw 90 degrees clockwise (or counter-clockwise, depending on the model) until it clicks into place.
- 4. Set Your New Combination:** While the reset mechanism is activated, rotate the number dials to your desired four-digit combination. Choose a combination that is easy for you to remember but difficult for others to guess.
- 5. Deactivate Reset Mode:**

- If it's a button: Release the button.
- If it's a screw: Turn the screw back 90 degrees to its original position.

6. **Test Your New Combination:** Scramble the dials. Then, enter your new combination and attempt to open the lock. Ensure it opens correctly. If not, repeat the steps.

Important: Write down your new combination and store it in a safe place. Do not store it with the lock. Trelock cannot retrieve forgotten combinations.

OPERATING INSTRUCTIONS

Locking the BC260

1. Ensure the lock is open (chain end detached from the lock head).
2. Wrap the chain around the object you wish to secure (e.g., bicycle frame, fixed object).
3. Insert the free end of the chain into the lock head opening until it clicks securely into place.
4. Scramble the combination dials to lock the mechanism and prevent unauthorized opening.

Unlocking the BC260

1. Align your personal four-digit combination with the indicator line on the lock head.
2. Pull the chain end firmly away from the lock head to release it.
3. Once unlocked, you can remove the chain from the secured object.

MAINTENANCE

Regular maintenance will help prolong the life and ensure the smooth operation of your Trelock BC260 lock.

- **Cleaning:** Wipe the lock and chain regularly with a damp cloth to remove dirt and grime. Avoid harsh chemical cleaners, which can damage the finish or internal components.
- **Lubrication:** Periodically apply a small amount of silicone-based lubricant or graphite powder to the combination dials and the locking mechanism. This helps ensure smooth operation and prevents corrosion, especially in wet or dusty environments. Do not use oil-based lubricants as they can attract dirt.
- **Storage:** When not in use, store the lock in a dry place to prevent rust and corrosion.
- **Inspection:** Periodically inspect the chain and lock head for any signs of wear, damage, or tampering. If you notice any significant damage, consider replacing the lock.

TROUBLESHOOTING

- **Lock will not open with combination:**
 - Ensure all numbers are perfectly aligned with the indicator line.
 - Double-check that you are using the correct combination.
 - Try wiggling the dials slightly while applying gentle pressure to open the lock.
 - If the lock has been exposed to extreme cold or dirt, try warming it up or cleaning the dials and applying lubricant.
- **Dials are stiff or hard to turn:**
 - Apply a silicone-based lubricant or graphite powder to the dials and rotate them back and forth to distribute the lubricant.
 - Clean any visible dirt or debris from around the dials.

- **Lock mechanism feels sticky or does not engage smoothly:**

- Apply lubricant to the shackle/chain insertion point and the internal locking mechanism.
- Ensure the chain end is fully inserted and aligned before attempting to scramble the dials.

If you continue to experience issues, please contact Trelock customer support or your retailer.

SPECIFICATIONS

Brand	Trelock
Model Number	8004886
Style	BC 260/110/5 Cod
Material	Steel
Dimensions	D5X1100 mm (Diameter 5mm, Length 1100mm)
Weight	500 g
Color	Black
Closure Type	Combination
Security Level	2 (Trelock Rating)
Contents	One Combination Chain Lock

WARRANTY AND SUPPORT

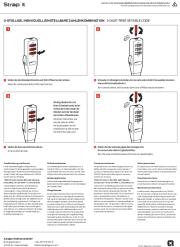
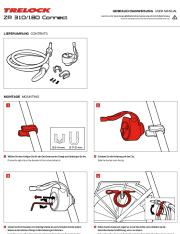
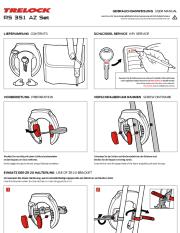
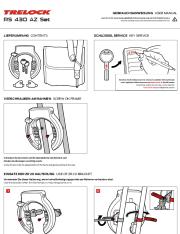
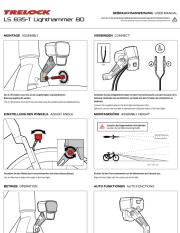
For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Trelock website. Warranty terms may vary by region and retailer.

If you require further assistance or have questions not covered in this manual, please contact Trelock customer support directly or the retailer from whom you purchased the product. Please have your model number (BC260 or 8004886) and purchase details ready when contacting support.

You can often find contact information on the official Trelock website: www.trelock.de

© 2024 Trelock. All rights reserved.

Related Documents - BC260

	<p>TRELOCK Strap It 3-Digit Free Setable Code User Manual Instructions and information for setting and maintaining your TRELOCK Strap It 3-digit free setable code lock. Includes warranty, safety, and care guidelines.</p>
	<p>TRELOCK ZF 380 X-Press Folding Lock: Installation and User Manual Comprehensive guide for installing and using the TRELOCK ZF 380 X-Press folding lock, including mounting instructions, safety precautions, and maintenance tips.</p>
	<p>TRELOCK ZR 310/180 Connect User Manual: Mounting and Locking Guide Comprehensive user manual for the TRELOCK ZR 310/180 Connect bicycle lock accessory. Includes step-by-step mounting instructions, locking procedures, and warranty information.</p>
	<p>TRELOCK RS 351 AZ Set Bike Lock User Manual and Installation Guide Comprehensive user manual and installation guide for the TRELOCK RS 351 AZ Set bike lock, including contents, preparation, mounting, locking, unlocking, and maintenance instructions.</p>
	<p>TRELOCK RS 430 AZ Set User Manual and Instructions Comprehensive user manual for the TRELOCK RS 430 AZ Set bicycle lock, covering contents, installation, operation, maintenance, and warranty information.</p>
	<p>TRELOCK LS 835-T Lighthammer 80 User Manual User manual for the TRELOCK LS 835-T Lighthammer 80 bicycle front light, detailing assembly, connection, operation, features, safety information, and legal compliance (StVZO).</p>