

[Manuals.plus](#) /

› [TENMOS](#) /

› TENMOS Mini Rechargeable Wireless Mouse Instruction Manual


TENMOS N01

TENMOS Mini Rechargeable Wireless Mouse User Manual

Model: N01

INTRODUCTION

Thank you for choosing the TENMOS Mini Rechargeable Wireless Mouse. This compact and efficient mouse is designed for convenience and quiet operation, making it ideal for travel, office, and home use. Please read this manual carefully to ensure proper setup and optimal performance.

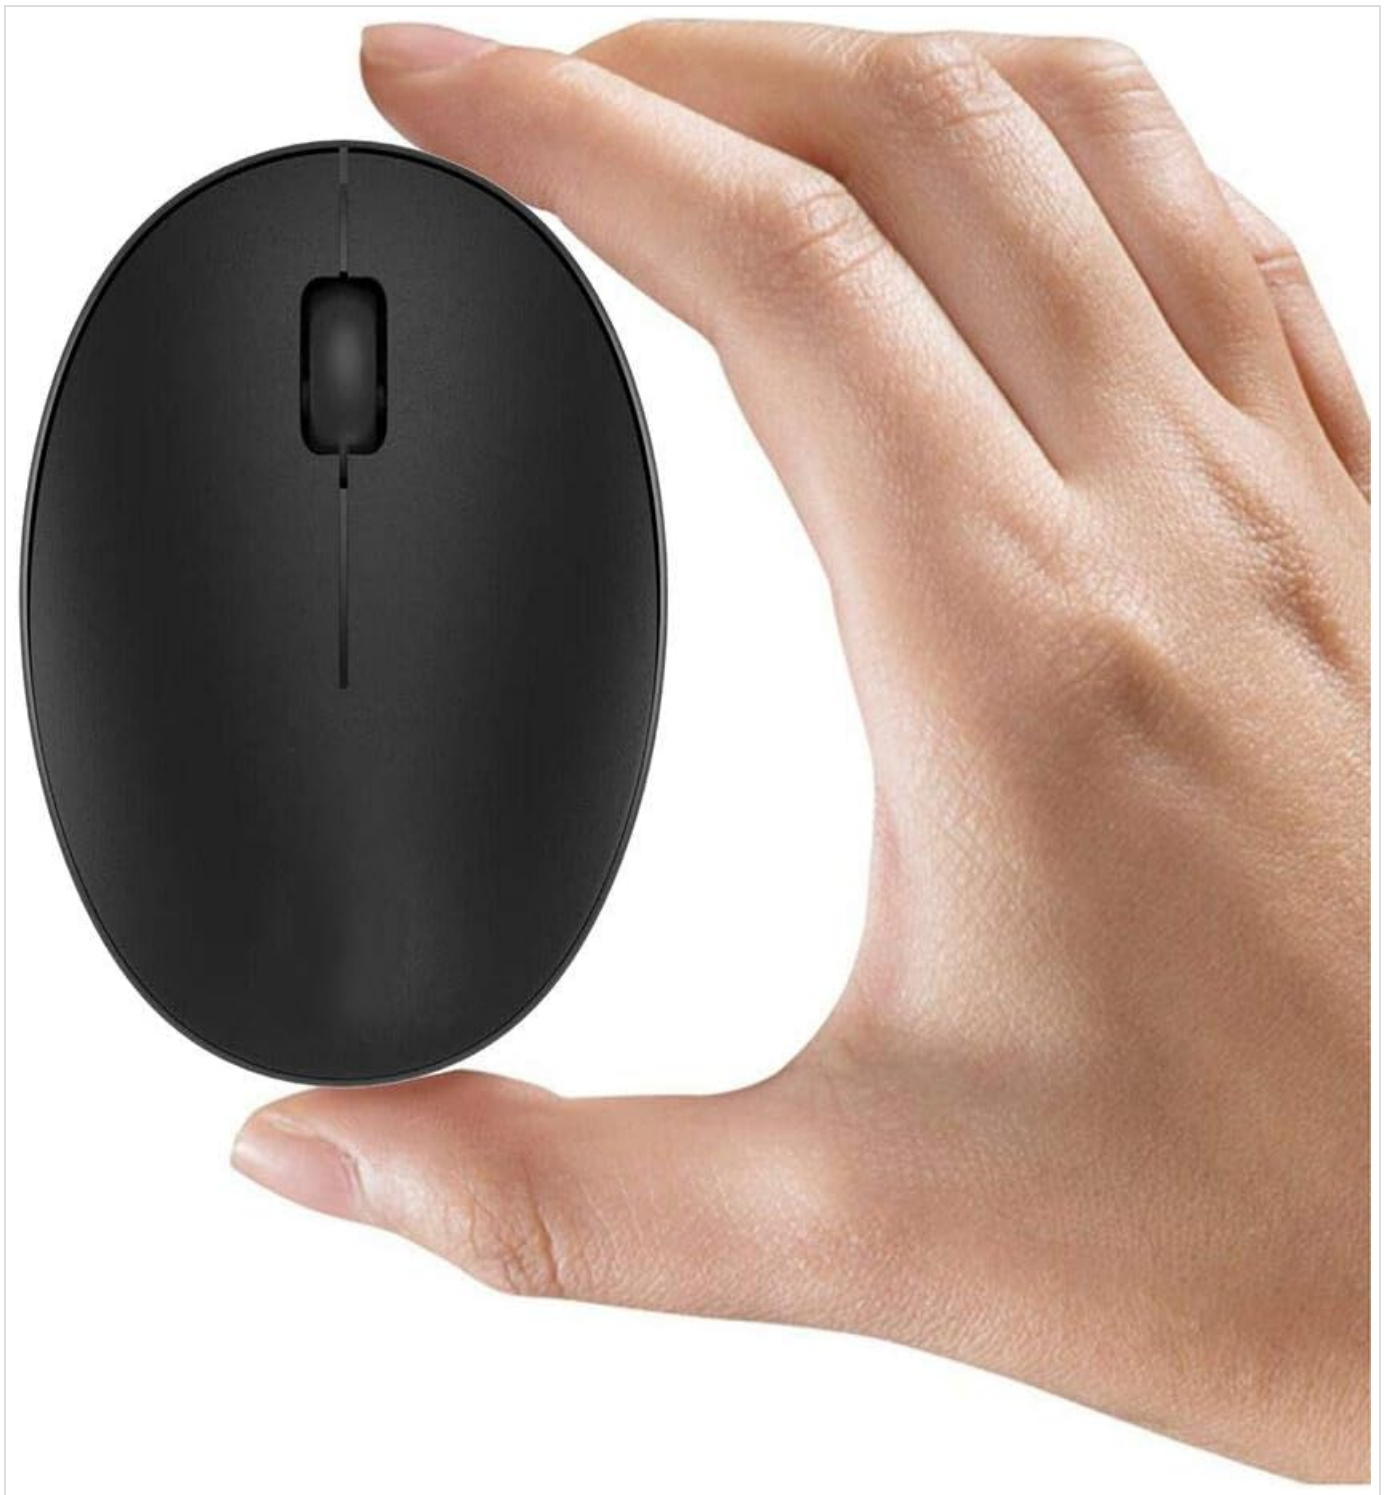

The TENMOS Mini Rechargeable Wireless Mouse, showcasing its compact size.

PRODUCT FEATURES

- **Super Mini Size:** Designed for portability, perfect for traveling and children's use.
- **Rechargeable & Durable:** Built-in rechargeable battery eliminates the need for frequent battery changes, offering lower energy consumption and stable performance.
- **Auto Sleep Function:** Automatically enters sleeping mode after a period of inactivity to conserve battery life. Click any button to wake it up.
- **Silent Click:** Left and right buttons feature a silent design, ensuring a quiet working or playing environment without disturbing others.
- **2.4GHz Wireless Connectivity:** Provides a stable, long-distance wireless transmission up to 10 meters.

- **Plug and Play:** No additional software or drivers required; simply plug in the USB receiver and start using.

WHAT'S IN THE BOX

- Mini Wireless Mouse
- USB Receiver
- Type C Adapter
- USB Charging Cable
- User Manual

SETUP

Follow these steps to set up your TENMOS Mini Rechargeable Wireless Mouse:

1. **Charge the Mouse:** Before first use, it is recommended to fully charge the mouse for a couple of hours using the provided USB charging cable. Connect the micro-USB end to the mouse's charging port and the USB-A end to a computer's USB port or a USB wall adapter.
2. **Locate the USB Receiver:** The USB receiver is typically stored in a compartment on the underside of the mouse for safekeeping during transport. Gently slide open the compartment cover to retrieve it.
3. **Connect the Receiver:** Plug the USB receiver into an available USB-A port on your computer (laptop, PC, Chromebook, etc.). If your device only has USB-C ports, use the included Type C adapter.
4. **Turn On the Mouse:** Locate the ON/OFF switch on the bottom of the mouse and slide it to the "ON" position. The mouse is now ready for use.

WIDE COMPATIBILITY

Windows 7/8/10/XP, Vista, Win, Mac OS USB port



Plug and Play: Simply insert the USB receiver into your device's USB port.

Video: Demonstrates the setup process for the TENMOS mini mouse for laptop, including inserting the USB receiver and turning on the mouse.

Video: Overview of the TENMOS Mini Travel Mouse, highlighting its features and ease of setup.

Video: Illustrates the compact size of the mini mouse and its compatibility with various devices.

OPERATING INSTRUCTIONS

The TENMOS Mini Rechargeable Wireless Mouse is designed for intuitive use:

- **Left Click:** Press the left button for primary selection and activation.
- **Right Click:** Press the right button to access contextual menus.
- **Scroll Wheel:** Roll the wheel up or down to scroll through documents and web pages. Press the scroll wheel for middle-click functionality (if supported by your software).
- **Auto-Sleep Feature:** To conserve battery, the mouse will automatically enter sleep mode after a few minutes of inactivity. To wake it up, simply click any button.



Silent click



Silent Click Feature: Enjoy a quiet experience with every click.



DURABILITY

Rated to over 5 million clicks



ERGONOM

For all-day comfort

Durability and Ergonomics: Designed for comfort and long-lasting performance.

2.4G Wireless

Support Plug and Play



2.4GHz Wireless Connectivity: Reliable connection up to 10 meters.

MAINTENANCE

To ensure the longevity and optimal performance of your mouse, follow these maintenance tips:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the internal components.
- **Charging:** Recharge the mouse when the indicator light signals low battery or when you notice a delay in responsiveness. Avoid overcharging for extended periods.
- **Storage:** When not in use, especially during travel, turn off the mouse using the ON/OFF switch and store the USB receiver in its dedicated compartment to prevent loss.
- **Avoid Extreme Conditions:** Do not expose the mouse to extreme temperatures, direct sunlight, or high humidity.

TROUBLESHOOTING

If you encounter issues with your TENMOS Mini Rechargeable Wireless Mouse, try the following solutions:

Problem	Solution
---------	----------

Problem	Solution
Mouse not responding	Ensure the mouse is turned ON. Check if the USB receiver is securely plugged into the computer's USB port. Try plugging the receiver into a different USB port. Recharge the mouse if the battery is low.
Cursor movement is erratic or slow	Ensure the mouse is on a clean, flat, non-reflective surface. Check for any obstructions between the mouse and the receiver. Recharge the mouse.
Mouse not charging	Verify the charging cable is correctly connected to both the mouse and the power source. Try a different USB port or wall adapter. Ensure the charging cable is not damaged.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.6 x 1.6 x 0.04 inches
Item Weight	2.39 ounces
Item Model Number	N01
Batteries	1 Lithium Ion batteries required (included)
Connectivity Technology	USB (2.4GHz Wireless)
Special Feature	Wireless, Portable, Rechargeable, Soundless
Movement Detection Technology	Optical

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact TENMOS customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question