

Discovery 1013442

Discovery Remote Control T-Rex Dinosaur User Manual

Model: 1013442 | Brand: Discovery

INTRODUCTION

This manual provides instructions for the safe and effective operation of your Discovery Remote Control T-Rex Dinosaur. Please read this manual thoroughly before use and retain it for future reference. This realistic RC T-Rex features walking legs, roaring sounds, and a chomping mouth, designed for engaging play.

SAFETY INFORMATION

- Not suitable for children under 3 years due to small parts.
- Adult supervision is recommended during play.
- Do not operate near stairs, furniture, or other obstacles to prevent damage or injury.
- Keep away from water and moisture.
- Ensure batteries are inserted correctly and dispose of used batteries responsibly.

PACKAGE CONTENTS

- 1 x Discovery RC T-Rex Dinosaur
- 1 x Infrared Remote Control
- (Batteries not included)

SETUP

1. Attaching the Tail

The T-Rex tail needs to be attached to the main body. Locate the white cord inside the dinosaur's body and the corresponding recessed area on the tail. Coil the white cord into the recessed area, then align and press the tail into the body until it clicks securely.



Image: Detailed steps for attaching the tail, showing the internal wiring and the secure click mechanism.

2. Battery Installation

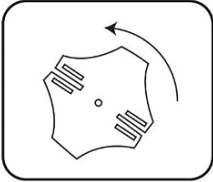
The T-Rex requires 3 AA 1.5V batteries (not included). The remote control requires 2 AAA 1.5V batteries (not included). Use a Phillips head screwdriver to open the battery compartments. Insert batteries according to polarity markings (+/-) and close the compartments securely.

INSTRUCTIONS

CONTENTS

- RC T-Rex
- Infrared Remote Control

REMOVE THE REMOTE AND RC T-REX FROM PACKAGING

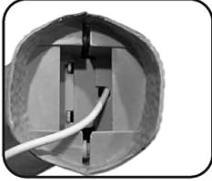
- 

Remove the remote by turning counter clockwise the plastic keylock.
- 

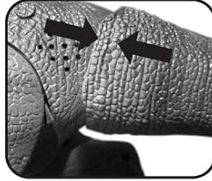
Using a Philips head screwdriver, unscrew the T-Rex RC from the insert.

ATTACH THE TAIL

- 

Locate the white cord connected to the dinosaur's body.
- 

Note the recessed area on the inside of the tail. Continued on back.
- 

Coil the white cord into the recessed area of the tail to close the gap between the tail and body of the dinosaur.
- 

Align the recessed area of the tail to the body and press the tail into the body until it clicks.

Image: Underside of the T-Rex and the remote control, highlighting battery compartments and the ON/OFF switch.

3. Powering On

Locate the ON/OFF switch on the underside of the T-Rex body and slide it to the "ON" position. The remote control also has an ON/OFF switch; ensure it is in the "ON" position.

OPERATING INSTRUCTIONS

The remote control allows you to move the T-Rex forward and activate its roaring sounds.

- Move Forward:** Press the button with the paw print and arrow to make the T-Rex walk forward.
- Roaring Sound:** Press the button with the dinosaur head icon to activate the realistic roaring sound.



Image: The T-Rex and its remote control, illustrating the functions of each button.

Product Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the Discovery Remote Control T-Rex Dinosaur walking and roaring, showcasing its features and ease of use.

MAINTENANCE

- **Cleaning:** Wipe the dinosaur and remote control with a clean, damp cloth. Do not immerse in water.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Solution
Dinosaur does not move or roar.	Ensure both the dinosaur and remote control are switched ON. Check battery levels and replace if necessary. Verify batteries are inserted with correct polarity.
Tail detaches easily.	Ensure the tail is firmly clicked into place. Avoid excessive force during play.
Remote control not responding.	Ensure there are no obstructions between the remote and the dinosaur. Check remote control batteries.

SPECIFICATIONS

- **Brand:** Discovery
- **Model Name:** Toy RC Dinosaur
- **Model Number:** 1013442
- **Dimensions (L x W x H):** 14.75" x 12" x 5.7"
- **Material:** Plastic
- **Power Source:** Battery
- **Dinosaur Batteries:** 3 x AA (not included)
- **Remote Control Batteries:** 2 x AAA (not included)
- **Recommended Age:** 6+ years
- **Features:** Remote Control, Walking, Roaring Sounds, Chomping Mouth

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Discovery customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question