

Pyle PBMSQG9

Pyle PBMSQG9 Wireless Portable Bluetooth Speaker Instruction Manual

Model: PBMSQG9

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Pyle PBMSQG9 Wireless Portable Bluetooth Speaker. Please read this manual thoroughly before using the device and retain it for future reference.

The Pyle PBMSQG9 is a compact and portable audio system featuring Bluetooth wireless streaming, FM radio, USB and Micro SD card playback, and an auxiliary input. It is designed for versatile audio playback with a built-in rechargeable battery.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Wireless Tube Speaker (PBMSQG9)
- USB Charging Cable
- Audio Connection Cable (3.5mm AUX)

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Image 1: Front view of the Pyle PBMSQG9 Portable Bluetooth Speaker, showing the speaker grille and control panel on the left side, with the Pyle logo on the main body and a carry handle.



Image 2: Close-up view of the control panel on the Pyle PBMSQG9 speaker, featuring buttons for power, mode, play/pause, track navigation, and EQ settings.



Image 3: Diagram illustrating the dimensions of the Pyle PBMSQG9 Portable Bluetooth Speaker: 11.3 inches in length, 4.5 inches in depth, and 4.8 inches in height.

Control Panel Functions:

- **Power Button:** Press and hold to turn the speaker on or off.
- **Mode Button:** Short press to switch between Bluetooth, FM Radio, USB, Micro SD, and AUX modes.
- **Play/Pause Button:** Press to play or pause audio. In FM mode, press to auto-scan and save stations.
- **Previous Track/Volume Down Button:** Short press for previous track (Bluetooth/USB/SD). Long press to decrease volume.
- **Next Track/Volume Up Button:** Short press for next track (Bluetooth/USB/SD). Long press to increase volume.
- **EQ Button:** Press to cycle through available equalizer presets.

Ports and Indicators:

- **USB Port:** For USB flash drive playback.
- **Micro SD Card Slot:** For Micro SD memory card playback.
- **AUX Input (3.5mm):** For connecting external audio devices.
- **DC 5V Charging Port:** For connecting the USB charging cable.
- **LED Indicator:** Indicates charging status and operating mode.

SETUP

Charging the Battery:

1. Connect the small end of the included USB charging cable to the DC 5V charging port on the speaker.
2. Connect the larger end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate to show charging status. It will typically change color or turn off when fully charged.
4. A full charge takes approximately 3 hours. Do not leave the device plugged in for extended periods after it is fully charged to preserve battery life.

Powering On/Off:

- To turn on the speaker, press and hold the Power button until the indicator light illuminates and you hear an audible prompt.
- To turn off the speaker, press and hold the Power button again until the indicator light turns off and you hear an audible prompt.

OPERATING INSTRUCTIONS

Bluetooth Pairing:

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the **Mode** button until you hear the Bluetooth prompt.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select '**PyleUSA**' from the list of devices.
4. Once paired, the speaker will indicate a successful connection, and you can begin streaming audio.
5. The wireless range is over 30 feet.

FM Radio Operation:

1. Press the **Mode** button to switch to FM Radio mode.
2. To auto-scan and save available FM stations, press the **Play/Pause** button. The speaker will scan and store stations automatically.
3. Use the **Previous Track** and **Next Track** buttons to navigate between saved stations.

USB/Micro SD Card Playback:

1. Insert a USB flash drive or Micro SD card (up to 32GB) containing MP3 or WMA audio files into the respective port.
2. The speaker will automatically switch to USB or Micro SD mode and begin playing audio. If not, press the **Mode** button to select the correct source.
3. Use the **Play/Pause**, **Previous Track**, and **Next Track** buttons to control playback.

AUX Input:

1. Connect one end of the included 3.5mm audio connection cable to the AUX input port on the speaker.
2. Connect the other end of the cable to the headphone jack or audio output of your external device.
3. Press the **Mode** button to switch to AUX mode.
4. Control playback and volume from your external device.

Volume Control:

- To increase volume, long press the **Next Track/Volume Up** button.
- To decrease volume, long press the **Previous Track/Volume Down** button.

Equalizer (EQ) Settings:

- Press the **EQ** button to cycle through different equalizer presets to adjust the sound profile to your preference.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the battery regularly, even if the speaker is not used often. Do not overcharge.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is discharged.	Charge the speaker using the provided USB cable.
No sound.	Volume is too low or muted. Incorrect input mode selected. Device not properly connected.	Increase volume on speaker and connected device. Press Mode button to select correct input. Ensure cables are securely connected.
Bluetooth pairing fails.	Speaker not in pairing mode. Device too far. Interference.	Ensure speaker is in Bluetooth mode. Move device closer to speaker (within 30 ft). Turn off other Bluetooth devices.
FM radio reception is poor.	Weak signal.	Relocate the speaker to an area with better reception.
USB/Micro SD card not playing.	Incorrect file format. Card/drive not inserted correctly. Corrupted files.	Ensure files are MP3 or WMA format. Reinsert card/drive. Try a different card/drive.

SPECIFICATIONS

Model:	PBMSQG9
MAX Power Output:	150 Watt

Sound System:	1.1" Full Range Stereo Speaker
Impedance:	4 Ohm
Signal/Noise Ratio:	>60dB
Frequency Response:	100-16kHz
Bluetooth Version:	4.2, A2DP
Bluetooth Network Name:	'PyleUSA'
Wireless Range:	Over 30'+ Feet (10 Meters)
Digital Audio File Compatibility:	MP3, WMA
Maximum USB Flash/Micro SD Card Support:	Up to 32GB
Rechargeable Battery:	3.7V Li-iOn, 1500mAh
Power Input:	DC, 5V/1A
Dimensions (L x W x H):	11.3"H x 4.8"W x 4.5"D (approx. 11.2" x 4.5" x 4.7" inches)
Item Weight:	2.5 Pounds
Housing Construction Material:	Engineered ABS

WARRANTY AND SUPPORT



This product comes with a **Limited Warranty**. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact Pyle customer support.





For technical support or service inquiries, please visit the official Pyle website or contact their customer service department. Keep your purchase receipt for warranty claims.

Manufacturer: Sound Around -- Dropship

© 2023 Pyle. All rights reserved.

Related Documents - PBMSQG9

	<p>Pyle PWMA1299A 12-Inch Portable Wireless BT PA Speaker System User Guide</p> <p>User guide for the Pyle PWMA1299A 12-inch portable wireless Bluetooth streaming PA speaker system, detailing features, remote functions, unit description, setup, and safety information.</p>
	<p>Pyle PT270AIU 300 Watt Stereo Receiver User Manual</p> <p>Comprehensive user manual for the Pyle PT270AIU 300 Watt Stereo Receiver, detailing features, operation, safety instructions, and remote control functions for this hybrid amplifier with iPod docking, AM/FM tuner, USB/SD card readers, and subwoofer control.</p>

	<p>Pyle PD1000BT - PD3000BT Wireless BT Home Theater Preamplifier User Manual</p> <p>User manual for the Pyle PD1000BT and PD3000BT Wireless BT Home Theater Preamplifier. This guide provides detailed instructions on setup, operation, features, and troubleshooting for this Pro Audio Stereo Receiver System.</p>
	<p>PYLE PPHP1233B 3x12\"</p> <p>User guide for the PYLE PPHP1233B 3x12" Portable Wireless BT PA Karaoke Speaker System. This guide covers important safety instructions, remote control operation, system overview, connections, music playback, Bluetooth streaming, TWS function, troubleshooting, features, technical specifications, and contact information.</p>
	<p>Pyle PD1000BT-PD3000BT Wireless BT Home Theater Preamplifier User Manual</p> <p>Comprehensive user manual for the Pyle PD1000BT and PD3000BT Wireless BT Home Theater Preamplifier. Learn about features, connections, playback, setup, troubleshooting, and technical specifications.</p>
	<p>Pyle PWMA899A 8\"</p> <p>Official user guide for the Pyle PWMA899A 8-inch portable wireless Bluetooth streaming PA speaker system. Details features, setup, safety, remote control, and troubleshooting for this 35 Watt PA system.</p>

Documents - Pyle – PBMSQG9



[\[pdf\]](#) User Manual

PBMSQG9 images na ssl amazon Pyle USA Play Music from USB disk Micro SD card 1 Turn the Power button to ON Insert ~ash or into slot music stored will be played automatically and blue LED light blink slowly 2 Under playing mode short press Previous Next select songs that you like long adjust volume 3 PyleUSA FM Radio radio state audio cable provided treat as antenna Please insert get best signal before using power MODE switch Pause auto search Channel store it Bluetooth The turn blinks quickly beeps twice Activate a mobile phone Search for 9155adkkstL 2944297bfc2f60205b2363b91218ce7fd8874caa 1106125ac511727835e71fa76370eb219ab82427 manual PYLPBMSQG9 I manuals pyleusa order petra attachment 3898241 606c3a1d4e840431542867

PBMSQG9 Compact Portable Bluetooth Wireless Speaker Built-in Rechargeable Battery, MP3/USB/Micro SD Readers, FM Radio KEY INSTRUNCTIONS: 1 2 3 4 5 6 7 8 9 10 1. Aux-in jack 2. Charging Jack 3. ON/OFF 4. Micro SD slot 5. USB Port 6. Play/Pause 7. Previous/Volume Down 8. EQ 9. Next/Volume Up 10. M...

lang:en score:24 filesize: 638.85 K page_count: 6 document date: 2018-01-01

Model	Size	Type	Mount	Category	Notes
PCT1018	10"	TV Stand for 10" TV	PCT1018	Mounts, Stands, Holders	
PCT1018	10"	TV Stand for 10" TV	PCT1018	Mounts, Stands, Holders	
PCT1018	10"	TV Stand for 10" TV	PCT1018	Mounts, Stands, Holders	
PCT1018	10"	TV Stand for 10" TV	PCT1018	Mounts, Stands, Holders	
PCT1018	10"	TV Stand for 10" TV	PCT1018	Mounts, Stands, Holders	
PCT1018	10"	TV Stand for 10" TV	PCT1018	Mounts, Stands, Holders	
PCT1018	10"	TV Stand for 10" TV	PCT1018	Mounts, Stands, Holders	
PCT1018	10"	TV Stand for 10" TV	PCT1018	Mounts, Stands, Holders	
PCT1018	10"	TV Stand for 10" TV	PCT1018	Mounts, Stands, Holders	

[Pyle Mounts, Stands, and Holders Product Catalog](#)

Explore the comprehensive range of Pyle and PylePro mounts, stands, and holders for TVs, computers, musical instruments, microphones, projectors, and tablets. This catalog showcases various solutions for home, office, and professional audio-visual setups.

lang:en score:17 filesize: 12.96 M page_count: 254 document date: 0000-00-00



[Pyle 2018 Product Catalog](#)

This comprehensive catalog showcases the diverse range of consumer electronics offered by Pyle in 2018, covering car audio, marine, home, health, and professional sound solutions.

lang:de score:15 filesize: 18.81 M page_count: 263 document date: 2018-06-15