

[Manuals.plus](#) /

› [unbrand](#) /

› Replacement Remote Control for JVC TVs (Models: JLC47BC3002, JLE32BC3001, JLE37BC3001, JLE42BC3001, JLE42BC3500, JLE47BC3001, JLE47BC3500)

unbrand JLC47BC3002/JLE47BC3001

Instruction Manual: Replacement Remote Control for JVC TVs

Model: JLC47BC3002/JLE47BC3001

INTRODUCTION

This manual provides instructions for the setup and operation of your new replacement remote control. This remote is designed to function as a direct replacement for original JVC TV remotes, offering similar functionality without the need for complex programming.

SETUP: BATTERY INSTALLATION

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to remove it.
3. Insert two (2) AAA batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: The back of the remote control with the battery cover removed, revealing the two AAA battery slots. The separate battery cover is shown next to it. This illustrates how to access the battery compartment for installation.

Once batteries are installed, the remote is ready for use. No programming or pairing is required.

OPERATING INSTRUCTIONS

This replacement remote control operates identically to your original JVC TV remote. Simply point the remote control directly at your television and press the desired function buttons.

- **Power Button:** Turns the TV on or off.
- **Channel Buttons:** Changes the TV channel up or down.
- **Volume Buttons:** Adjusts the TV volume up or down.
- **Number Buttons:** Directly input channel numbers.
- **Menu/Navigation Buttons:** Access and navigate the TV's on-screen menu.

COMPATIBLE JVC TV MODELS

This remote control is compatible with the following JVC TV models:

- JLC32BC3000
- JLC32BC3002
- JLC37BC3000
- JLC37BC3002
- JLC42BC3000
- JLC42BC3002
- JLC47BC3000
- JLC47BC3002
- JLE32BC3001
- JLE37BC3001
- JLE42BC3001
- JLE42BC3500
- JLE47BC3001
- JLE47BC3500
- BC50R
- EM28T
- EM32FL
- EM32T
- EM32TS
- EM37T
- EM39FT
- EM39T
- EM55FT

TROUBLESHOOTING

If your remote control is not functioning as expected, please try the following steps:

- **Check Batteries:** Ensure that the batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- **Remote Sensor:** Confirm that the TV's remote sensor is not blocked or dirty.
- **TV Compatibility:** Double-check that your TV model is listed in the "Compatible JVC TV Models" section of this manual.

If the issue persists after performing these checks, the remote control may be faulty. Please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

Brand	unbrand
Model Name	JLC47BC3002/JLE47BC3001
Model Number	JLC47BC3002/JLE47BC3001-602914541046

Color	Black
Compatible Devices	Television
Connectivity Technology	Infrared
Controller Type	Button Control
Battery Type	AAA (2x 1.5V)
Special Feature	Ergonomic

MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- Keep the remote clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, direct sunlight, or moisture.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

WARRANTY AND SUPPORT

Specific warranty information for this unbrand replacement remote control is not provided in the product details. For any issues, questions, or to inquire about warranty coverage, please contact the seller directly through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

