

[manuals.plus](#) /

› [palmprefect](#) /

› [Clio PALMPERFECT Electric Bikini Trimmer User Manual](#)

**palmprefect 3881IWPDQ3**

## **PALMPERFECT Electric Bikini Trimmer User Manual**

Model: 3881IWPDQ3

### **1. INTRODUCTION**

The Clio PALMPERFECT Electric Bikini Trimmer is designed for convenient and effective hair removal. This travel-friendly device features a dual-blade system for a close, comfortable shave, suitable for both wet and dry use. It is battery-powered, offering portability for on-the-go grooming needs.



Figure 1: PALMPERFECT Electric Bikini Trimmer

## 2. SAFETY INFORMATION

For safe operation of your PALMPERFECT Electric Bikini Trimmer, please observe the following:

- Keep the trimmer out of reach of children.
- Do not disassemble or attempt to repair the device yourself.
- Ensure the battery compartment is securely closed when using the trimmer, especially in wet conditions.
- If the device shows signs of damage, discontinue use immediately.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- PALMPERFECT Electric Bikini Trimmer

- Trimming Guide
- Cleaning Brush

## 4. SETUP

### 4.1 Battery Installation

1. Twist the bottom cap of the trimmer counter-clockwise to open the battery compartment.
2. Insert two (2) AAA batteries (not included), ensuring correct polarity (+/-).
3. Replace the bottom cap and twist clockwise until securely closed.

### 4.2 Attaching the Trimming Guide

The trimming guide can be attached to adjust the hair length. Align the guide with the trimmer head and gently push until it clicks into place. To remove, gently pull the guide away from the trimmer head.



Figure 2: Illustration of the dual clipper blade and precision blade.

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering On/Off

Locate the power switch on the body of the trimmer. Slide the switch upwards to turn the device on and downwards to turn it off.

### 5.2 Wet or Dry Use

The PALMPERFECT trimmer is designed for both wet and dry use. You can use it in or out of the shower, with or without shaving cream, based on your preference.

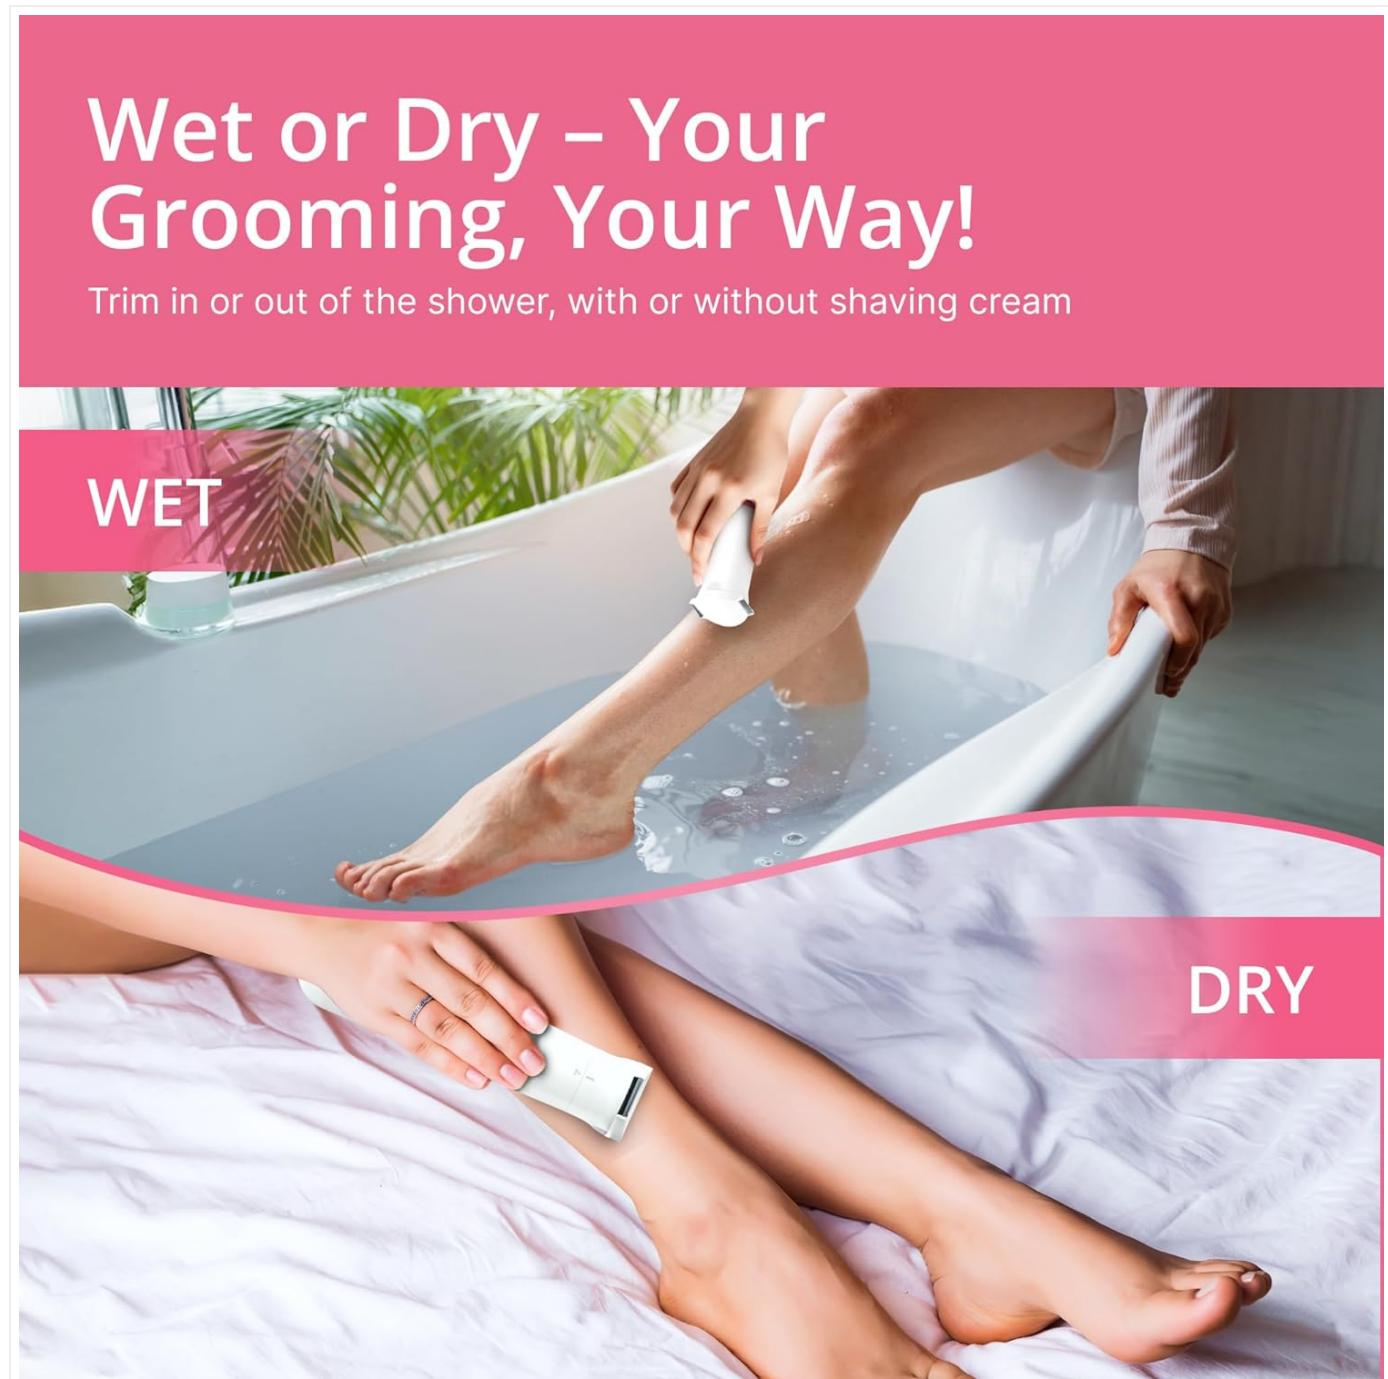


Figure 3: The trimmer is suitable for both wet and dry use.

### 5.3 Trimming Techniques

Hold the trimmer at a slight angle against the skin. Gently glide the trimmer against the direction of hair growth for optimal results. The ergonomic grip allows for comfortable and precise trimming in various areas.

- **Dual Clipper Blade:** Features rounded edges for painless trimming of any hair length.
- **Precision Blade:** Ideal for fine and short hair.
- **Wide Tooth Blade:** Suitable for longer and thicker hair.

# Ergonomic, Easy-to-Use Design

Comfortable grip for fast, precise trimming in any direction



Figure 4: The ergonomic design facilitates use on various body parts including legs, armpits, and the bikini area.



## Safe, Gentle & Nick-Free

Achieve a smooth, flawless bikini line without irritation or discomfort

Figure 5: The trimmer is designed for safe, gentle, and nick-free grooming.

## 6. MAINTENANCE

### 6.1 Cleaning the Trimmer

After each use, turn off the trimmer and remove the trimming guide (if attached). Use the provided cleaning brush to remove any trapped hairs from the blades and the trimmer head. The water-resistant design allows for rinsing the trimmer head under running water. Ensure the trimmer is completely dry before storing.

### 6.2 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Batteries are dead or incorrectly inserted.	Replace with new AAA batteries, ensuring correct polarity.
Poor trimming performance.	Blades are clogged with hair or dull.	Clean the trimmer head thoroughly. If performance does not improve, consider replacing the trimmer.
Trimmer pulls hair.	Blades are dull or hair is too long for the current setting.	Ensure blades are clean. If using the trimming guide, try removing it for a closer shave, or pre-trim longer hair.

## 8. SPECIFICATIONS

<b>Brand</b>	palmperfect
<b>Model Name</b>	Bikini Trimmer
<b>Item Model Number</b>	3881IWPDQ3
<b>Product Dimensions</b>	3 x 4 x 7.5 inches; 3.84 ounces
<b>Power Source</b>	Battery Powered (2 AAA batteries required, not included)
<b>Special Features</b>	Cordless, Detachable Head, Dry Shave, Portable, Water Resistant, Ergonomic Design
<b>Recommended Uses</b>	Pubic region, general body hair trimming
<b>Manufacturer</b>	Clio Designs Incorporated
<b>UPC</b>	843445019257, 843445091802


## 9. WARRANTY AND SUPPORT


For warranty information or product support, please contact Clio Designs Incorporated directly. Refer to the product packaging or the official brand website for the most current contact details.

Official brand store: [PALMPERFECT Store on Amazon](#)

© 2025 PALMPERFECT. All rights reserved.

## Related Documents - 3881IWPDQ3

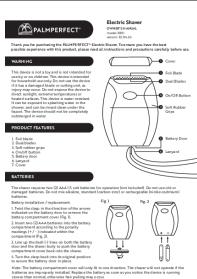	<p><a href="#">PALMPERFECT Electric Shaver Model 3801 Owner's Manual - Usage, Cleaning, and Warranty</a></p> <p>Comprehensive owner's manual for the PALMPERFECT Electric Shaver (Model 3801). Learn about product features, battery installation, usage, cleaning instructions, and warranty information from Beacon Wellness Brands.</p>
---	--

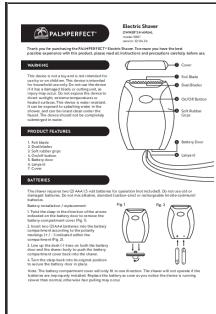

## [PalmPerfect Electric Shaver Model 3801 Owner's Manual - Usage and Care Guide](#)

Official owner's manual for the PalmPerfect Electric Shaver, Model 3801. Includes detailed instructions for battery installation, safe usage, cleaning, and warranty information from Beacon Wellness Brands.