

Manuals.plus /

› Fujifilm /

› Fujifilm FinePix XP120 Digital Camera Instruction Manual

## Fujifilm FinePix XP120

# Fujifilm FinePix XP120 Digital Camera Instruction Manual

Model: FinePix XP120

## INTRODUCTION

---

This manual provides essential instructions for the safe and effective operation of your Fujifilm FinePix XP120 Digital Camera. Please read this manual thoroughly before using your camera and retain it for future reference.

## SAFETY PRECAUTIONS

---

Always ensure the battery/memory card compartment cover is securely locked before exposing the camera to water or dust. Failure to do so may result in damage to the camera.

- Do not disassemble or modify the camera.
- Avoid exposing the camera to extreme temperatures or direct sunlight for prolonged periods.
- Use only specified batteries and chargers.
- Keep the camera out of reach of small children.

## SETUP

---

### 1. Inserting the Battery and Memory Card

1. Locate the battery/memory card compartment cover on the side of the camera.
2. Slide the lock switch to the 'open' position and open the cover.

3. Insert the rechargeable Lithium-Ion battery (NP-45S) into the compartment, ensuring correct orientation.
4. Insert a microSD card into the designated slot.
5. Close the compartment cover and slide the lock switch to the 'lock' position. Ensure it clicks securely.



Figure 1: Camera accessories including the NP-45S battery, USB charging cable, and wrist strap.

## 2. Charging the Battery

- Connect the camera to a USB power source using the supplied USB cable.
- The charging indicator will illuminate during charging and turn off when complete.

## OPERATING INSTRUCTIONS

---

### 1. Powering On/Off

Press the **ON/OFF** button located on the top of the camera to power it on or off.

### 2. Basic Photography

- **Taking Photos:** Frame your shot using the 3-inch LCD monitor. Press the shutter button halfway to focus, then press fully to capture the image.
- **Zoom:** Use the W (Wide) and T (Telephoto) buttons on the back of the camera to adjust the 5x optical zoom.
- **Flash:** The camera features a built-in flash. Adjust flash settings via the menu.



Figure 2: Rear view of the camera with LCD and control layout.

### 3. Shooting Modes

Press the **MODE** button to access various shooting modes, including:

- Automatic
- Landscape
- Macro
- Night Portrait
- Portrait
- Underwater
- Cinemograph Mode (for still images with moving elements)
- Interval Shooting

### 4. Video Recording

- To start recording Full HD 1080p video at 60 fps, press the dedicated red record button.
- Press the record button again to stop recording.

Your browser does not support the video tag.

Video 1: An overview of the Fujifilm FinePix XP120 Waterproof Camera, demonstrating its features and rugged design. This video highlights the camera's ease of use and suitability for various environments.

### 5. Wi-Fi Connectivity

The camera features built-in Wi-Fi for easy transfer of photos and videos to a smartphone or tablet using the Fujifilm Camera Remote app.

- Enable Wi-Fi mode through the camera's menu.
- Connect your smart device to the camera's Wi-Fi network.
- Use the app to browse, transfer, and share your media.

## MAINTENANCE

---

- After underwater use, rinse the camera with fresh water and dry thoroughly with a soft cloth.
- Clean the lens and LCD screen with a soft, lint-free cloth. Avoid abrasive materials.
- Regularly check the battery/memory card compartment seal for any debris or damage.
- Store the camera in a cool, dry place when not in use.

## TROUBLESHOOTING

---

Problem	Solution
Camera does not power on.	Ensure the battery is correctly inserted and fully charged.
Images are blurry.	Check lens for smudges. Ensure proper focus by pressing the shutter button halfway before fully pressing. Select an appropriate scene mode.
Water inside the battery compartment.	Immediately remove the battery and memory card. Allow the compartment to dry completely. Contact customer support if issues persist.
Wi-Fi connection issues.	Ensure Wi-Fi is enabled on the camera and your smart device. Restart both devices and try reconnecting.

## SPECIFICATIONS

---

- **Sensor:** 16.4 MP BSI CMOS (1/2.3-inch)
- **Lens:** Fujinon 5x Optical Zoom (5-25mm, F3.9-F4.9)
- **Image Stabilization:** Digital
- **Display:** 3-inch 920k-Dot LCD
- **Video:** Full HD 1080p at 60 fps (MP4 format)
- **Waterproof:** Up to 15m (50ft)
- **Shockproof:** Up to 1.75m (5.8ft)
- **Dustproof:** Yes
- **Freezeproof:** Down to -10°C (14°F)
- **Connectivity:** Built-In Wi-Fi

- **Storage:** Micro SD/SDHC/SDXC (up to 128GB)
- **Battery:** Rechargeable Lithium-Ion (NP-45S)
- **Dimensions:** Approximately 109.6 x 71.0 x 27.8 mm (4.3 x 2.8 x 1.1 inches)
- **Weight:** Approximately 203g (7.2 oz) including battery and memory card

## WARRANTY AND SUPPORT

---

Your Fujifilm FinePix XP120 camera comes with a 1-year manufacturer's warranty. For warranty claims, technical support, or service inquiries, please contact Fujifilm customer service or visit the official Fujifilm website. For more information, visit the [Fujifilm Store](#).