

[Manuals.plus](#) /

› [Whirlpool](#) /

› Whirlpool ACE XL 10.5 Semi-Automatic Washing Machine User Manual

Whirlpool ACE XL 10.5

Whirlpool ACE XL 10.5 Semi-Automatic Washing Machine User Manual

Model: ACE XL 10.5

1. INTRODUCTION

Thank you for choosing the Whirlpool ACE XL 10.5 Semi-Automatic Top Loading Washing Machine. This manual provides essential information for the safe and efficient use, installation, operation, and maintenance of your appliance. Please read these instructions carefully before using the washing machine and retain them for future reference.



Figure 1: Whirlpool ACE XL 10.5 Semi-Automatic Washing Machine

2. SAFETY INSTRUCTIONS

To prevent personal injury or property damage, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children away from the appliance during operation.
- Do not wash items that are soiled with flammable liquids.
- Unplug the machine before cleaning or performing any maintenance.

- The control panel is waterproof and shockproof, but avoid excessive water exposure.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your washing machine:

- **Wash Tub:** For washing clothes.
- **Spin Tub:** For drying clothes.
- **Control Panel:** Dials for program selection, dirt level, drain, and spin time.
- **3D Turbo Impeller:** Located in the wash tub, designed for effective dirt removal.
- **3D Lint Filter:** Collects lint during the wash cycle.
- **Drain Hose:** For water drainage.
- **Power Cord:** For electrical connection.



Figure 2: Top view showing Wash Tub (left) and Spin Tub (right)



Figure 3: Control Panel

4. SETUP

4.1 Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Report any damage to your dealer immediately.

4.2 Placement

- Place the washing machine on a firm, level surface to minimize vibration and noise during operation.
- Ensure adequate ventilation around the machine.
- Avoid direct sunlight or placing near heat sources.
- The machine dimensions are 96 cm (H) x 89 cm (W) x 51 cm (D). Ensure sufficient space.



Net Dimension (H x W x D)
96 cm x 89 cm x 51 cm | 3ft 1in x 2ft 9in x 1ft 6in

Figure 4: Product Dimensions

4.3 Water Connection

Connect the water inlet hose to a suitable water tap. Ensure the connection is secure to prevent leaks.

4.4 Drain Hose Setup

Position the drain hose to allow for proper water drainage. Ensure it is not kinked or blocked. The hose should be placed at a height that allows gravity to drain the water effectively.



Figure 5: Rear view with Drain Hose

4.5 Power Connection

Plug the power cord into a dedicated 230V, 50Hz electrical outlet. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1 Preparing Clothes

- Sort clothes by fabric type, color, and degree of soiling.
- Empty pockets and close zippers or hooks.
- For heavily soiled items, pre-treat stains if necessary.

5.2 Loading Clothes and Detergent

- Place sorted clothes loosely into the wash tub. Do not overload the machine. The maximum capacity is 10.5 kg.
- Add the recommended amount of detergent directly into the wash tub.

5.3 Selecting Wash Program and Settings

1. **Fabric Type (Wash Program):** Turn the 'Fabric Type' dial to select one of the 5 available wash programs: *Delicate, Normal, Gentle, Normal Plus, Stainwash.*

2. **Dirt Level / Soak Time:** Turn the 'Dirt Level' dial to set the desired wash time (up to 45 minutes) and soak time (up to 25 minutes) based on the clothes' soiling level.
3. **Drain Selector:** Use the 'Drain Selector' dial to control water drainage. Set to 'Wash' for washing, 'Rinse' for rinsing, and 'Drain' to empty the tub.
4. **Turbo Dry (Spin Time):** After washing, transfer clothes to the spin tub. Turn the 'Turbo Dry' dial to select the spin time (up to 5 minutes) for faster drying.

5.4 Special Features

- **Hard Water Wash:** This feature adapts the machine programs for washing in hard water, improving detergent action and resulting in softer clothes.
- **10 Tough Stain Removal:** The machine is designed to effectively remove up to 10 tough stains like coffee, tomato sauce, butter, deodorant, etc.
- **3D Turbo Impeller:** Provides a triple motion for clothes to remove dirt effectively.
- **Auto Restart:** The machine will resume operation from where it left off after a power interruption.



Figure 6: Key Features

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your washing machine.

6.1 Cleaning the 3D Lint Filter

The 3D Lint Filter collects lint and debris during washing. It should be cleaned regularly, ideally after every 2-3 washes, to maintain washing efficiency. Remove the filter, rinse it under running water, and reinsert it.

6.2 Cleaning the Machine Exterior

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.3 Draining Residual Water

After each use, ensure all water is drained from both the wash and spin tubs to prevent odor and mildew buildup.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following table before contacting customer service:

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Power outage; Lid not closed properly.	Check power connection; Verify power supply; Ensure lids are securely closed.
Water not filling	Water tap closed; Water inlet hose kinked.	Open water tap; Straighten water inlet hose.
Water not draining	Drain hose kinked or blocked; Drain selector set incorrectly.	Check and clear drain hose; Set drain selector to 'Drain'.
Excessive vibration/noise	Machine not level; Overloaded or unbalanced load.	Adjust machine to be level; Redistribute clothes evenly in the tub.
Poor wash performance	Too much or too little detergent; Overloaded tub; Lint filter clogged.	Use correct detergent amount; Reduce load size; Clean lint filter.

8. SPECIFICATIONS

Detailed technical specifications for the Whirlpool ACE XL 10.5 Washing Machine:

Feature	Specification
Brand	Whirlpool
Model Name	ACE XL 10.5
Model Number	ACE 10.5 XL
Capacity	10.5 kg
Access Location	Top Load
Operation Mode	Semi Automatic
Max Rotational Speed	1400 RPM
Voltage	230 Volts
Number of Programs	5 (Delicates, Gentle, Hard Water Wash, Normal, Stain Care)
Human Interface Input	Dial
Material Type	Plastic

Feature	Specification
Item Weight	8378 Grams
Item Depth	57 centimeters
Colour	Grey
Special Features	3D Scrub Technology, Autorestart, End Of Cycle Signal, Full Lint Filter Indicator, Hard Water Wash, Water Proof Control Panel

9. WARRANTY INFORMATION

Your Whirlpool ACE XL 10.5 Semi-Automatic Washing Machine comes with a comprehensive warranty:

- **2 Years Comprehensive Warranty** on the product.
- **10 Years Warranty** on the Wash Motor and Prime Mover.

Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects under normal use conditions.

10. CUSTOMER SUPPORT

For any assistance, service requests, or inquiries regarding your Whirlpool washing machine, please contact:

- **Whirlpool of India Ltd.**
- **Address:** Plot No. A-4, MIDC Ranjangaon, Taluka Shirur, Dist: Pune, Maharashtra 412220, India
- **Email:** helpdeskindia@whirlpool.com
- **Toll Free:** 1800 208 1800

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question