

[Manuals.plus](#) /

› [LeapFrog](#) /

› LeapFrog Scout and Violet 100 Words Book User Manual

LeapFrog 80-601560

LeapFrog Scout and Violet 100 Words Book

User Manual

INTRODUCTION

The LeapFrog Scout and Violet 100 Words Book is an interactive learning toy designed to introduce young children to new vocabulary in both English and Spanish. This book features colorful pages with touch-sensitive pictures that play words, sound effects, and fun facts. It aims to enhance language development and provide an engaging educational experience for toddlers. Key features include:

- Introduction to over 100 age-appropriate words selected by learning experts.
- Word categories covering pets, animals, food, mealtime, colors, activities, opposites, and outdoor themes.
- Interactive pages that play words, sound effects, and fun facts when touched.
- A light-up star button that plays two learning songs.
- Bilingual functionality, allowing words, songs, and instructions to be heard in both English and Spanish.

SETUP

Battery Installation

The LeapFrog Scout and Violet 100 Words Book requires 2 AA batteries. Batteries are included for demonstration purposes only. For regular use and optimal performance, it is recommended to install new batteries.

1. Locate the battery compartment on the back of the book.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 2 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover and tighten the screw securely.

Initial Power On

Once batteries are installed, the book is ready for use. There is no separate power button; the book activates upon opening or interaction. If the book does not respond, ensure batteries are correctly installed and fully charged.

OPERATING INSTRUCTIONS

Exploring Words and Sounds

Open the book to any page. Each page features various pictures representing different words. To hear a word, simply touch the corresponding picture with your finger. The book will pronounce the word, provide a fun fact, or play a relevant sound effect.



Image: A child's hand interacts with the book, demonstrating the touch-sensitive pages for learning words related to activities and outdoor themes.

Bilingual Play (English/Spanish)

The book supports both English and Spanish languages. Locate the language switch on the side of the book. Slide the switch to select either English or Spanish. All words, songs, and instructions will then be played in the chosen language.



Image: The book highlighting its bilingual feature, with a visible switch to toggle between English and Spanish modes.

Fun Sounds Mode

In addition to learning words, the book features a "Fun Sounds" mode. Touch the pictures to hear silly sound effects. This mode provides an alternative interactive experience.

Learning Songs

Press the light-up star button located on the right side of the book to hear two engaging learning songs. This button also activates the Learning Friends theme song and "My Favorite Word" song.



Image: The main product view, showcasing the interactive pages and the light-up star button for songs.

MAINTENANCE

Cleaning Instructions

To clean the book, wipe it with a slightly damp cloth. Do not immerse the book in water or use harsh cleaning agents, as this may damage the electronic components. Ensure the book is completely dry before storing or using again.

Storage

Store the book in a cool, dry place away from direct sunlight and extreme temperatures. If the book will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Book does not turn on or respond.	Low or dead batteries; incorrect battery installation.	Replace with new AA batteries, ensuring correct polarity.
No sound or distorted sound.	Low batteries; speaker obstruction.	Replace batteries. Ensure speaker area is clear.
Incorrect word or sound played when touching a picture.	Sensor interference; temporary software glitch.	Ensure fingers are clean and dry. Remove and reinsert batteries to reset the device.

SPECIFICATIONS

Feature	Detail
Product Dimensions	9.17 x 9.37 x 0.1 inches
Item Weight	1.49 pounds
Model Number	80-601560
Manufacturer Recommended Age	18 months - 4 years
Batteries Required	2 AA batteries (included for demo purposes)
Release Date	April 30, 2018
Manufacturer	VTech

WARRANTY AND SUPPORT

For detailed warranty information and further support, please refer to the official LeapFrog website or contact their customer service. A digital version of the user manual may also be available for download.

- Official User Manual (PDF): [Download PDF Manual](#)
- Visit the LeapFrog Store: [LeapFrog Official Store](#)

© 2025 LeapFrog. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question