

[Manuals.plus](#) /

› [L.O.L. Surprise!](#) /

› L.O.L. Surprise! Fashion Factory Game Instruction Manual - Model 555117E4C

L.O.L. Surprise! 555117E4C

L.O.L. Surprise! Fashion Factory Game Instruction Manual

Model: 555117E4C

INTRODUCTION

Welcome to the L.O.L. Surprise! Fashion Factory Game. This game allows players to experience the excitement of building L.O.L. Surprise! dolls on a motorized conveyor belt. Players race to assemble paper dolls based on blueprint cards before they fall off the conveyor. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure an enjoyable gaming experience.



Image: The L.O.L. Surprise! Fashion Factory Game product packaging.

PACKAGE CONTENTS

Before you begin, please ensure all components are present. The package should contain:

- 1 Motorized Conveyor Belt Assembly
- Multiple L.O.L. Surprise! Balls
- Blueprint Character Cards
- Assorted Paper Doll Pieces (tots, outfits, shoes, accessories, bottles)
- 2 Sets of Tongs/Grabbers (for 2 players)
- Instruction Manual (this document)



Image: Back of the game box detailing included components.

SETUP

1. **Unpack Components:** Carefully remove all game pieces from the packaging.
2. **Assemble Conveyor Belt:** Place the motorized conveyor belt assembly on a flat, stable surface. Ensure there is enough space around it for players to comfortably access the game pieces.
3. **Install Batteries:** Locate the battery compartment on the underside of the conveyor belt. Insert the required batteries (e.g., AA or AAA, not included) according to the polarity indicators. Close the compartment securely.
4. **Prepare Game Pieces:**
 - Separate the paper doll pieces (tots, outfits, shoes, accessories, bottles) into designated piles or containers.
 - Shuffle the Blueprint Character Cards and place them face down in a draw pile.
 - Place the L.O.L. Surprise! balls at the end of each conveyor belt track, ready to receive completed dolls.
 - Distribute one set of tongs/grabbers to each player.

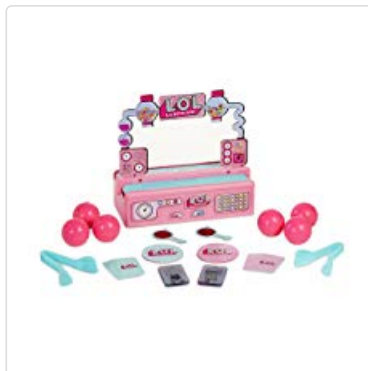


Image: All game components prepared for setup.

OPERATING INSTRUCTIONS (HOW TO PLAY)

The L.O.L. Surprise! Fashion Factory Game is designed for 2 players. The objective is to be the first player to complete three L.O.L. Surprise! dolls.

1. **Start the Conveyor Belt:** Turn on the motorized conveyor belt using the power switch. The belt will begin to move. The game may feature adjustable speeds; select a comfortable speed for both players.
2. **Draw Blueprint Card:** Each player draws one Blueprint Character Card. This card shows the specific tot, outfit, shoes, accessory, and bottle required for their current doll.
3. **Race to Assemble:** Using only the provided tongs/grabbers, players must quickly find the matching paper doll pieces for their blueprint card from the general supply.

4. **Place on Conveyor:** As each piece is found, players must place it onto their respective side of the moving conveyor belt.
5. **Complete the Doll:** Once all five pieces (tot, outfit, shoes, accessory, bottle) for a single doll are collected and placed on the conveyor belt, the player must assemble them into a complete paper doll.
6. **Secure in Ball:** The completed paper doll must then be placed inside an L.O.L. Surprise! ball.
7. **Avoid Falling Off:** Players must work quickly to complete and secure their doll in a ball before the pieces or the assembled doll fall off the end of the conveyor belt. If a piece or doll falls off, it must be retrieved and placed back on the conveyor, or the player may incur a penalty (e.g., losing that round or starting over for that doll).
8. **Scoring:** The first player to successfully complete a doll and secure it in an L.O.L. Surprise! ball wins that round.
9. **Winning the Game:** The first player to win three rounds (complete three dolls) is the overall winner of the L.O.L. Surprise! Fashion Factory Game.



Image: Game in progress, showing players assembling dolls on the moving conveyor belt.

MAINTENANCE

- **Cleaning:** Wipe down the conveyor belt and plastic components with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Do not immerse the motorized unit in water.
- **Storage:** Store all game pieces and the conveyor belt assembly in their original packaging or a suitable container to prevent loss or damage. Keep the game in a cool, dry place away from direct sunlight.
- **Battery Care:** Remove batteries from the motorized unit if the game will not be used for an extended period to prevent battery leakage.
- **Handle with Care:** The paper doll pieces are delicate. Handle them gently to avoid tearing or bending.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Conveyor belt does not move.	• Batteries are dead or incorrectly installed. • Power switch is off. • Obstruction on the belt.	• Check and replace batteries, ensuring correct polarity. • Ensure the power switch is in the "ON" position. • Remove any objects obstructing the belt's movement.

Problem	Possible Cause	Solution
Game pieces fall off the belt too easily.	• Conveyor belt speed is too high. • Pieces are not placed securely.	• Adjust the conveyor belt speed to a slower setting if available. • Practice placing pieces more carefully and centrally on the belt.
Difficulty picking up small pieces with tongs.	• Lack of fine motor skill practice.	• Practice using the tongs with non-game items to improve dexterity. • Encourage patience and gentle handling.

SPECIFICATIONS

- **Model Number:** 555117E4C
- **Product Dimensions:** 3 x 10.5 x 10.5 inches
- **Item Weight:** 15.8 ounces
- **Manufacturer:** MGA Entertainment
- **Recommended Age:** 6 - 17 years
- **Release Date:** July 13, 2018

WARRANTY INFORMATION

For specific warranty details regarding your L.O.L. Surprise! Fashion Factory Game, please refer to the warranty card included in the original packaging or contact MGA Entertainment directly. Warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report missing parts, please contact MGA Entertainment customer service. Contact information can typically be found on the product packaging or their official website.

Manufacturer: MGA Entertainment

For further assistance, visit the official L.O.L. Surprise! Store:[L.O.L. Surprise! Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question