

[Manuals.plus](#) /

> [Whirlpool](#) /

> Whirlpool WML75011HZ 1.1 cu. ft. Stainless Steel Microwave Oven User Manual

Whirlpool WML75011HZ

Whirlpool WML75011HZ 1.1 cu. ft. Stainless Steel Microwave Oven User Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Whirlpool WML75011HZ 1.1 cu. ft. Stainless Steel Microwave Oven. Please read this manual thoroughly before using your appliance and keep it for future reference. This microwave oven features a 1.1 cubic foot capacity, 1000 watts of cooking power, a low-profile design, a 400 CFM ventilation system, and sensor cooking technology for optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not operate the microwave oven if it is damaged, or after it malfunctions or has been dropped or damaged in any manner.
- Ensure proper ventilation around the appliance.
- Use only microwave-safe cookware.
- Do not allow children to use the microwave without supervision.
- Never operate the oven when empty.
- Do not attempt to service or repair the appliance yourself. Contact qualified service personnel.

SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your microwave oven. This model is designed for over-the-range installation.

1. **Unpacking:** Carefully unpack the microwave oven and all accessories. Remove all packing materials from

inside the oven cavity, including the turntable and turntable support.

2. **Placement:** Ensure the turntable and turntable support are correctly placed inside the oven cavity before first use.
3. **Mounting:** Install the microwave according to the detailed installation guide provided separately with your appliance. This typically involves mounting it above a range or cooktop.
4. **Electrical Connection:** Connect the microwave to a properly grounded 127 Volt, 60 Hz electrical outlet. Do not use an extension cord.



Image: The Whirlpool WML75011HZ microwave oven seamlessly integrated into a kitchen setting, installed above a range. This image illustrates the typical over-the-range installation.



Image: A detailed view of the Whirlpool WML75011HZ microwave's exterior, highlighting its stainless steel finish and the digital display with control panel buttons.

OPERATING INSTRUCTIONS

Your Whirlpool WML75011HZ microwave oven offers various functions for convenient cooking.

Basic Operation

- **Setting Time:** Press the 'Clock' button and use the number pad to enter the current time. Press 'Clock' again to confirm.
- **Manual Cooking:** Place food in the oven. Enter the desired cooking time using the number pad. Press 'Start' to begin.
- **Power Levels:** To adjust power, press 'Power' after entering cooking time, then select a power level from 1 to 10 using the number pad. (10 is full power).
- **Start/Pause:** Press the 'Start' button to begin cooking or to pause an ongoing cycle. Press 'Cancel' to stop a cycle completely.

Special Functions

- **Defrost:** Press the 'Defrost' button. Enter the weight of the food or select a preset defrost option. Press 'Start'.
- **Sensor Cooking:** This feature automatically adjusts cooking time based on the food's moisture. Place food in the oven, select a sensor cooking option (e.g., 'Sensor Cook'), and press 'Start'. The microwave will detect

when the food is done.

- **Reheat:** Use the 'Reheat' function for warming up leftovers. Select the appropriate option and press 'Start'.
- **Turntable:** The glass turntable rotates food for even heating. Always ensure it is properly seated on its support before operating the microwave.



Image: The interior of the Whirlpool WML75011HZ microwave, showing a dish containing vegetables and meat placed on the rotating glass turntable, ready for cooking.



Image: The interior of the Whirlpool WML75011HZ microwave, featuring two different sized mugs on the turntable, demonstrating space for various items.



Image: An unobstructed view of the Whirlpool WML75011HZ microwave's interior, showcasing the clean design of the cavity and the glass turntable in place.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** After each use, wipe the interior with a damp cloth and mild soap. For stubborn food splatters, heat a cup of water with lemon juice in the microwave for a few minutes to loosen residue, then wipe clean. Do not use abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. For the stainless steel finish, use a specialized stainless steel cleaner and polish in the direction of the grain to prevent streaks.
- **Turntable Care:** The glass turntable and its support can be removed for cleaning. They are dishwasher-safe or can be washed by hand with warm, soapy water. Ensure they are completely dry before placing them back in the oven.
- **Ventilation System:** If your model includes a ventilation system, regularly clean or replace the grease filters as per the separate installation guide.

TROUBLESHOOTING

Before contacting customer service, try these solutions for common issues:

Problem	Possible Cause	Solution
Microwave not starting	Door not closed properly; Power cord unplugged; Circuit breaker tripped.	Ensure door is firmly closed; Check power cord connection; Reset circuit breaker.
Food not cooking evenly	Turntable not rotating; Food not stirred or rearranged.	Check if turntable is properly seated; Stir or rearrange food halfway through cooking.
Oven light not working	Light bulb needs replacement.	Consult the service manual or contact customer support for bulb replacement instructions.

Problem	Possible Cause	Solution
Unusual noise during operation	Obstruction under turntable; Turntable not seated correctly.	Remove turntable and check for debris; Re-seat turntable properly.

SPECIFICATIONS

Detailed technical specifications for the Whirlpool WML75011HZ microwave oven:

- **Brand:** Whirlpool
- **Model Name:** WML75011HZ
- **Capacity:** 1.1 Cubic Feet
- **Wattage:** 1000 Watts
- **Dimensions (D x W x H):** 45.7 cm x 75.9 cm x 26.2 cm (18 in x 29.9 in x 10.3 in)
- **Color:** Stainless Steel
- **Special Feature:** Turntable
- **Installation Type:** Over-the-range
- **Voltage:** 127 Volts
- **Number of Power Levels:** 10
- **Material:** Stainless Steel
- **Turntable Diameter:** 12 Inches
- **Heating Method:** Microwave Radiation
- **Defrost System Type:** Defrost
- **Control Type:** Button
- **Included Components:** Turntable

WARRANTY AND SUPPORT

Your Whirlpool WML75011HZ microwave oven comes with a manufacturer's warranty and dedicated support.

- **Warranty:** This product includes a 12-month warranty for factory defects, directly with the manufacturer. Please retain your proof of purchase for warranty claims.
- **Customer Support:** For technical assistance, service, or warranty inquiries, please contact Whirlpool customer service. Refer to the contact information provided in your product packaging or on the official Whirlpool website.

