

[Manuals.plus](#) /

› [Fotopro](#) /

› Fotopro QAL-45 Quick Release Camera Plate Instruction Manual

Fotopro QAL-45

Fotopro QAL-45 Quick Release Camera Plate Instruction Manual

For Fotopro 42Q Head and Compatible Tripod Systems

1. INTRODUCTION AND OVERVIEW

The Fotopro QAL-45 Quick Release Camera Plate is designed to provide a fast, secure, and reliable connection between your camera and a compatible tripod head, such as the Fotopro 42Q. Constructed from high-quality aluminum with an anodized finish, this plate ensures durability and resistance to wear. Its universal design standards facilitate broad compatibility and ease of use for professional camera equipment.

The plate features an enhanced screw with a convenient flip-up handle, allowing for easy, tool-free tightening by hand, ensuring your camera is firmly secured.

2. PRODUCT FEATURES

- **Universal Compatibility:** Designed to universal standards for wide compatibility with various camera and tripod head systems, specifically Fotopro 42Q.
- **Secure Mechanism:** Provides a quick, simple, and very secure quick release mechanism, ideal for heavy professional camera equipment.
- **Enhanced Camera Screw:** Features a camera mounting screw with a flip-up handle for easy, tool-free tightening.
- **Durable Construction:** Made from high-quality aluminum materials for strength and longevity.
- **Wear-Resistant Finish:** Anodized with a hard, wear-resistant finish to protect against scratches and corrosion.
- **Anti-Slip Pads:** Integrated rubber pads on the top surface prevent camera rotation and protect the camera base from scratches.

3. PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1x Fotopro QAL-45 Quick Release Camera Plate
- 1x FotoPro 1 Year Warranty Information

4. SETUP AND INSTALLATION

Follow these steps to properly attach the quick release plate to your camera and then to your tripod head.

4.1 Attaching the Plate to Your Camera

1. Locate the 1/4-inch threaded mounting hole on the bottom of your camera.
2. Align the camera mounting screw on the QAL-45 plate with the camera's mounting hole.
3. Insert the screw into the camera's mounting hole.
4. Flip up the handle on the screw and rotate it clockwise until the plate is securely fastened to the camera. Ensure it is tight enough to prevent rotation but do not overtighten.
5. Flip the handle back down to a flat position.



Figure 1: Top view of the QAL-45 plate, showing the camera screw and anti-slip pads.



Figure 2: Bottom view of the QAL-45 plate, illustrating the flip-up handle for tightening the camera screw.

4.2 Attaching the Camera with Plate to a Tripod Head

1. Ensure your tripod head (e.g., Fotopro 42Q) has its quick release clamp open.
2. Slide the camera plate (with camera attached) into the quick release clamp of the tripod head.
3. Push the plate fully into the clamp until it clicks or locks into place.
4. Secure the clamp lever or knob on the tripod head to ensure the plate is firmly locked. Gently tug on the camera to confirm it is securely attached before use.

5. OPERATING INSTRUCTIONS

Once the QAL-45 plate is attached to your camera and secured in the tripod head, you can operate your camera as usual. The quick release system allows for rapid attachment and detachment of your camera from the tripod.

5.1 Detaching the Camera from the Tripod Head

1. Ensure your camera is balanced and supported before releasing the clamp.
2. Unlock or open the quick release clamp on your tripod head.
3. Carefully slide the camera with the attached plate out of the clamp.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Fotopro QAL-45 Quick Release Camera Plate, follow these maintenance guidelines:

- **Cleaning:** Wipe the plate with a soft, dry cloth to remove dust and dirt. For stubborn grime, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically inspect the camera screw for any signs of wear or damage. Ensure the flip-up handle operates smoothly. Check the anti-slip pads for integrity.

- **Storage:** Store the plate in a clean, dry environment when not in use.

7. TROUBLESHOOTING

If you encounter issues with your quick release plate, consider the following:

- **Plate not securing to camera:** Ensure the camera screw is fully tightened using the flip-up handle. Check that the camera's mounting hole is clear of debris.
- **Plate not fitting into tripod head:** Verify that your tripod head's quick release clamp is compatible with Arca-Swiss standard plates (the QAL-45 is designed to universal standards, but some clamps may vary). Ensure the clamp is fully open before attempting to insert the plate.
- **Camera feels loose on plate:** Re-tighten the camera screw. If the issue persists, inspect the anti-slip pads for wear or damage.

8. SPECIFICATIONS

Feature	Detail
Model Number	QAL-45
Material	Aluminum
Color	Black
Product Dimensions (L x W x H)	2 x 1.9 x 0.6 inches (5.08 x 4.83 x 1.52 cm)
Item Weight	0.8 ounces (22.68 grams)
Compatible Devices	Cameras (with 1/4-inch tripod socket)
Compatible Tripod Heads	Fotopro 42Q Head and other Arca-Swiss compatible quick release clamps

9. WARRANTY AND SUPPORT

This Fotopro QAL-45 Quick Release Camera Plate comes with a **FotoPro 1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or any inquiries regarding your product, please contact Fotopro customer service through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty validation.

Note: The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07BQM3TCL>

More documents and user manuals: **<https://manuals.plus/>**