

MÜLLER LICHT 20800186

MÜLLER LICHT Ecoline 60 LED Wall and Ceiling Lamp

MODEL: 20800186

Introduction

This manual provides essential information for the safe installation, operation, and maintenance of your MÜLLER LICHT Ecoline 60 LED Wall and Ceiling Lamp. Please read these instructions thoroughly before attempting installation or use, and retain this manual for future reference. Proper installation and use are crucial for optimal performance and safety.

Package Contents

Carefully unpack the product and ensure all items are present and undamaged. If any components are missing or damaged, do not proceed with installation and contact customer support.

- 1 x MÜLLER LICHT Ecoline 60 LED Wall and Ceiling Lamp
- Mounting hardware (screws, wall plugs)
- Instruction Manual

Safety Instructions

WARNING: Electrical shock hazard. Always disconnect power at the main circuit breaker before installation, maintenance, or cleaning. Installation should only be performed by a qualified electrician or a person with appropriate electrical knowledge.

- This product is designed for **indoor use only**. Do not install in wet locations or outdoors.
- Ensure the mounting surface can support the weight of the fixture.
- Do not modify the fixture or its components. This is a non-removable fixture; the LED light source cannot be replaced by the user.
- Keep packaging materials out of reach of children.
- Do not look directly into the LED light source when illuminated.

Setup and Installation

Assembly is required for this lamp. This fixture is designed for ceiling mounting.

1. **Prepare for Installation:** Turn off power at the main circuit breaker. Ensure the power is completely disconnected before proceeding.
2. **Mark Mounting Points:** Position the lamp on the desired ceiling location. Use a pencil to mark the drilling points for the mounting bracket.
3. **Drill Holes:** Drill holes at the marked points using an appropriate drill bit for your ceiling material. Insert the provided wall plugs into the drilled holes.
4. **Attach Mounting Bracket:** Secure the mounting bracket to the ceiling using the provided screws. Ensure it is firmly attached.
5. **Wire Connection:** Connect the electrical wires from the ceiling to the lamp's terminal block. Ensure correct polarity (Live, Neutral, Earth) according to local electrical codes. If unsure, consult a qualified electrician.
6. **Mount the Lamp:** Carefully attach the lamp body to the mounting bracket, securing it with the designated fasteners. Ensure the lamp is stable and flush against the ceiling.
7. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker.



Image of the MÜLLER LICHT Ecoline 60 LED Wall and Ceiling Lamp, showcasing its slim, linear design and silver housing. This lamp is designed for both wall and ceiling installation.

Operating Instructions

The MÜLLER LICHT Ecoline 60 LED Wall and Ceiling Lamp is operated via a standard wall switch. It is compatible with rocker-type switches.

- **Turning On/Off:** Flip the connected wall switch to the 'ON' position to illuminate the lamp. Flip the switch to the 'OFF' position to turn the lamp off.
- **Control Method:** The lamp's primary control method is through the external power switch.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your LED lamp.

- **Cleaning:** Before cleaning, ensure the lamp is switched off and cool. Wipe the lamp's surface with a soft, dry, or

- slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Lamp Replacement:** The LED light source in this fixture is integrated and non-removable. It cannot be replaced by the user. If the LED light source fails, the entire fixture must be replaced.
 - **Inspection:** Periodically check the lamp for any signs of damage or loose connections. If any issues are found, disconnect power and consult a qualified technician.

Troubleshooting

If you encounter issues with your lamp, refer to the following troubleshooting guide before contacting support.

- **Lamp does not turn on:**
 - Check if the power supply is connected and the wall switch is in the 'ON' position.
 - Verify that the main circuit breaker for the lighting circuit is not tripped.
 - Ensure all wiring connections are secure. If unsure, consult a qualified electrician.
- **Light is flickering or dim:**
 - Check for loose wiring connections.
 - Ensure the voltage supply is stable and within the specified range (230 Volts).

If these steps do not resolve the issue, please contact customer support.

Specifications

Brand	MÜLLER LICHT
Manufacturer	EDE Renovierung E
Model Number	20800186
ASIN	B07BQP9N47
Product Dimensions	60.5 x 3 x 4.3 cm
Item Weight	200 Grams
Material	Aluminum
Shade Material	Aluminum
Color	Silver
Shade Color	Neutral White
Style	Modern
Luminaire Shape	Ceiling
Room Type	Living Room
Indoor/Outdoor Use	Indoor
Power Source	Corded Electric
Installation Type	Ceiling Mounting

Special Features	Energy Efficient
Control Method	Touch (via external switch)
Light Source	LED
Number of Light Sources	1
Voltage	230 Volts
Light Color	Neutral White
Lighting Method	LED
Wattage	9 Watts
Switch Type	Rocker (compatible)
Brightness	850 Lumens
Efficiency	Efficient
Mounting Type	Ceiling Mounting
Fixture Type	Non-removable
Assembly Required	Yes
Finish Type	Lacquered
Number of Items	1
Number of Units	1
Included Components	Mounting hardware
Guaranteed Software Updates Until	Unknown
Availability of Spare Parts in EU	1 Year

Warranty and Support

This product comes with a warranty for a minimum period of **2 years** after the date of purchase, covering defects in materials and workmanship under normal use.

Spare parts for this product are available in the EU for a period of **1 year**.

For warranty claims, technical support, or further assistance, please contact your retailer or the MÜLLER LICHT customer service department. Please have your proof of purchase and model number (20800186) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question