

[Manuals.plus](#) /

› [Portronics](#) /

› Portronics Pure Sound Pro III POR-891 Wireless Soundbar User Manual

Portronics Pure Sound Pro III POR-891

Portronics Pure Sound Pro III POR-891 Wireless Soundbar User Manual

Model: Pure Sound Pro III POR-891

1. INTRODUCTION

The Portronics Pure Sound Pro III POR-891 is a versatile wireless soundbar designed to enhance your audio experience. It features multiple connectivity options including Bluetooth 4.2, AUX-IN, USB drive playback, and an FM tuner. This manual provides detailed instructions for setting up, operating, and maintaining your soundbar.



Image 1.1: The Portronics Pure Sound Pro III POR-891 soundbar, showcasing its sleek, elongated design and front speaker grille.

2. PACKAGE CONTENTS

Please check the box for the following items:

- Portronics Pure Sound Pro III POR-891 Soundbar
- USB Charging Cable
- 3.5mm AUX Cable
- User Manual

3. PRODUCT FEATURES

- **Powerful Audio Output:** 16W stereo sound for clear and dynamic audio.
- **Bluetooth 4.2 Connectivity:** Seamless wireless connection to compatible devices within a 10-meter range.
- **Multi-Mode Playback:** Supports Bluetooth, 3.5mm AUX-IN, USB drive, and FM radio.
- **Long-lasting Battery:** Integrated 2500mAh lithium-ion battery provides over 7 hours of music playback on a single charge.
- **Portable Design:** Lightweight at approximately 990g and compact dimensions (46 x 6.5 x 7 cm) for easy transport.



Image 3.1: Visual representation highlighting the soundbar's capability to deliver clear audio.



Lightweight & Portable

Weighing just 930 grams, it can be carried and set up according to your liking.

Image 3.2: The soundbar shown in a backpack, illustrating its portable and lightweight design.

4. CONTROLS AND INDICATORS

Familiarize yourself with the buttons and ports on your soundbar:

Not Shying away from OG features

Pushing boundaries but also keeping
them grounded with AUX and USB ports



Image 4.1: Close-up view of the soundbar's side panel, indicating the USB port, Micro USB charging port, and AUX input port.

- **Power Button:** Press and hold to turn the soundbar ON/OFF. Short press to change modes.
- **Volume Up (+):** Short press to increase volume. Long press for next track (in Bluetooth/USB mode) or next FM station (in FM mode).
- **Volume Down (-):** Short press to decrease volume. Long press for previous track (in Bluetooth/USB mode) or previous FM station (in FM mode).
- **Play/Pause Button:** Short press to play/pause music. In FM mode, short press to auto-scan and save stations.
- **Micro USB Port (DC 5V):** For charging the soundbar.
- **AUX Port:** 3.5mm input for wired audio connection.
- **USB Port:** For playing audio from a USB flash drive.
- **LED Indicator:** Indicates power status, charging status, and current mode.

5. SETUP

1. **Initial Charge:** Before first use, fully charge the soundbar using the provided USB cable and a 5V USB power adapter

(not included). The LED indicator will show charging status.

2. **Power On:** Press and hold the Power button for a few seconds until you hear an audible prompt and the LED indicator lights up.

6. OPERATING INSTRUCTIONS

6.1. Bluetooth Mode

1. Turn on the soundbar. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED.
2. Enable Bluetooth on your mobile device or computer.
3. Search for "Portronics POR-891" in the list of available devices and select it to pair.
4. Once paired, the LED indicator will stop flashing, and you will hear a confirmation tone.
5. You can now play audio from your device through the soundbar. Use the soundbar's volume controls or your device's volume controls to adjust the sound level.



Image 6.1: A smartphone wirelessly connected to the soundbar, demonstrating Bluetooth connectivity.

6.2. AUX Mode

1. Connect one end of the 3.5mm AUX cable to the AUX port on the soundbar.
2. Connect the other end of the AUX cable to the audio output jack of your device (e.g., smartphone, laptop, TV).
3. Press the Power button briefly to cycle through modes until you hear the AUX mode prompt.
4. Play audio from your connected device.

6.3. USB Playback Mode

1. Insert a USB flash drive containing MP3 audio files into the USB port on the soundbar.
2. The soundbar will automatically switch to USB mode and begin playing the audio files. If not, press the Power button briefly to cycle to USB mode.
3. Use the Volume Up/Down buttons (long press) to navigate between tracks.

6.4. FM Radio Mode

1. Press the Power button briefly to cycle through modes until you hear the FM mode prompt.
2. To auto-scan and save available FM stations, short press the Play/Pause button. The soundbar will scan and store stations automatically.
3. Once scanning is complete, use the Volume Up/Down buttons (long press) to switch between saved FM stations.

7. CHARGING THE DEVICE

The soundbar is equipped with a 2500mAh lithium-ion battery. When the battery is low, you will hear an audible low battery warning. To charge:

1. Connect the Micro USB end of the charging cable to the DC 5V port on the soundbar.
2. Connect the standard USB end to a USB power source (e.g., computer USB port, USB wall adapter).
3. The LED indicator will illuminate to show charging status.
4. A full charge takes approximately 2 hours and provides up to 7 hours of playback time.

Big Battery

Powerful Battery Life with 2000 mAh
with up to 4 hours of playback



Image 7.1: Visual emphasizing the soundbar's substantial battery capacity.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted	Charge the soundbar fully.
Cannot pair via Bluetooth	Soundbar not in pairing mode; Device Bluetooth off; Too far from device	Ensure soundbar is in Bluetooth mode (flashing LED). Turn on Bluetooth on your device. Move device closer to soundbar (within 10m).
No sound in AUX mode	AUX cable not connected properly; Incorrect mode selected; Device volume too low	Ensure AUX cable is securely connected. Press Power button to select AUX mode. Increase volume on both soundbar and connected device.

Problem	Possible Cause	Solution
USB playback not working	USB drive not inserted correctly; Incompatible file format; Incorrect mode selected	Reinsert USB drive. Ensure audio files are in MP3 format. Press Power button to select USB mode.
Poor FM reception	Weak signal; Environmental interference	Relocate the soundbar to an area with better reception. Perform auto-scan again.

9. SPECIFICATIONS

- **Model:** Pure Sound Pro III POR-891
- **Power Output (RMS):** 16 Watts
- **Bluetooth Version:** 4.2
- **Wireless Range:** Up to 10 meters
- **Battery:** 1 Lithium Polymer, 2500mAh
- **Battery Life:** Approximately 6-7 hours
- **Charging Time:** Approximately 2 hours
- **Connectivity:** Bluetooth, 3.5mm AUX, USB, FM Tuner
- **Product Dimensions:** 46 x 6.5 x 7 cm
- **Product Weight:** 990 g
- **Material:** High Quality Plastic

10. SAFETY INFORMATION

- Do not expose the soundbar to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not disassemble or attempt to repair the soundbar yourself. This will void the warranty.
- Keep out of reach of children.
- Use only the provided charging cable or a certified 5V USB charger.

11. WARRANTY AND SUPPORT

The Portronics Pure Sound Pro III POR-891 comes with a **1-Year Warranty** from the date of purchase. For any queries, technical support, or warranty claims, please contact Portronics customer service:

- **Email:** help@portronics.com
- **Phone:** +91-9555245245

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07BQTRF7S>

More documents and user manuals: **<https://manuals.plus/>**