

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bosch](#) /
- › [Bosch BFL554MB0 Built-in Microwave Oven User Manual](#)

Bosch BFL554MB0

Bosch BFL554MB0 Built-in Microwave Oven

USER MANUAL

1. INTRODUCTION

Thank you for choosing the Bosch BFL554MB0 Built-in Microwave Oven. This appliance is designed for modern kitchens, offering efficient and convenient cooking, reheating, and defrosting. Please read this manual carefully before using the appliance for the first time to ensure safe and correct operation. Keep this manual for future reference.



Image 1.1: Front view of the Bosch BFL554MB0 Built-in Microwave Oven with the door closed.



Image 1.2: Front view of the Bosch BFL554MB0 Built-in Microwave Oven with the door open, revealing the stainless steel interior.

2. SAFETY INFORMATION

Always observe the following safety precautions when using your microwave oven:

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door, or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the door (e.g., bent), hinges and latches (e.g., broken or loosened), or door seals and sealing surfaces.
- Only qualified service personnel should adjust or repair the oven.
- Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens as they may explode, even after microwave heating has ended.

3. SETUP AND INSTALLATION

The Bosch BFL554MB0 is a built-in microwave oven designed for integration into kitchen cabinetry. Proper installation is crucial for safety and optimal performance. Ensure the installation area meets the specified

dimensions and ventilation requirements.

3.1. Installation Dimensions

Refer to the diagram below for precise installation dimensions. Ensure sufficient clearance for ventilation and proper operation.

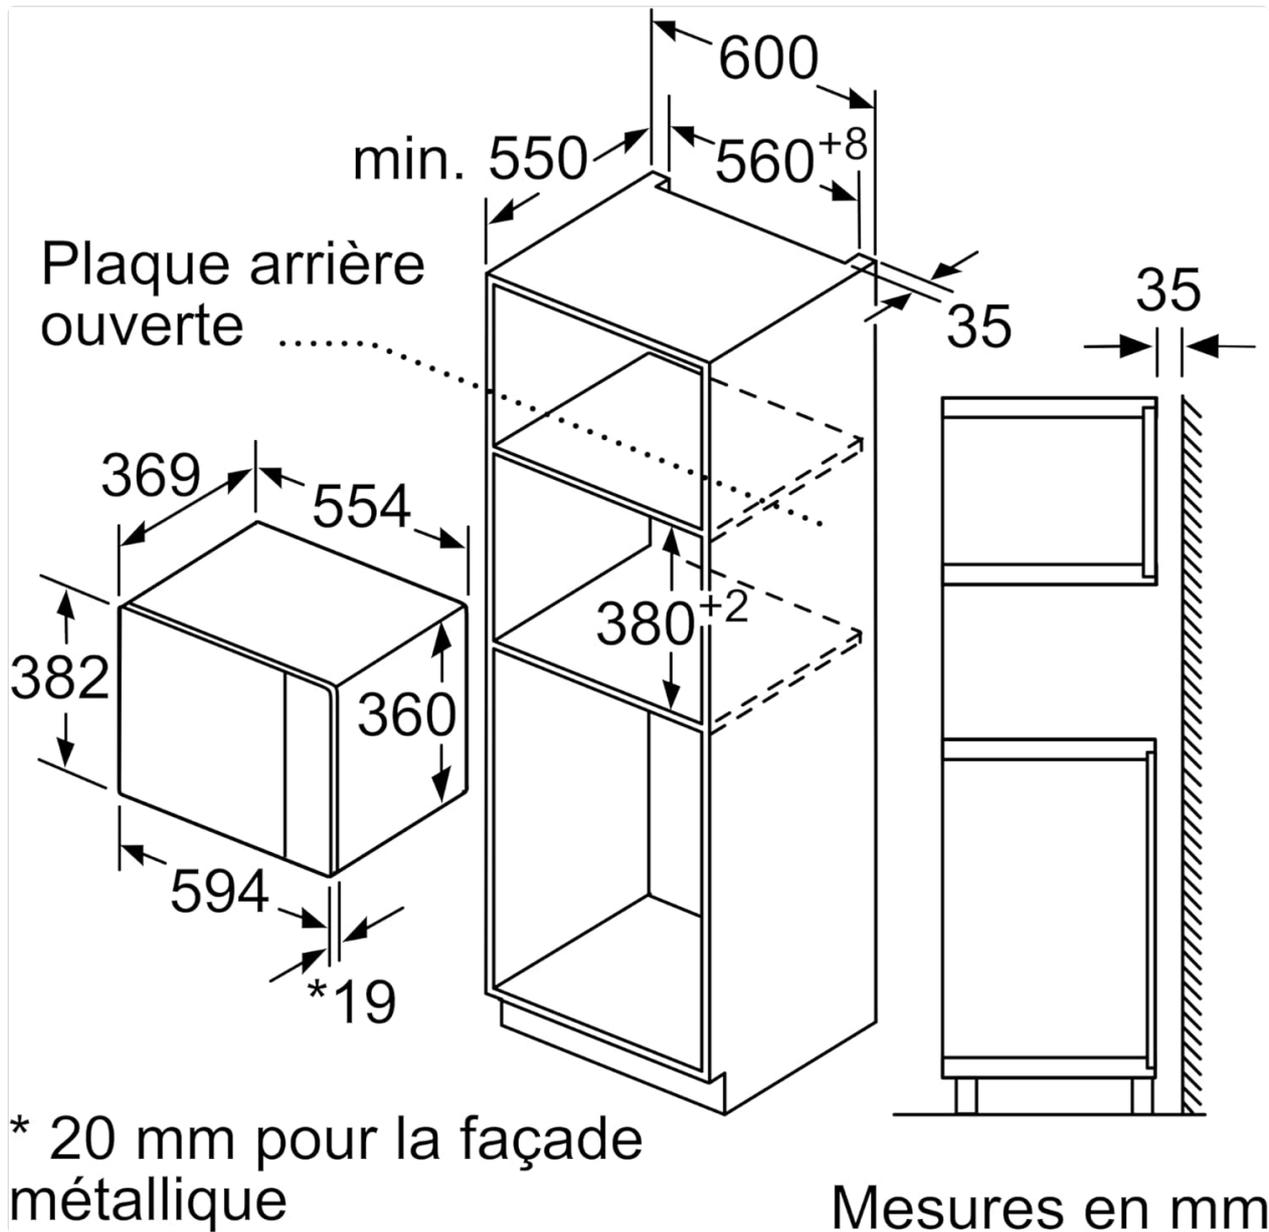


Image 3.1: Installation dimensions for the Bosch BFL554MB0. The appliance dimensions are approximately 38.2 cm (H) x 59.4 cm (W) x 38.8 cm (D). The required cabinet opening is approximately 38.0 cm (+2mm) (H) x 56.0 cm (+8mm) (W) x 55.0 cm (min) (D).

3.2. Corner Installation

If installing in a corner cabinet, ensure a minimum clearance of 3mm from adjacent surfaces as shown in the diagram.

Montage en angle micro-ondes

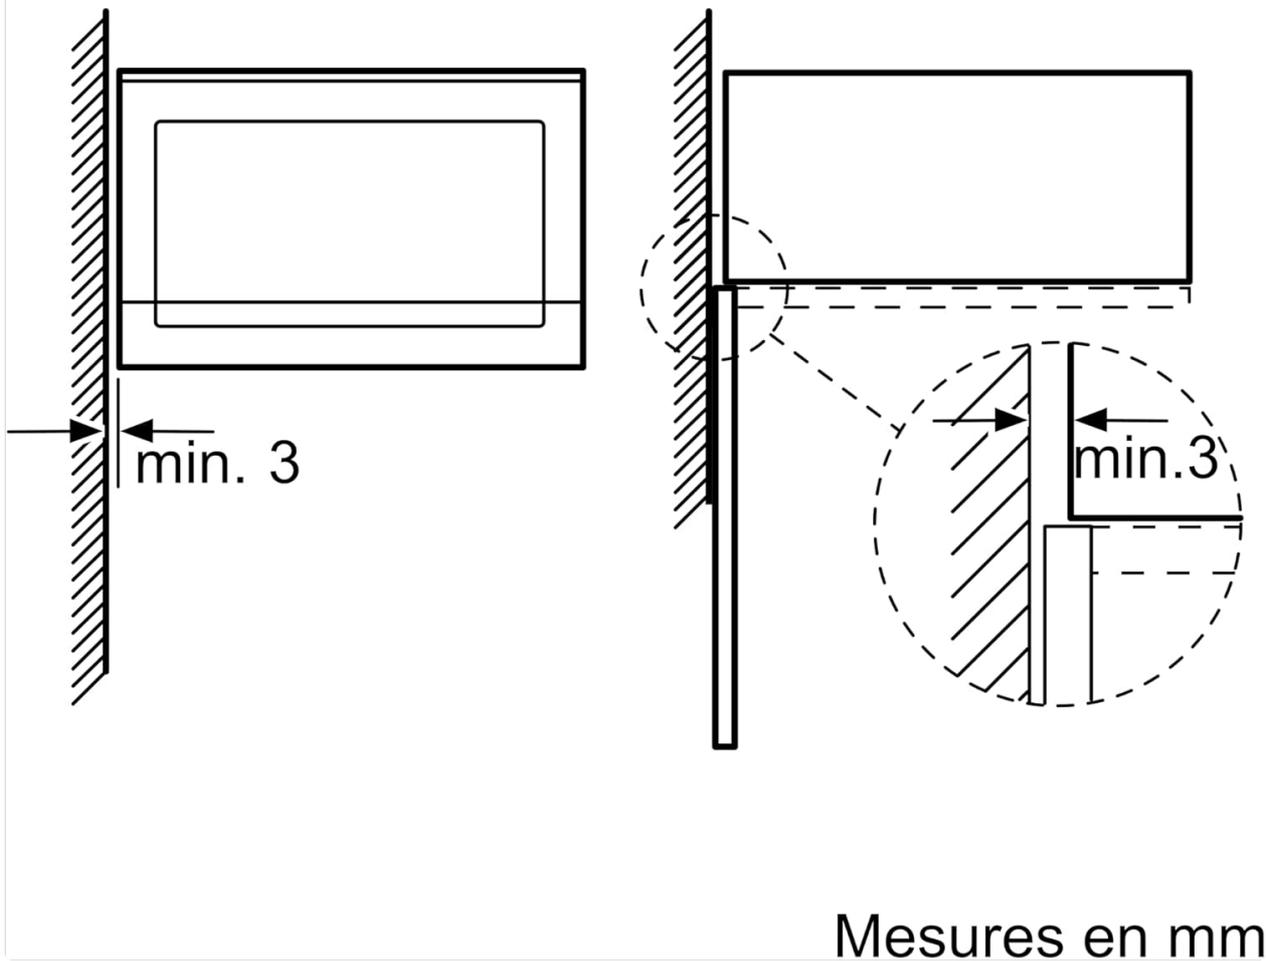


Image 3.2: Corner installation guidelines, indicating a minimum 3mm clearance.

3.3. Electrical Connection

The appliance operates on 220V and has a power output of 900W. Ensure the electrical supply matches these specifications and that the appliance is properly grounded. Do not use extension cords.

4. OPERATING INSTRUCTIONS

The Bosch BFL554MB0 features an intuitive LED display and a push-pull knob for easy operation.

4.1. Control Panel Overview

The LED display shows the current time and remaining cooking time. The push-pull knob allows for easy selection and adjustment of settings.

4.2. Basic Microwave Operation

1. **Place Food:** Place food in a microwave-safe container inside the oven.
2. **Close Door:** Ensure the oven door is securely closed.
3. **Set Power Level:** Use the control knob to select the desired microwave power level (e.g., 90W, 180W, 360W, 600W, 900W).

4. **Set Cooking Time:** Rotate the control knob to set the desired cooking time.
5. **Start Cooking:** Press the 'Start' button to begin cooking.
6. **Stop/Pause:** Press the 'Stop' button to pause or cancel cooking.

4.3. AutoPilot 7 Programs

The microwave features AutoPilot 7 technology with 7 automatic programs. Select the appropriate program from the menu, and the oven will automatically set the optimal cooking time and power level for various dishes.

4.4. Defrost Function

To defrost food, select the defrost function and input the weight of the food. The oven will calculate and apply the appropriate defrosting time and power.

4.5. Grill Function

This appliance includes a grill function for browning and crisping food. Refer to the specific instructions in the full manual for using the grill function, including recommended cooking times and suitable cookware.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your microwave oven.

5.1. Cleaning the Interior

- Wipe the interior cavity, including the door seals and sealing surfaces, with a damp cloth after each use.
- For stubborn food residues, use a mild detergent. Avoid abrasive cleaners or scouring pads, which can damage the stainless steel interior.
- The push-pull knob design facilitates easier cleaning of the control panel area.

5.2. Cleaning the Exterior

- Clean the exterior surfaces with a soft, damp cloth.
- For stainless steel surfaces, use a specialized stainless steel cleaner to maintain its finish and prevent fingerprints.

5.3. Turntable Care

If your model includes a turntable, remove it and wash it in warm, soapy water or in a dishwasher. Ensure it is dry before placing it back in the oven.

6. TROUBLESHOOTING

Before contacting service, try the following solutions for common issues:

- **Oven does not start:** Check if the power cord is securely plugged in. Ensure the door is fully closed. Check your household fuse/circuit breaker.
- **Food not heating:** Ensure the power level and cooking time are set correctly. Check that the door is properly closed.
- **Light not working:** The oven light may need replacement. Contact qualified service personnel.
- **Unusual noise during operation:** Ensure the turntable (if applicable) is correctly positioned and not obstructed.
- **Display shows an error code:** Refer to the comprehensive troubleshooting section in the full product manual or contact customer support with the specific error code.

7. SPECIFICATIONS

Feature	Specification
Brand	Bosch
Model Information	BFL554MB0
Product Dimensions (H x W x D)	38.8 x 59.4 x 38.2 cm
Weight	19 kg
Capacity	25 Liters
Installation Type	Built-in
Special Features	Grill function
Oven Cooking Mode	Electric
Color	Black
Voltage	220 V
Wattage	900 watts
Defrost Function	Yes
Door Hinge	Left
Material Type	Stainless steel
Interior Material	Stainless steel
Included Components	Bosch BFL554MB0 Microwave Oven

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your appliance or visit the official Bosch website for your region. Keep your purchase receipt as proof of purchase.

For technical support, spare parts, or service requests, please contact Bosch customer service. You can find contact details on the official Bosch website or in the documentation provided with your appliance.