

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [vidaXL](#) /

› vidaXL 5.6 kg Mini Twin Tub Washing Machine with Timer and Drain Hose User Manual

vidaXL 50549

vidaXL 5.6 kg Mini Twin Tub Washing Machine User Manual

Model: 50549

1. INTRODUCTION

Thank you for purchasing the vidaXL 5.6 kg Mini Twin Tub Washing Machine. This compact and efficient appliance is designed for use in small living spaces, dormitories, camping, or recreational vehicles (RVs). It features a dual-tub design for washing and spinning, with a total wash capacity of 3.6 kg and a spin capacity of 2 kg. Please read this manual thoroughly before operation to ensure safe and proper use.



Figure 1: Front view of the vidaXL Mini Twin Tub Washing Machine, showing its compact design and blue and white color scheme.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety.

- This product is not a toy. Do not allow children to play with the appliance.
 - Ensure the power supply matches the specifications (220-240 V~, 50/60 Hz).
 - Do not operate the machine with a damaged power cord or plug.
 - Do not immerse the appliance, cord, or plug in water or other liquids.
 - Always unplug the appliance from the power outlet when not in use and before cleaning.
 - Place the machine on a stable, level surface to prevent vibration and noise.
 - Do not wash items that are soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
 - Keep hands and feet clear of moving parts during operation.
 - Do not open the spin tub lid until the spin cycle has completely stopped.
-

3. PACKAGE CONTENTS

Please check the package contents upon unpacking. Ensure all items are present and undamaged.

- vidaXL Mini Twin Tub Washing Machine (Model 50549)
 - Drain Hose
 - Water Inlet Hose
 - Spin Basket
 - Lids (2, one for wash tub, one for spin tub)
 - User Manual (this document)
-

4. PRODUCT FEATURES

- **Dual Tub Design:** Separate tubs for washing and spinning.
- **Compact and Portable:** Ideal for small spaces, camping, and RVs.
- **Wash Capacity:** Up to 3.6 kg of laundry.
- **Spin Capacity:** Up to 2 kg of laundry.
- **Wash Timer:** Integrated 15-minute timer for wash cycles.
- **Select Switch:** Allows selection between standard wash, soft wash, and drain functions.
- **Durable Material:** Constructed from plastic in blue and white.
- **Dimensions:** 57.5 x 34 x 65 cm (W x D x H).



Figure 2: Top view of the washing machine with both lids open, illustrating the separate wash tub (left) and spin tub (right).

5. SETUP

5.1 Placement

- Place the washing machine on a firm, level surface to minimize vibration and noise during operation.
- Ensure there is sufficient space around the machine for ventilation and access.
- Position the machine near a water source and a drain point.

5.2 Connecting the Water Inlet Hose

1. Locate the water inlet on the top rear of the washing machine.
2. Connect one end of the provided water inlet hose to the water inlet on the machine.
3. Connect the other end of the water inlet hose to a suitable water tap. Ensure connections are secure to prevent leaks.

5.3 Positioning the Drain Hose

- The drain hose is permanently attached to the side of the machine.
 - Position the drain hose into a sink, bucket, or floor drain. Ensure the hose is not kinked or blocked to allow for proper water drainage.
 - The drain hose should be positioned lower than the machine's base for gravity drainage.
-

6. OPERATING INSTRUCTIONS

6.1 Control Panel Overview



Figure 3: The control panel features a Wash Timer (left), Select Switch (center), and Spin Timer (right).

- **Wash Timer:** Sets the duration of the wash cycle (up to 15 minutes).
- **Select Switch:** Controls the function (Standard Wash, Soft Wash, Drain).
- **Spin Timer:** Sets the duration of the spin cycle (up to 5 minutes).

6.2 Washing Procedure

1. **Load Laundry:** Open the wash tub lid and place up to 3.6 kg of dry laundry into the wash tub. Do not overload.
2. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the wash tub.

3. **Fill with Water:** Turn on the water tap connected to the inlet hose. Fill the wash tub with water to the desired level. Close the water tap when the desired level is reached.
4. **Set Wash Cycle:** Turn the **Wash Timer** knob clockwise to select the desired wash time (e.g., 5, 10, or 15 minutes).
5. **Select Wash Mode:** Turn the **Select Switch** to "Standard" for normal clothes or "Soft" for delicate items. The machine will begin washing.
6. **Drain Water:** Once the wash cycle is complete, turn the **Select Switch** to "Drain" to empty the water from the wash tub. Ensure the drain hose is properly positioned.

6.3 Spinning Procedure

1. **Transfer Laundry:** After draining the wash water, carefully transfer the wet laundry from the wash tub to the spin tub. Do not exceed 2 kg capacity for the spin tub. Distribute laundry evenly to prevent excessive vibration.
2. **Place Spin Basket Cover:** Place the spin basket cover on top of the laundry in the spin tub.
3. **Close Lid:** Close the spin tub lid securely.
4. **Set Spin Cycle:** Turn the **Spin Timer** knob clockwise to select the desired spin time (up to 5 minutes). The machine will begin spinning.
5. **Remove Laundry:** Once the spin cycle is complete and the tub has come to a complete stop, open the lid and remove the spun laundry.

Note: For best results, perform a rinse cycle by refilling the wash tub with clean water after the initial wash and drain, then repeat the spin cycle.

7. MAINTENANCE

7.1 Cleaning the Exterior

- Always unplug the machine before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the plastic.

7.2 Cleaning the Tubs

- After each use, rinse the wash and spin tubs with clean water.
- Wipe down the inside of the tubs to remove any detergent residue or lint.
- Leave the lids open for a short period after cleaning to allow the tubs to air dry and prevent odors.

7.3 Drain Hose Care

- Periodically check the drain hose for blockages or kinks.
 - Ensure the hose is clean and free of debris to maintain efficient drainage.
-

8. TROUBLESHOOTING

If you encounter any issues with your washing machine, please refer to the following common problems and solutions before contacting support.

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in. Power outage. Timer not set.	Ensure the power cord is securely plugged into a working outlet. Check your household's power supply. Turn the Wash Timer or Spin Timer knob to the desired setting.
Water does not drain.	Drain hose kinked or blocked. Drain hose positioned too high. Select Switch not set to "Drain".	Straighten the drain hose and clear any blockages. Ensure the drain hose is positioned lower than the machine's base. Turn the Select Switch to "Drain".
Excessive vibration during spin cycle.	Uneven load in spin tub. Machine not on a level surface.	Redistribute laundry evenly in the spin tub. Ensure the machine is placed on a stable and level surface.
Water leaks.	Loose water inlet hose connection. Overfilling the wash tub.	Tighten the water inlet hose connections. Do not fill water above the maximum fill line in the wash tub.

9. SPECIFICATIONS

Feature	Specification
Brand	vidaXL
Model	50549
Color	Blue and White
Material	Plastic
Dimensions (W x D x H)	57.5 x 34 x 65 cm
Weight	12.65 kg
Power Supply	220 - 240 V~, 50 / 60 Hz
Wash Power	240 W
Spin Power	120 W
Wash Capacity	3.6 kg
Spin Capacity	2 kg
Wash Timer	Up to 15 minutes
Spin Timer	Up to 5 minutes

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the terms and conditions provided by your retailer at the time of purchase. In case of issues not covered by this manual, please contact the retailer or vidaXL customer service for assistance.

You can find more information about vidaXL products and support on their official website www.vidaxl.com

© 2023 vidaXL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07BSCZFL6>

More documents and user manuals: <https://manuals.plus/>