

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [NETTA](#) /

> [NETTA 2-in-1 Long Reach Hedge Trimmer and Chainsaw 710W User Manual](#)

NETTA NT-710WTRIM+CHAIN

NETTA 2-in-1 Long Reach Hedge Trimmer and Chainsaw 710W

Model: NT-710WTRIM+CHAIN

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment (PPE) including eye protection, hearing protection, gloves, and sturdy footwear.
- Keep children and bystanders away while operating the tool.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Avoid accidental starting. Ensure the switch is in the off-position before connecting to power, picking up, or carrying the tool.
- Do not overreach. Maintain proper footing and balance at all times.
- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools.
- Inspect the tool for damage before each use. Do not use if any part is damaged.
- Ensure the 2-way safety switch is fully engaged before operation to prevent accidental starting.
- Always use the blade cover when the hedge trimmer is not in use or during transport.

PRODUCT OVERVIEW

The NETTA 2-in-1 Long Reach Hedge Trimmer and Chainsaw is designed for efficient garden maintenance, offering versatility for both hedge trimming and branch cutting.



Figure 1: The NETTA 2-in-1 tool, illustrating its hedge trimmer and chainsaw attachments, along with the 10m power cable and quick head change mechanism.



Figure 2: Detailed view of the tool's components, including the 2-way safety switch, 10m power cable, extendable pole, machine head release, head rotate button, oil tank (for chainsaw), and blade cover.

Key Components:

- **Motor Unit:** Houses the powerful 710W motor for the chainsaw and 550W motor for the hedge trimmer.
- **Extension Pole:** Allows for a reach of up to 2.7 meters when extended. Features a quick lock/unlock mechanism.
- **Hedge Trimmer Attachment:** Equipped with a 45cm laser-cut blade, capable of cutting branches up to 16mm thick.
- **Chainsaw Attachment:** Features a 25cm Oregon chain, designed for cutting thicker branches. Includes a built-in oil tank.
- **Adjustable Head:** Both attachments have adjustable heads for optimal cutting angles. The hedge trimmer head adjusts from -45° to 90°, and the chainsaw head from 0° to 30°.
- **Safety Switch:** A 2-way safety trigger prevents accidental operation.
- **Blade Cover:** Protects the hedge trimmer blade when not in use.

- **Shoulder Harness:** Provides support and reduces fatigue during extended use.
- **Power Cable:** A 10-meter insulated power cable for extended reach.

SETUP AND ASSEMBLY

Before first use, ensure all components are present and undamaged. Assembly is tool-free for head changes.

1. Attaching the Desired Head:

1. Ensure the tool is disconnected from the power supply.
2. Press the "Machine Head Release" button located on the extension pole.
3. Align the desired attachment (hedge trimmer or chainsaw) with the pole and push firmly until it clicks into place.
4. Verify the head is securely attached by gently pulling on it.



Figure 3: Illustrates the "Machine Head Release" button and the process of attaching either the hedge trimmer or chainsaw head.

2. Extending the Pole:

1. Locate the "Extend Pole Lock/Unlock" mechanism on the pole.
2. Press the release button and slide the pole to the desired length.
3. Ensure the lock mechanism is fully engaged to secure the pole at the chosen extension.



Figure 4: Details the extension pole mechanism, showing the quick lock and unlock functions for adjusting the tool's length.

3. Attaching the Shoulder Harness:

Attach the shoulder harness to the designated point on the tool's main handle. Adjust the strap length for comfortable and balanced operation, distributing the tool's weight (5.8 kg) evenly.

4. Chainsaw Oil Filling (Chainsaw Attachment Only):

Before using the chainsaw attachment, fill the built-in oil tank with appropriate chainsaw chain lubricant. Refer to the oil tank cap for specific oil type recommendations. Do not operate the chainsaw without proper lubrication.

OPERATING INSTRUCTIONS

General Operation:

1. Ensure the tool is properly assembled and connected to a suitable power outlet.
2. To start the tool, press and hold the 2-way safety switch (1) and then squeeze the main trigger (2). The tool will only operate when both are engaged.
3. Release the main trigger to stop the tool.



Figure 5: Illustrates the 2-way safety trigger (1+2) which must be pressed simultaneously to operate the tool, preventing accidental starts.

Using the Hedge Trimmer:

- Attach the hedge trimmer head.
- Adjust the head angle using the "Head Rotate Button" for optimal cutting position (from -45° to 90°).
- Hold the tool firmly with both hands, utilizing the shoulder harness for support.
- Move the trimmer smoothly along the hedge, ensuring the blades cut through branches up to 16mm thick.
- Avoid forcing the blades through thick material; this can damage the tool and cause injury.



Figure 6: Shows the 45cm trimmer blade cutting length and 16mm maximum branch thickness for the hedge trimmer.

Using the Chainsaw:

- Attach the chainsaw head and ensure the oil tank is filled.
- Adjust the head angle as needed (from 0° to 30°).
- Hold the tool securely, maintaining good balance.

- Allow the chainsaw to reach full speed before engaging with the branch.
- Make cuts smoothly and steadily. Be aware of kickback, especially when cutting with the tip of the bar.
- Do not attempt to cut branches thicker than the chainsaw's capacity.

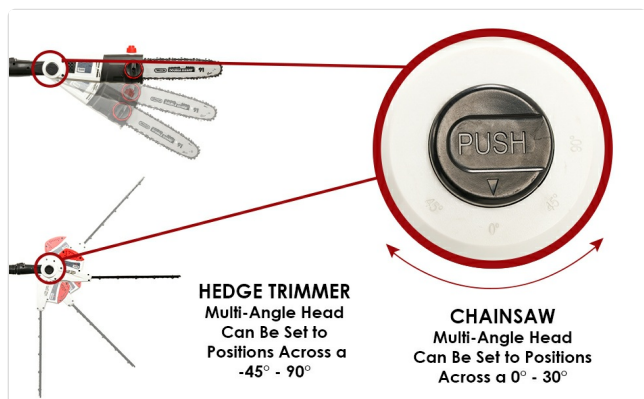


Figure 7: The chainsaw attachment in action, demonstrating its capability to cut thicker branches.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your tool. Always disconnect from power before performing any maintenance.

1. Cleaning:

- After each use, clean the blades of the hedge trimmer and the chain/bar of the chainsaw.
- Remove sap, debris, and dirt using a stiff brush and a damp cloth.
- Do not use solvents or abrasive cleaners.

2. Hedge Trimmer Blade Care:

- Periodically lubricate the hedge trimmer blades with a light machine oil to prevent rust and ensure smooth operation.
- If blades become dull, they can be sharpened by a qualified service technician.
- Always use the blade cover when storing the hedge trimmer.

3. Chainsaw Chain and Bar Care:

- Regularly check the chain tension. Adjust if too loose or too tight.
- Ensure the oil tank is always filled with appropriate chain lubricant during operation.
- Sharpen the chain regularly or replace it when dull. A dull chain can cause kickback and inefficient cutting.
- Inspect the guide bar for wear and burrs.
- The Oregon chain (25cm) is designed for durability, but proper maintenance is key.

4. Storage:

- Store the tool in a dry, secure place, out of reach of children.
- Always attach the blade cover to the hedge trimmer before storage.
- Ensure the power cable is neatly coiled and free from kinks or damage. Use the cable hook for tidy storage.

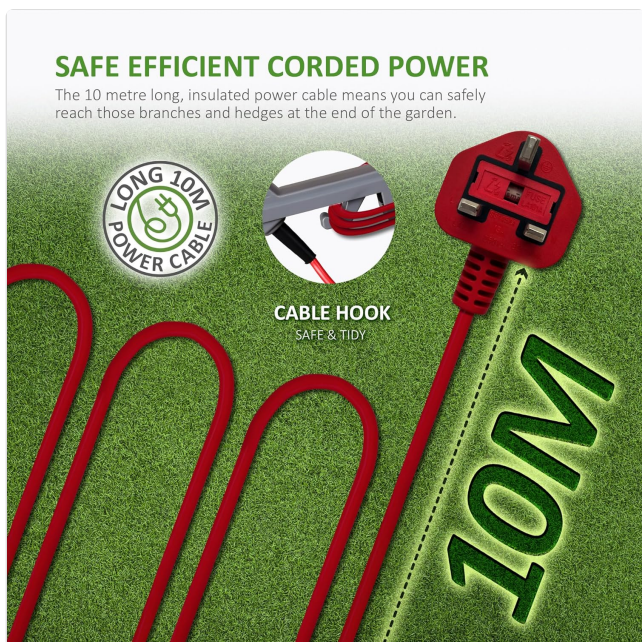


Figure 8: The 10-meter power cable with a cable hook for safe and tidy storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not start	Not connected to power 2-way safety switch not engaged Power cable damaged	Check power connection and outlet. Ensure both safety switch and trigger are pressed. Inspect cable for damage; replace if necessary.
Hedge trimmer blades jam	Cutting material too thick Blades dull or dirty	Do not force; use chainsaw for thicker branches. Clean and lubricate blades. Sharpen or replace if dull.
Chainsaw chain comes off	Incorrect chain tension Chain or bar wear	Adjust chain tension according to instructions. Inspect chain and bar for wear; replace if necessary.
Reduced cutting performance	Dull blades/chain Insufficient lubrication (chainsaw)	Sharpen or replace blades/chain. Ensure chainsaw oil tank is filled.

SPECIFICATIONS

Feature	Specification
Model Number	NT-710WTRIM+CHAIN
Power Source	AC/DC
Hedge Trimmer Motor Power	550W
Hedge Trimmer Max Motor Speed	1800 rpm

Feature	Specification
Chainsaw Motor Power	710W
Chainsaw Max Chain Speed	12.5 m/s
Hedge Trimmer Blade Length	45 cm
Hedge Trimmer Max Cutting Thickness	16 mm
Chainsaw Blade Length	25 cm (Oregon chain)
Extended Reach	Up to 2.7 meters
Power Cable Length	10 meters
Weight	5.8 kg
Product Dimensions (L x W x H)	270 x 15 x 15 cm (extended)

Note: Specifications are subject to change without prior notice for product improvement.

WARRANTY AND SUPPORT

This NETTA product comes with a **365-day warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

What the Warranty Covers:

- Repair or replacement of defective parts.
- Labor costs associated with warranty repairs.

What the Warranty Does Not Cover:

- Damage caused by misuse, abuse, neglect, or improper maintenance.
- Normal wear and tear of consumable parts (e.g., blades, chain).
- Damage resulting from unauthorized repairs or modifications.
- Accidental damage.

For warranty claims or technical support, please contact NETTA customer service. Keep your proof of purchase for warranty validation.

Contact information for support is typically found on the product packaging or the manufacturer's official website.