

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gorilla babo](#) /
- › [Gorilla babo Universal Remote Control User Manual for Denon Audio/Video Receivers \(Models AVR-1613, AVR-1713, AVR-X1000, RC-1182\)](#)

Gorilla babo RC-1182

Gorilla babo Universal Remote Control User Manual

For Denon Audio/Video Receivers: AVR-1613, AVR-1713, AVR-X1000, RC-1182, RC-1168

1. INTRODUCTION

This manual provides instructions for the Gorilla babo Universal Remote Control, designed to operate various Denon Audio/Video Receivers. This remote is a direct replacement and typically requires no programming for compatible models. It offers essential functions for controlling your audio/video experience.

Compatible Denon Receiver Models:

- AVR1613 / AVR-1613
- AVR1713 / AVR-1713
- AVR-X1000 / AVRX1000
- RC-1182
- RC-1168

2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, high temperatures, or humidity.
- Avoid dropping the remote or subjecting it to strong impacts.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.

3. PACKAGE CONTENTS

- 1 x Gorilla babo Universal Remote Control
- *Note: Batteries are not included and must be purchased separately.*

4. SETUP

4.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Battery compartment on the back of the remote control.

4.2 Initial Use

This universal remote is designed for direct use with compatible Denon Audio/Video Receivers without requiring any complex programming. Once batteries are installed, point the remote towards your receiver and begin using it. If certain functions do not work as expected, refer to the Troubleshooting section.

5. OPERATING INSTRUCTIONS

The Gorilla babo Universal Remote Control features a standard layout for easy navigation and control of your Denon Audio/Video Receiver. Below is an overview of the main buttons and their functions:



Figure 2: Front view of the remote control with labeled buttons.

| Button | Function |
|--|--|
| POWER | Turns the Denon receiver On/Off. |
| SOURCE SELECT (CBL/SAT, DVD, Blu-ray, GAME, AUX, TV AUDIO, FM, NETWORK, USB, CD, PHONO, INTERNET RADIO) | Selects the input source for the receiver. |
| VOLUME (+/-) | Adjusts the master volume level. |
| MUTE | Mutes or unmutes the audio output. |
| NAVIGATION (Up, Down, Left, Right, ENTER) | Navigates through menus and confirms selections. |
| BACK | Returns to the previous menu or screen. |
| SETUP | Accesses the receiver's setup menu. |

| Button | Function |
|--|--|
| INFO | Displays information about the current source or settings. |
| OPTION | Accesses context-sensitive options. |
| SOUND MODE (MOVIE, MUSIC, GAME, PURE) | Selects various sound modes for different content types. |
| QUICK SELECT (1, 2, 3, 4) | Quickly switches to pre-assigned favorite settings or sources. |
| PLAYBACK CONTROLS (Play, Pause, Stop, Fast Forward, Rewind, Skip) | Controls media playback for connected devices. |
| TUNE (+/-) | Adjusts radio tuning. |
| CHANNEL (+/-) | Changes channels (if applicable to the selected source). |
| ECO | Activates or deactivates Eco mode for power saving. |
| SLEEP | Sets a sleep timer for the receiver. |
| ZONE SELECT (MAIN, ZONE2) | Selects the audio zone to control. |

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.

6.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

7. TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are correctly installed and are not depleted. Replace with fresh AAA batteries if necessary.
- **Remote not controlling the receiver:** Verify that the remote is pointed directly at the receiver's IR sensor. Ensure there are no obstructions between the remote and the receiver.

- **Some functions not working:** While this remote is designed for direct use, minor variations between receiver models might occur. Ensure your receiver model is listed as compatible.
- **Interference:** Strong light sources or other infrared devices can sometimes interfere with the remote's signal. Try operating the remote in a different environment.

8. SPECIFICATIONS

- **Brand:** Gorilla babo
- **Model:** RC-1182 (Compatible with various Denon models)
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 5.51 x 1.57 x 0.79 inches
- **Item Weight:** 2.89 ounces
- **Max Number of Supported Devices:** 1 (specific Denon receiver)

9. WARRANTY INFORMATION

This Gorilla babo Universal Remote Control comes with a **60-day warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims.

10. SUPPORT

If you have any questions, encounter issues, or require further assistance with your Gorilla babo Universal Remote Control, please contact our customer support team via email. Refer to your purchase documentation for the specific email address.