

[manuals.plus](#) /

› [HUAYU](#) /

› [HUAYU Universal Replacement Remote Control for Samsung TVs](#)

HUAYU Universal Replacement Remote

HUAYU Universal Replacement Remote Control for Samsung TVs

Instruction Manual

INTRODUCTION

This manual provides instructions for the HUAYU Universal Replacement Remote Control, designed to operate various Samsung LED and LCD television models. This remote control offers a convenient and direct replacement solution without requiring complex setup procedures.



Image: Angled view of the HUAYU universal replacement remote control, showcasing its design.

Key Features:

- Direct replacement functionality for original Samsung TV remotes.
- Operable distance of more than 8 meters.
- No programming or setup required; ready to use with compatible Samsung TVs.
- Ergonomic design for comfortable handling.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating where to insert two AAA batteries.

Note: Always replace both batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the remote control will not be used for an extended period.

OPERATING INSTRUCTIONS

This remote control is designed for immediate use with compatible Samsung LED/LCD TVs without any prior programming.

1. Basic Operation

1. Point the remote control directly at your Samsung TV.
2. Press the **POWER** button to turn the TV on or off.
3. Use the **VOL +** and **VOL -** buttons to adjust the volume.
4. Use the **CH +** and **CH -** buttons to change channels.
5. Press the **MUTE** button to silence the TV audio.
6. Use the directional pad (up, down, left, right) and the **ENTER** button (often labeled with a square or circle in the center) to navigate menus.



Image: Overview of the remote control buttons, including power, volume, channel, and navigation controls.

2. Compatibility

This remote control is compatible with a wide range of Samsung LED/LCD TV models. Some of the compatible model series include, but are not limited to:

- AA59-00316B, AA59-00325, AA59-00326, AA59-00327
- BN59-00529A, 00163CB, AA59-00382B, AA59-00385A
- AA59-00403E, AA59-00424A, BN59-00531A, 00104C
- AA59-00508A, AA59-00421A, BN59-00366, BN59-00399A
- BN59-00530A, 00135A, BN59-00457A, BN59-00464
- BN59-00477A, BN59-00489, BN59-00590A, 00191A
- BN59-00517A, BN59-00596A, BN59-00602A, BN59-00613A
- BN59-00676A, 00131B, BN59-00567A, BN59-00681A
- BN59-00701A, BN59-00702A, BN59-00705A, 00199C
- BN59-00611A, BN59-00862A, BN59-00863A, BN59-00864A
- BN59-00938A, 10099C, BN59-00687A, BN59-00940A
- BN59-01014A, BN59-01018A, BN59-01039A, 00104P/N/H
- BN59-00859A, BN59-00943A, MD59-00350A, MD59-00242A
- BN59-000624A, 00104K/M, BN59-00937A, BN59-00604A
- BN59-00559A, BN59-00610A, BN59-00686A, 00104B
- BN59-01040A, BN59-00847A, BN59-00901A, BN59-00609A
- BN59-00685A/B, 00104, ABN59-00960A, 00104D/F/J
- 00128C/D/P, BN59-00412, BN59-00683A, 00116A
- BN59-00603A, 00121A/B, 00198D/F/G, N59-01012A
- BN59-00865A, 10095T/X, BN500434A/C, BP59-00084
- BN59-00555A, BN59-00684A/B, BN59-00752A, 00124A
- BN59-00516A, BN59-00886A, BN59-01005A, BN59-01069A

- BN59-00507A, BN59-00683A, BN59-00557A, AA59-00357
- AA59-00401B/C, AA59-00484A, AA59-00483A, BN59-00706A
- BN59-00429A, AA59-00465A, AA59-00466A, AA59-00370A/B
- AA59-00397A/B, BN59-00539A, BN59-00512A, BN59-00857A
- BN59-00888A, BN59-01078A, BN59-01015A, BN59-01052A

If your Samsung TV model is not listed, the remote may still be compatible. Please test the remote directly with your TV.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Handling:** Avoid dropping the remote control or exposing it to moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has short range.	Weak batteries; Obstruction between remote and TV; Remote sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight to the TV's IR sensor. Remove any obstructions.
Specific buttons not responding.	Remote may not be fully compatible with all functions of your specific TV model.	While designed for broad compatibility, some advanced or unique TV functions might not be supported. Verify basic functions first.

SPECIFICATIONS

- **Brand:** HUAYU
- **Color:** Black
- **Power Requirement:** DC 3V (2 x AAA batteries)
- **Operable Distance:** More than 8 meters
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Samsung LED/LCD Televisions
- **Product Dimensions:** 5.91 x 1.57 x 0.59 inches (approx. 15 x 4 x 1.5 cm)
- **Item Weight:** 2.82 ounces (approx. 80 grams)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or manufacturer's official website.

Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the [HUAYU Store on Amazon](#).