

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Chicco](#) /

› Chicco QuickSeat Hook-On Chair Instruction Manual

**Chicco 06079666210070**

# Chicco QuickSeat Hook-On Chair Instruction Manual

Model: 06079666210070 | Brand: Chicco

## INTRODUCTION

---

This manual provides essential information for the safe and proper use, assembly, and maintenance of your Chicco QuickSeat Hook-On Chair. Please read all instructions carefully before use and retain this manual for future reference. The Chicco QuickSeat is a portable hook-on high chair designed to simplify mealtimes at home or while traveling. It features a secure attachment mechanism for dining tables and a snap-on tray for an easy-to-clean eating surface. The chair is designed for children 6 months or older who are able to sit unaided, up to a maximum weight of 37 pounds.

## SAFETY INFORMATION

---

**WARNING: Failure to follow these warnings and instructions could result in serious injury or death.**

- Always secure the child in the restraint system.
- Never leave child unattended.
- This product is intended for children 6 months or older who are able to sit unaided, up to 37 pounds (16.7 kg).
- Use only on tables 0.75 to 1.5 inches (1.9 cm to 3.8 cm) thick.
- Do not use on glass tabletops, loose tabletops, table leaves, card tables, single pedestal tables, or with tablecloths or placemats.
- Ensure the chair is securely attached to the table before placing a child in it.
- Always use the safety harness to secure your child.
- Do not use if any part of the chair is broken, torn, or missing.

## SETUP AND ASSEMBLY

---

Follow these steps to properly set up your Chicco QuickSeat Hook-On Chair:

1. **Unfolding the Chair:** Unfold the chair until it locks into its open position. Ensure all components are fully extended and locked.
2. **Attaching to a Table:** Position the chair so the arms hook over the edge of a suitable table. The table must be between 0.75 and 1.5 inches thick. Avoid glass, loose, or single pedestal tables.

3. **Securing the Chair:** Locate the one-pull tightener mechanism, typically at the rear or underside of the chair. Pull the strap firmly to cinch the QuickSeat securely in place against the table. Verify that the chair is stable and cannot be easily dislodged.



Image: The Chicco QuickSeat Hook-On Chair securely attached to a table, ready for use.



Image: A hand demonstrating the use of the one-pull tightener to secure the chair to the table.

4. **Attaching the Tray:** If desired, snap the provided tray onto the chair's arms. Ensure it clicks firmly into place.

## OPERATING INSTRUCTIONS

---

Once the chair is securely attached to the table:

1. **Placing the Child:** Carefully place your child into the seat.
2. **Securing the Harness:** Fasten the safety harness around your child. Adjust the straps to ensure a snug and secure fit. The harness should be tight enough so that only one finger can fit between the strap and your child.
3. **Using the Tray:** The snap-on tray provides a convenient eating surface. Place food and drinks on the tray.



Image: A toddler seated comfortably in the QuickSeat, demonstrating proper use during mealtime.



Image: An adult placing the snap-on tray with a bowl and cup in front of a child in the QuickSeat.

**Folding for Travel:** The chair folds compactly for transport. Release the tightening mechanism and fold the chair. It features a built-in carry strap for convenience.



Image: A person carrying the Chicco QuickSeat in its folded, portable configuration using the built-in carry strap.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and hygiene of your QuickSeat Hook-On Chair.

- **Seat Cover:** The seat cover is removable for cleaning. Unsnap the cover from the frame. Care instructions specify spot cleaning only. Refer to the product label for detailed washing instructions.
- **Tray:** The snap-on tray can be easily removed and wiped clean with a damp cloth and mild soap.
- **Frame:** Wipe the metal and plastic components of the frame with a damp cloth. Do not use abrasive cleaners.
- **Storage:** When not in use, store the chair in a clean, dry place, away from direct sunlight.



Image: Hands demonstrating the removal of the seat cover for cleaning.

## TROUBLESHOOTING

---

If you encounter issues with your Chicco QuickSeat, consider the following:

- **Chair Not Securing Firmly:**
  - Ensure the table thickness is within the specified range (0.75 to 1.5 inches).
  - Check that the table skirt (if present) does not exceed 5.25 inches.
  - Verify that the table surface is not glass, loose, or a single pedestal type.
  - Pull the one-pull tightener strap with sufficient force until the chair is stable.
- **Child Not Comfortable/Secure:**
  - Re-adjust the safety harness to ensure a snug fit. The harness should not be too loose or too tight.
  - Ensure the child meets the age and weight requirements (6 months+, able to sit unaided, up to 37 lbs).
- **Difficulty Folding/Unfolding:**
  - Check for any obstructions in the folding mechanism.

- Ensure all locking mechanisms are disengaged before attempting to fold.

## SPECIFICATIONS

---

Feature	Detail
Model Number	06079666210070
Product Dimensions	24 x 14.5 x 11 inches
Item Weight	9.5 pounds
Maximum Weight Recommendation	37 Pounds (16.7 kg)
Minimum Age Recommendation	6 months (child must be able to sit unaided)
Material Type	Alloy Steel, Plastic, Polyester
Care Instructions	Spot clean only
Table Thickness Compatibility	0.75 to 1.5 inches (1.9 cm to 3.8 cm)
Table Skirt Compatibility	Up to 5.25 inches (13.3 cm)
Portability	Yes
Safety Features	Safety Harness

## WARRANTY AND SUPPORT

---

For warranty information or customer support, please refer to the official Chicco website or contact their customer service department. Keep your proof of purchase for any warranty claims.

For further assistance, visit the [Chicco Store on Amazon](#).